


Inverter air conditioner Service Manual

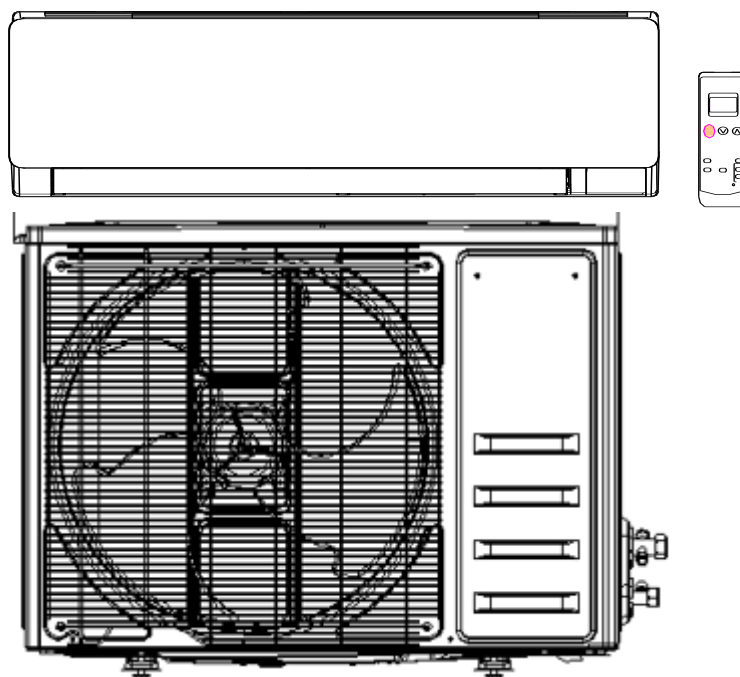

Models

ZMSB-09HVT110-USR2
ZMSB-12HVT110-USR2
ZMSB-09HVT-USR2
ZMSB-12HVT-USR2
ZMSB-18HVT-USR2
ZMSB-24HVT-USR2
ZMSB-36HVT-USR2

CONTENTS

Part I Technical Information.....	3
1. Important Notice.....	3
2. Specifications.....	4
2.1 Specifications sheet.....	4
2.2 Operation characteristic curve.....	6
2.3 Refrigeration cycle diagram.....	9
3. The Production Dimensions.....	10
4. Electric Diagram.....	11
4.1 Wiring Diagram.....	11
5. Electronic Controller Introduction.....	13
5.1 Remote controller.....	13
5.2 Electronic controller.....	15
5.3 WIFI introduction.....	22
 PART II Installation and Maintenance.....	 23
1. Notes for installation and maintenance.....	23
2. Installation.....	32
2.1 Dimension diagram for Installation.....	32
2.2 Inspection of Accessories	33
2.3 Position of IDU/ODU.....	34
2.4 Electric Connection.....	34
2.5 The IDU Installation.....	34
2.6 The ODU Installation.....	37
2.7 Vacuum and Gas leakage test.....	38
2.8 Final Test.....	38
3. Maintenance.....	39
3.1 Failure code.....	39
3.2 Trouble shooting.....	41
4. Exploded view and parts list.....	63
5. Disassembly IDU & ODU	79
 APPENDIX	
1. The comparison table of CELSIUS-FAHRENHEIT temperature.....	88
2. The Pipe length and Gas charging.....	88
3. Pipe Flaring.....	89
4. The Thermistor Temperature Characteristics.....	90

Part I Technical Information

1. Important Notice

This service manual is intended for use by individuals possessing adequate backgrounds of electrical, electronic and mechanical experience. Any attempt to repair the appliance may result in personal injury and property damage. The manufacturer or seller cannot be responsible for the interpretation of this information, nor can it assume any liability in connection with its use.

The information, specifications and parameter are subject to change due to technical modification or improvement without any prior notice. The accurate specifications are presented on the nameplate label.

How to order spare parts

To have your order filled promptly and correctly, please furnish the following information:

1. Model No. with Indoor or Outdoor
2. No. in the Explosion View
3. Part Name
4. The quantity you ordered

2. Specifications

2.1 Specifications sheet

Model			ZMSB-09HVT-USR2	ZMSB-09HVT110-USR2	ZMSB-12HVT-USR2	ZMSB-12HVT110-USR2
Type			Cooling & heating	Cooling & heating	Cooling & heating	Cooling & heating
Control type			remote	remote	remote	remote
Power supply			230V~/60Hz/1P	115V~/60Hz/1P	230V~/60Hz/1P	115V~/60Hz/1P
Rated cooling capacity		Btu/h	9000	9000	12000	12000
Rated Heating capacity		Btu/h	10000	10000	12600	12600
EER		W/W.h	3.51	3.37	3.37	3.22
COP		W/W	3.81	3.81	3.41	3.41
Rated current	Cooling	A	3.4	6.8	4.8	9.5
	Heating	A	3.4	6.8	4.7	9.3
Rated input	Cooling	W	750	750	1050	1050
	Heating	W	750	750	1030	1030
Moisture removal		Liters/h	1.1	1.1	1.6	1.6
Indoor noise level at cooling	Turbe	dB(A)	43	42	45	45
	High	dB(A)	41	40	42	42
	Med.	dB(A)	36	35	35	35
	Low	dB(A)	31	30	30	30
	Mute	dB(A)	29	28	28	28
Outdoor noise level		dB(A)	54	54	55	55
Connecting Pipe	Gas	Inches	3/8"	3/8"	3/8"	3/8"
	Liquid	Inches	1/4"	1/4"	1/4"	1/4"
Connecting Wiring	Size x Core		4×16AWG	4×16AWG	4×16AWG	4×16AWG
Suitable area		m ² (ft ³)	Up to 400	Up to 400	Up to 550	Up to 550
Net dimensions (W x H x D)	Indoor	Inches	34.84x14.40x10.94	34.84x14.40x10.94	34.84x14.40x10.94	34.84x14.40x10.94
	Outdoor	Inches	32.20x12.80x21.18	32.20x12.80x21.18	32.20x12.80x21.18	32.20x12.80x21.18
Net weight	Indoor	Kg	9	9	9	9
	Outdoor	Kg	22.2	23.3	25	25
Packing dimensions (W x H x D)	Indoor	Inches	34.84x14.40x10.94	34.84x14.40x10.94	34.84x14.40x10.94	34.84x14.40x10.94
	Outdoor	Inches	32.20x12.80x21.18	32.20x12.80x21.18	32.20x12.80x21.18	32.20x12.80x21.18
Gross weight	Indoor	Kg	12	12	12	12
	Outdoor	Kg	24.2	25.3	27	27
Motor Brand			Broad-Ocean	Weilling	Weilling	Weilling
Motor Model(Factory Code)			22001-000267(AC)	22001-000307(AC)	22001-000409(DC)	22001-000409(DC)
Motor Power Output		W	23W	20W	25W	25W
Motor Rotating Speed RPM	Cooling	RPM	1300/1200/1100/1000/900/850/800	1300/1200/1100/1000/900/850/800	1320/1200/1100/1030/950/880/800	1320/1200/1100/1030/950/880/800
	Heating	RPM	1200/1150/1050/980/920/850/800	1200/1150/1050/980/920/850/800	1320/1200/1100/980/920/850/800	1320/1200/1100/980/920/850/800
	Dry	RPM	1300/1200/1100/1000/900/850/800	1300/1200/1100/1000/900/850/800	1320/1200/1100/1030/950/880/800	1320/1200/1100/1030/950/880/800
	Sleep	RPM	/	/	/	/
Indoor fan type			Cross Flow	Cross Flow	Cross Flow	Cross Flow
Indoor air circulation/Hi		ft ³ /h	20480	20480	18360	18360
Tube Type			Triangular inner groove			
Compressor Brand			GMCC	GMCC	GMCC	GMCC
Compressor Model			KSN98D31UEZW31	KSN98D31UEZW31	KSK103D33UEZC3	KSK103D33UEZC3
Motor Brand			Weilling	Weilling	Weilling	Weilling
Motor Model			22001-000555	22001-000555	22001-000555	22001-000555
Motor Power Output W		W	33W	33W	33W	33W
Motor Rotating Speed RPM		RPM	950/950/850/750/750	950/950/850/750/750	900/850/810/650/510	900/850/810/650/510
Outdoor fan type			Axial fan	Axial fan	Axial fan	Axial fan
Diameter of Fan		mm (Inch)	Φ410×130	Φ410×130	Φ384×134	Φ384×134
Fin Type			Fenestrated fin	Fenestrated fin	Fenestrated fin	Fenestrated fin

ZERO Air Conditioner Service Manual


Tube Type		Triangular inner groove			
Tube Diameter OD	mm(Inches)	7	7	7	7
Controlling Refrigerant		R454B/660g	R454B/660g	R454B/860g	R454B/860g


Model			ZMSB-18HVT-USR2	ZMSB-24HVT-USR2	ZMSB-36HVT-USR2
Type			Cooling & heating	Cooling & heating	Cooling & heating
Control type			remote	remote	remote
Power supply			230V~/60Hz/1P	230V~/60Hz/1P	230V~/60Hz/1P
Rated cooling capacity		Btu/h	18000	24000	36000
Rated Heating capacity		Btu/h	18000	24000	36000
EER		W/W.h	3.2	3.2	2.6
COP		W/W	3.41	3.41	3.15
Rated current	Cooling	A	7.7	9.4	17.4
	Heating	A	6.9	8.2	15.2
Rated input	Cooling	W	1700	2080	3850
	Heating	W	1530	1800	3350
Moisture removal		Liters/h	2.2	2.6	3
Indoor noise level at cooling	Turbe	dB(A)	49	52	52
	High	dB(A)	47	50	49
	Med.	dB(A)	42	44	43
	Low	dB(A)	37	38	38
	Mute	dB(A)	32	36	36
Outdoor noise level		dB(A)	55	58	63
Connecting Pipe	Gas	Inches	3/8"	1/2"	5/8"
	Liquid	Inches	1/4"	1/4"	1/4"
Connecting Wiring	Size x Core		4×16AWG	4×16AWG	4×16AWG
Suitable area		m ² (ft ²)	Up to 1000	Up to 1500	Up to 2500
Net dimensions (W x H x D)	Indoor	Inches	39.76x12.40x8.66	46.93x14.17x10.23	46.93x14.17x10.23
	Outdoor	Inches	30.70x13.74x23.81	33.26x14.96x27.51	35.83x16.54x31.50
Net weight	Indoor	Kg	12.5	16.5	18.0
	Outdoor	Kg	31.7	40	48
Packing dimensions (W x H x D)	Indoor	Inches	43.15x15.35x11.81	49.80x17.13x13.27	49.80x17.13x13.27
	Outdoor	Inches	35.03x15.15x25.2	37.40x16.53x29.53	40.47x18.70x33.86
Gross weight	Indoor	Kg	15.3	19.5	22
	Outdoor	Kg	34.7	43	52
Motor Brand			Broad-Ocean	Broad-Ocean	Broad-Ocean
Motor Model(Factory Code)			22001-000240 (DC)	22001-000240 (DC)	22001-000240 (DC)
Motor Power Output		W	45	45	45
Motor Rotating Speed RPM	Cooling	RPM	1270/1200/1100/1000/920/820/750	1250/1150/1050/970/870/800/750	1300/1200/1100/1000/900/820/750
	Heating	RPM	1270/1200/1100/1000/920/820/750	1250/1150/1050/970/870/800/750	1300/1200/1100/1000/900/820/750
	Dry	RPM	1270/1200/1100/1000/920/820/750	1250/1150/1050/970/870/800/750	1300/1200/1100/1000/900/820/750
	Sleep	RPM	/	/	/
Indoor fan type			Cross Flow	Cross Flow	Cross Flow
Indoor air circulation/Hi		ft ³ /h	35300	51200	52900
Tube Type			Triangular inner groove		
Compressor Brand			GMCC	SANYO	GMCC
Compressor Model			KSN140D53UFZ3	C-6RZ180H1AAF	KTM240D43UMT
Motor Brand			Weilling	Broad-Ocean	Broad-Ocean
Motor Model			22001-000493	22001-000147	22001-000147
Motor Power Output W		W	33	85	85
Motor Rotating Speed RPM		RPM	930/870/650/510/450	930/830/690/610/550	930/930/850/750/600
Outdoor fan type			Axial fan	Axial fan	Axial fan

Diameter of Fan	mm (Inch)	φ 442×146	φ 496×129	φ 550×124
Fin Type		Fenestrated fin	Fenestrated fin	Fenestrated fin
Tube Type		Triangular inner groove		
Tube Diameter OD	mm(Inches)	7	7	7
Controlling Refrigerant		R454B/1000g	R454B/1280g	R454B/1580g

2.2 Operation characteristic curve

2.2.1 The relation curve of CAPACITY-AMBIENT TEMPERATURE

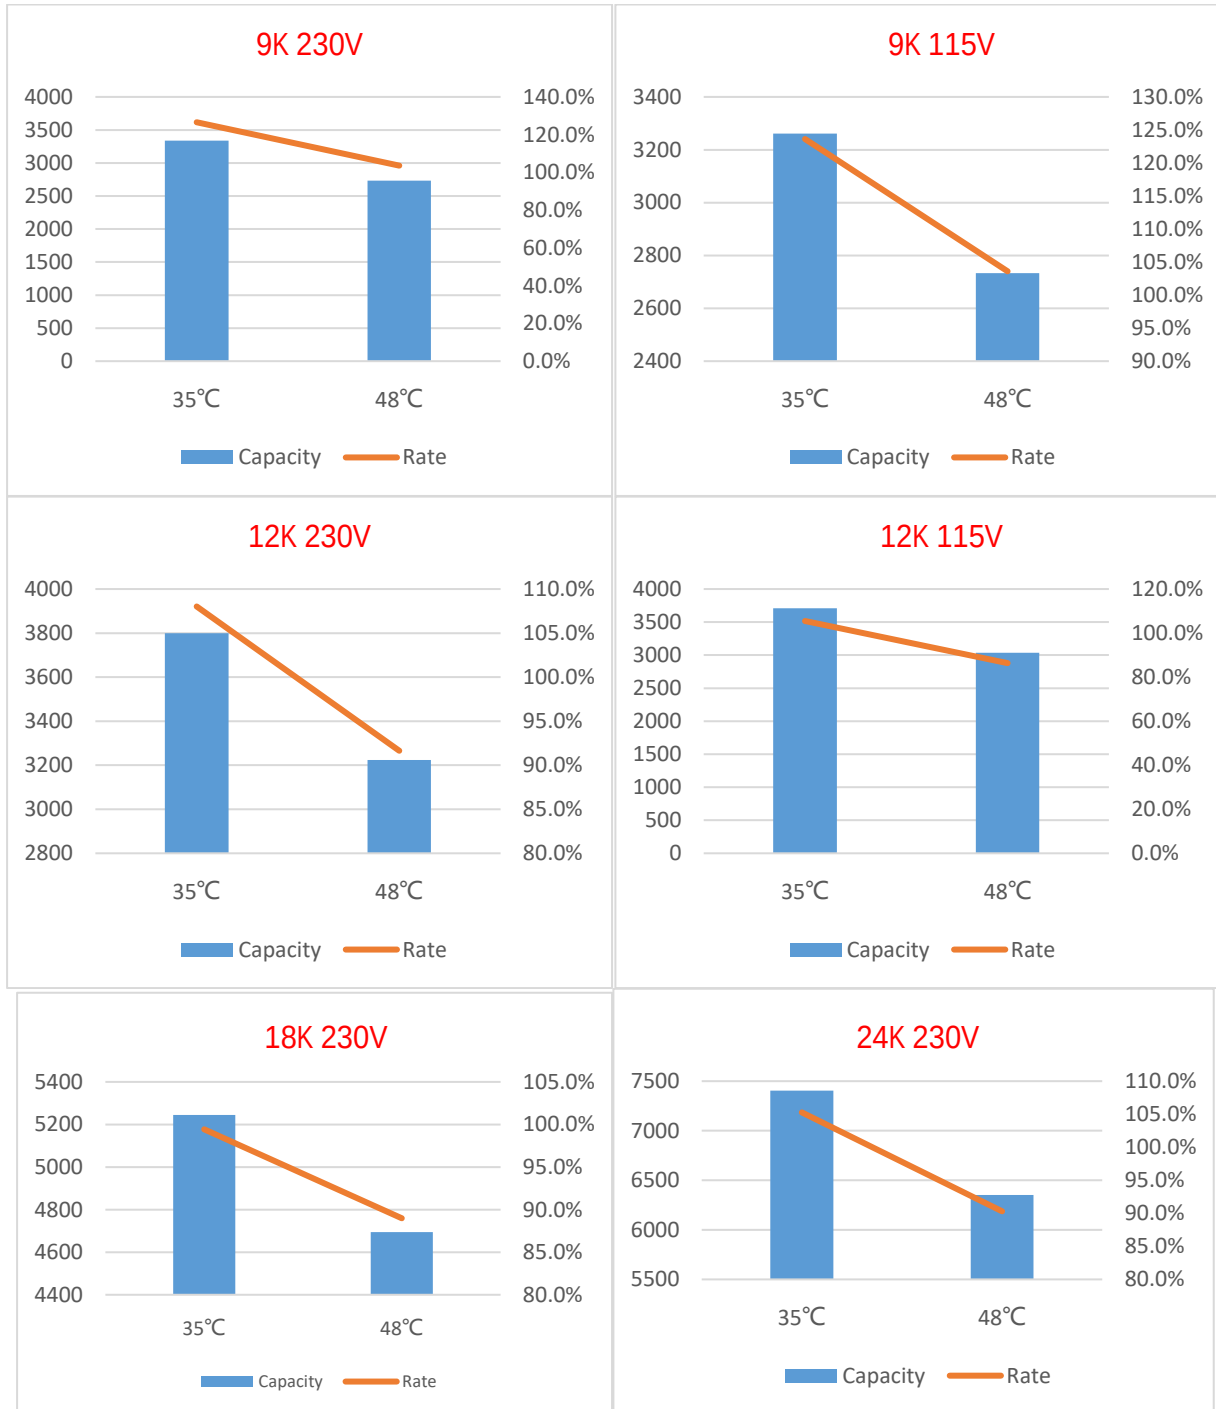

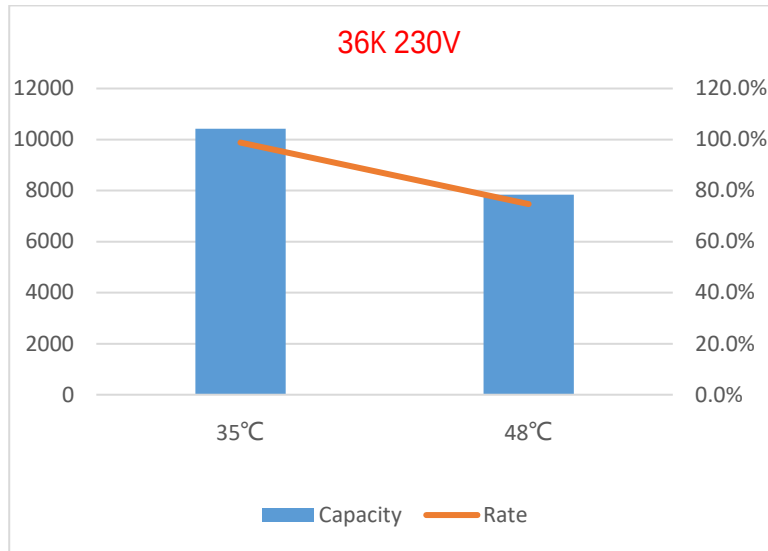

2.2.2 The relation curve of PRESSURE-TEMPERATURE

	9K 230V			9K 115V			12K 230V			12K 115V		
	f(Hz)	HP (MPa/p si)	LP (MPa/p si)	f(Hz)	HP (MPa/p si)	LP (MPa/p si)	f(Hz)	HP (MPa/p si)	LP (MPa/p si)	f(Hz)	HP (MPa/p si)	LP (MPa/p si)
35°C (95°F) Cooling	70	2.34/33 9.39	0.94/13 6.34	70	2.39/34 6.64	1.05/15 2.29	78	1.97/28 5.72	1.06/15 3.74	78	1.92/27 8.47	1.13/16 3.89
43°C (109.4 °F) Cooling	62	2.92/42 3.51	1.02/14 7.94	62	3.00/43 5.11	1.08/15 6.64	68	2.37/34 3.74	1.00/14 5.04	66	2.35/34 0.84	1.01/14 6.49
48°C (118.4 °F) Cooling	54	3.32/48 1.53	1.29/18 7.1	54	3.32/48 1.52	1.29/18 7.1	54	2.73/39 5.95	1.21/17 5.49	56	2.67/38 7.25	1.19/17 2.59
7°C (44.6°F) Heating	78	2.12/30 7.48	0.61/88 .47	78	2.12/30 7.48	0.61/88 .47	78	2.36/34 2.29	0.67/97 .18	78	2.36/34 2.29	0.67/97 .18
	18K 230V			24K 230V			36K 230V					
	f(Hz)	HP (MPa/psi)	LP (MPa/psi)	f(Hz)	HP (MPa/psi)	LP (MPa/psi)	f(Hz)	HP (MPa/psi)	LP (MPa/psi)			
35°C (95°F) Cooling	84	2.86/414 .81	0.687/99 .64	84	2.93/424 .96	0.787/11 4.1	96	2.717/39 4.07	0.686/99 .49			
43°C (109.4 °F) Cooling	82	3.163/45 8.75	0.71/102 .98	82	3.404/49 3.71	0.803/11 6.46	84	3.173/46 0.2	0.765/11 0.95			
48°C (118.4 °F) Cooling	74	3.524/51 1.11	0.878/12 7.34	68	3.748/54 3.6	0.979/14 1.99	68	3.448/50 0.09	0.956/13 8.65			
7°C (44.6°F) Heating	92	2.56/371 .3	0.537/77 .89	96	2.63/381 .45	0.564/81 .80	90	2.514/36 4.62	0.557/80 .78			

Note:

The test under condition:

Rated Cooling: IDU dry bulb 27°C/ Wet bulb 19°C, ODU dry bulb 35°C/ wet bulb 24°C; The connection pipes: 5m.

Rated Heating: IDU dry bulb 20°C/ Wet bulb 15°C, ODU dry bulb 7°C/ wet bulb 6°C; The connection pipes: 5m.

Important:

The above data under test standard in the lab, the HP (High pressure) and LP (Low pressure) will vary along with the variation of operation frequency, ambient temperature and/or fan speed.

2.2.3 The relation curve of NOISE-OPERATION FREQUENCY




2.2.4 The range of normal working environment temperature

	9K 230V		9K 115V		12K 230V		12K 115V	
Mode	Room temperature	Outdoor temperature	Room temperature	Room temperature	Room temperature	Room temperature	Room temperature	Room temperature
Cooling operating	17°C~32 (62.6°F~89.6°F)	-15°C~53°C (5°F~127.4°F)	17°C~32°C (62.6°F~89.6°F)	-15°C~53°C (5°F~127.4°F)	17°C~32°C (62.6°F~89.6°F)	-15°C~53°C (5°F~127.4°F)	17°C~32°C (62.6°F~89.6°F)	-15°C~53°C (5°F~127.4°F)
Heating operating	0°C~30°C (32°F~86°F)	-20°C~30°C (-4°F~86°F)	0°C~30°C (32°F~86°F)	-20°C~30°C (-4°F~86°F)	0°C~30°C (32°F~86°F)	-20°C~30°C (-4°F~86°F)	0°C~30°C (32°F~86°F)	-20°C~30°C (-4°F~86°F)
Drying operating	10°C~32°C (50°F~89.6°F)	0°C~50°C (32°F~122°F)	10°C~32°C (50°F~89.6°F)	0°C~50°C (32°F~122°F)	10°C~32°C (50°F~89.6°F)	0°C~50°C (32°F~122°F)	10°C~32°C (50°F~89.6°F)	0°C~50°C (32°F~122°F)
	18K 230V		24K 230V		36K 230V			
Mode	Room temperature	Outdoor temperature	Room temperature	Outdoor temperature	Room temperature	Outdoor temperature		
Cooling operating	17°C~32 (62.6°F~89.6°F)	-15°C~53°C (5°F~127.4°F)	17°C~32 (62.6°F~89.6°F)	-15°C~53°C (5°F~127.4°F)	17°C~32 (62.6°F~89.6°F)	-15°C~53°C (5°F~127.4°F)		
Heating operating	0°C~30°C (32°F~86°F)	-20°C~30°C (-4°F~86°F)	0°C~30°C (32°F~86°F)	-20°C~30°C (-4°F~86°F)	0°C~30°C (32°F~86°F)	-20°C~30°C (-4°F~86°F)		
Drying operating	10°C~32°C (50°F~89.6°F)	0°C~50°C (32°F~122°F)	10°C~32°C (50°F~89.6°F)	0°C~50°C (32°F~122°F)	10°C~32°C (50°F~89.6°F)	0°C~50°C (32°F~122°F)		


2.3 Refrigeration cycle diagram

All Models:

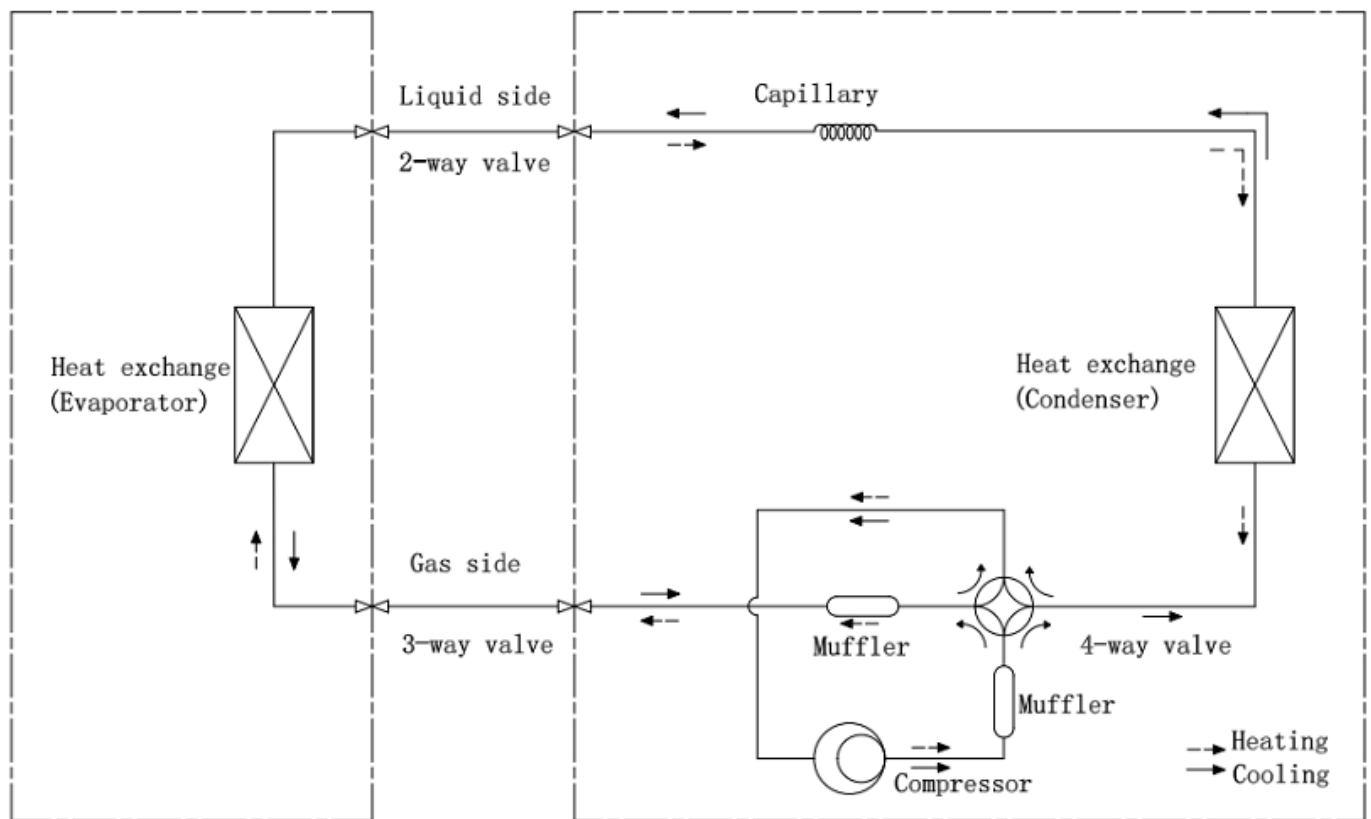


3. Product Dimensions

Indoor Unit:

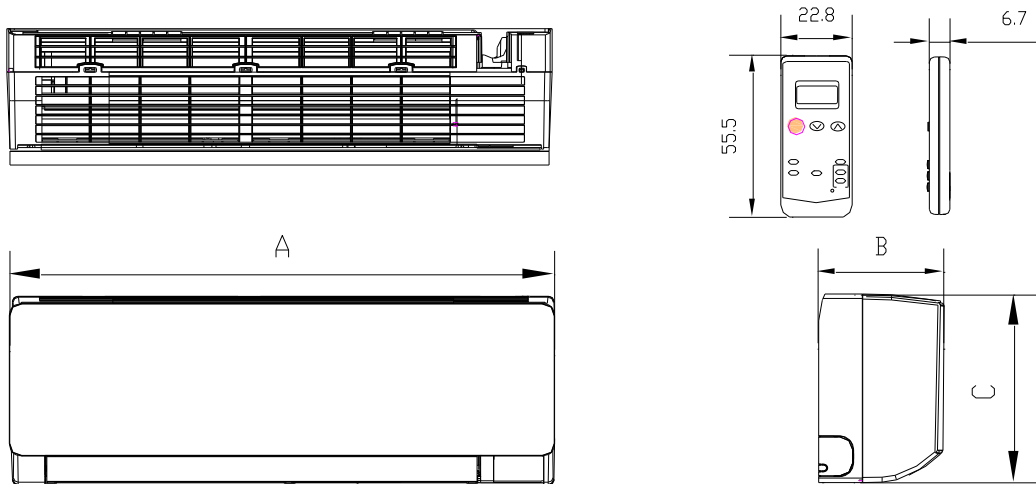

Outdoor Unit:

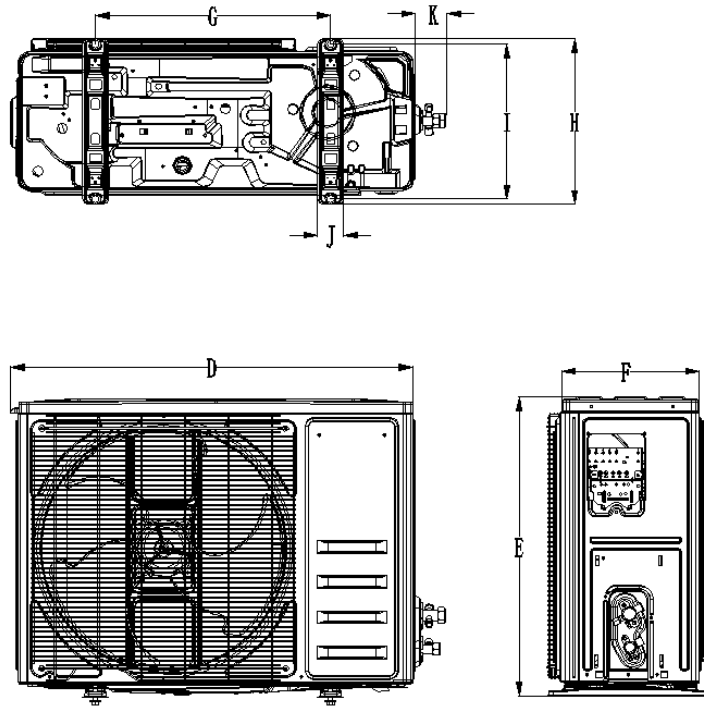


Model	Indoor unit(mm/inch)			Outdoor unit(mm/inch)							
	A	B	C	D	E	F	G	H	I	J	K
9K 230V	811/31.93	292/11.50	202/7.95	712	498	234	415	290.4	263	48	55.9
9K 115V	811/31.93	292/11.50	202/7.95	712	498	234	415	290.4	263	48	55.9
12K 230V	811/31.93	292/11.50	202/7.95	712	498	234	415	290.4	263	48	55.9
12K 115V	811/31.93	292/11.50	202/7.95	712	498	234	415	290.4	263	48	55.9
18K 230V	1010/39.76	315/12.4	220/8.66	780	602	288	516	349	314	54	57
24K 230V	1186/46.69	340/13.39	268/10.55	845	699	326	586	375	348	55	55.9
36K 230V	1186/46.69	340/13.39	268/10.55	910	803	359	607	421	390	60	63

4 Electric Diagram


4.1 Wiring diagram

INDOOR UNIT:

MODEL: 9-18K

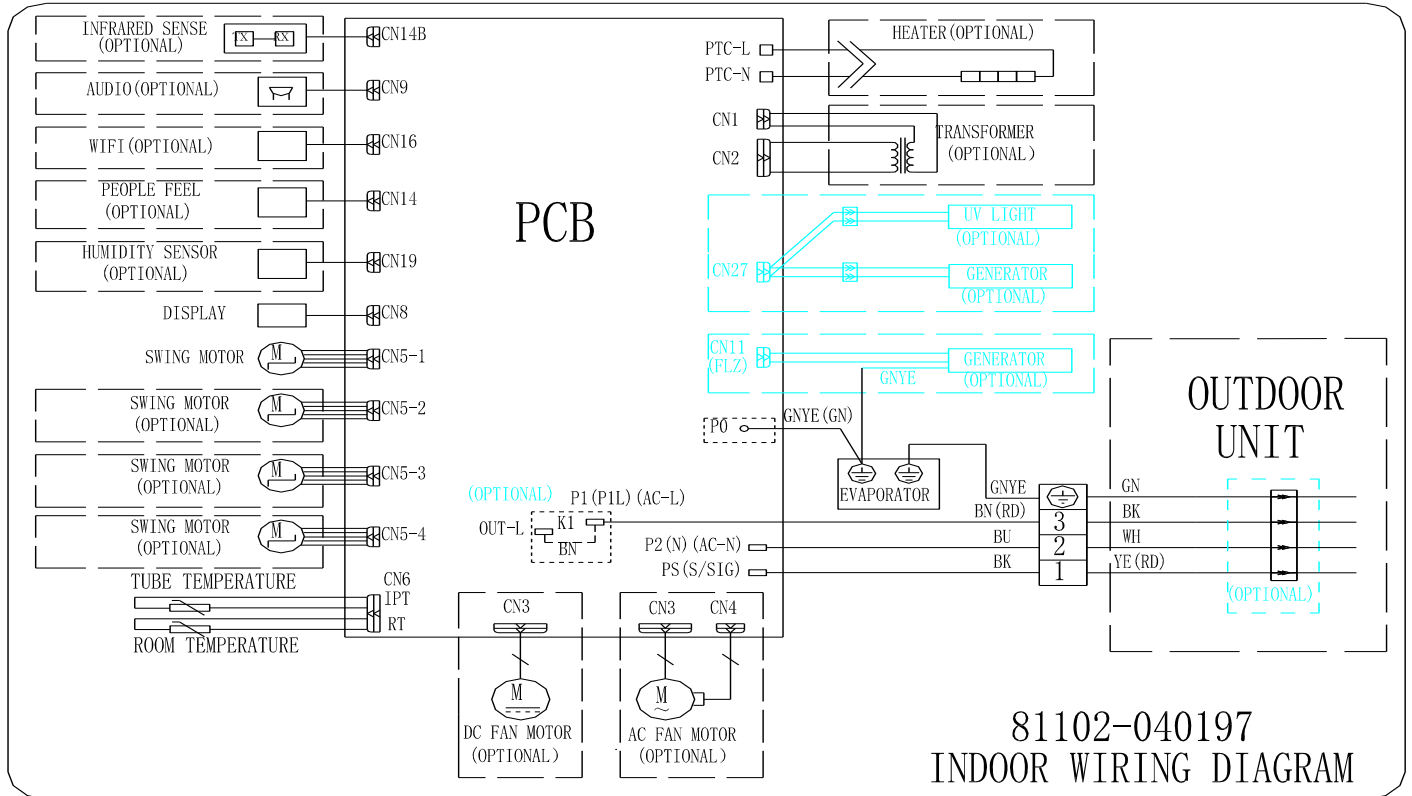


MODEL: 24-36K

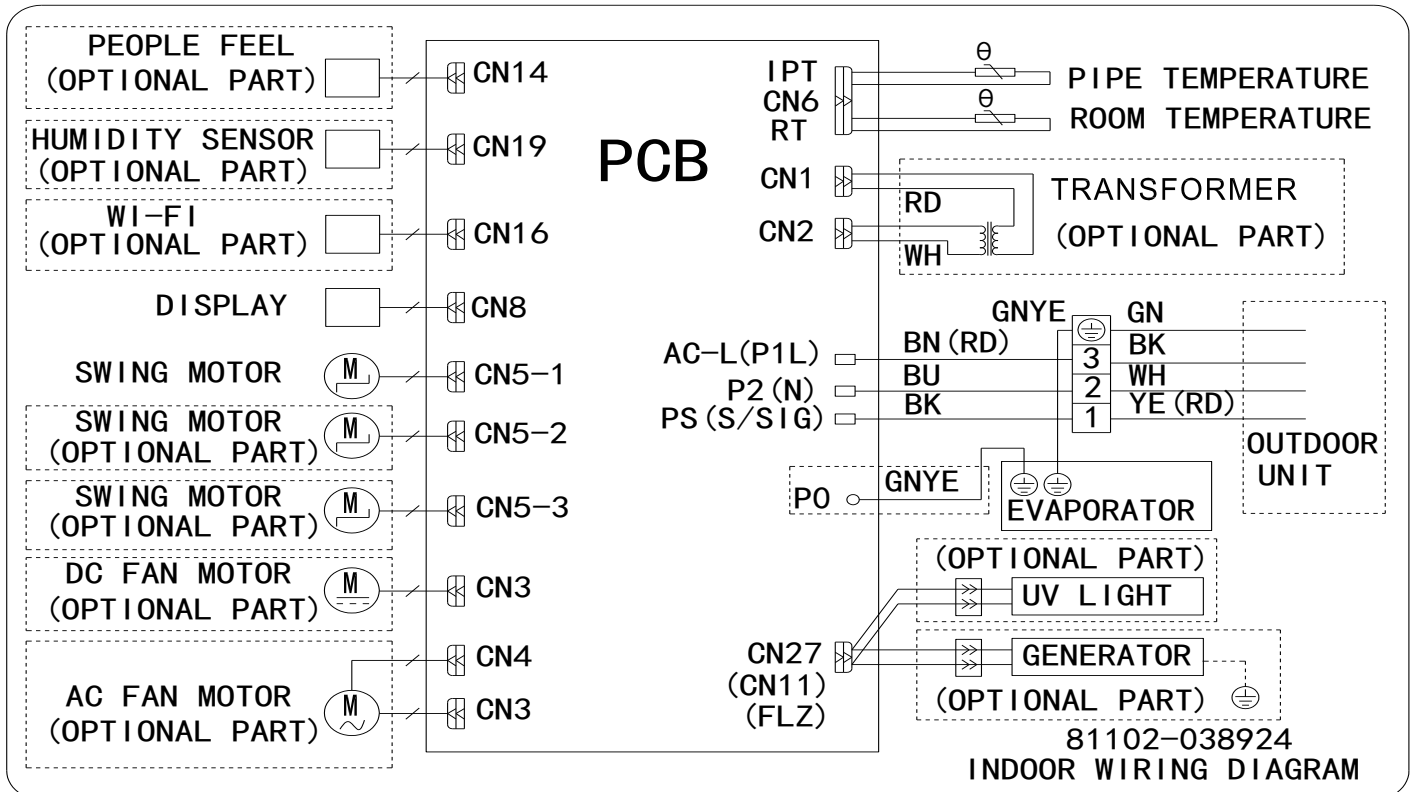


OUTDOOR UNIT:

MODEL: 9K 115V, 12K 115V

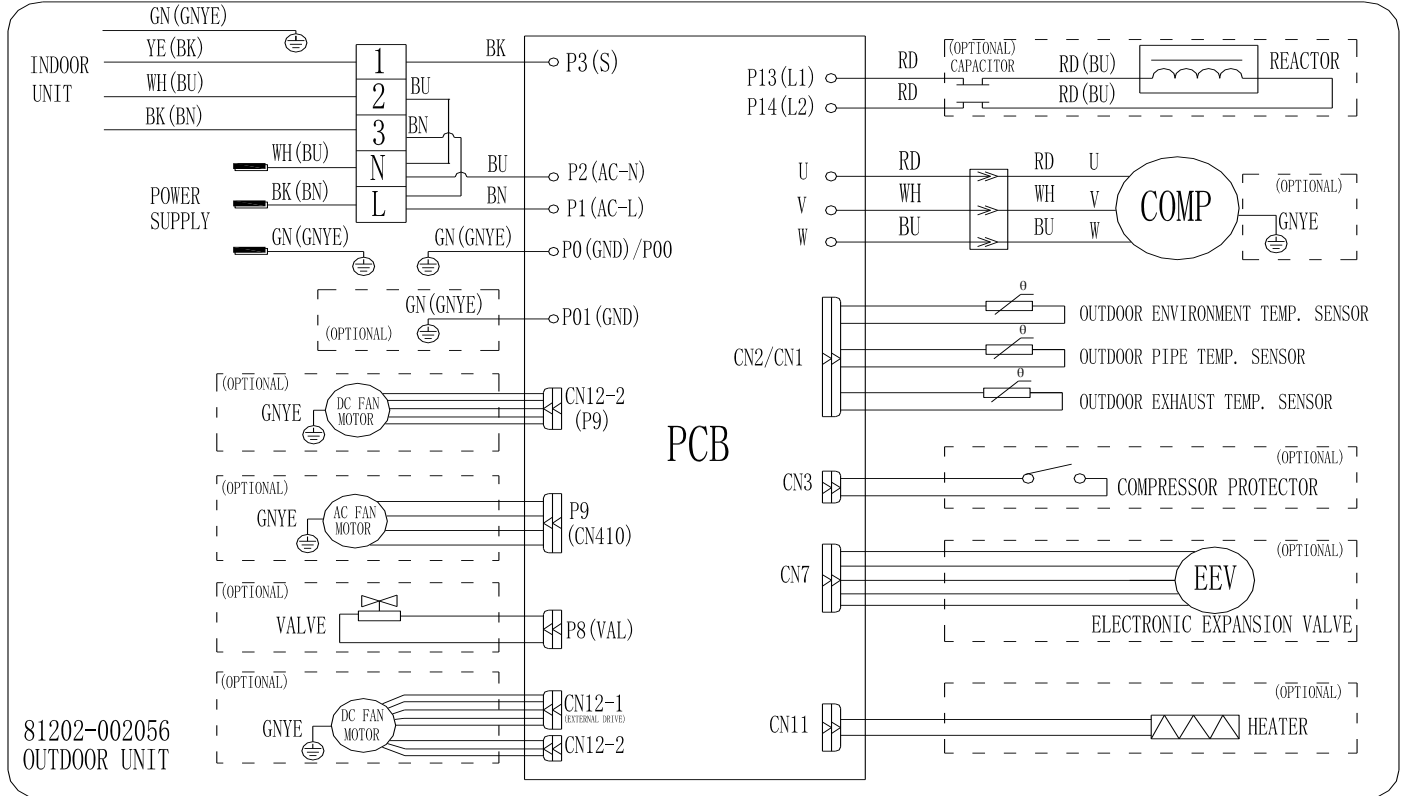

MODEL: 9-36K 230V

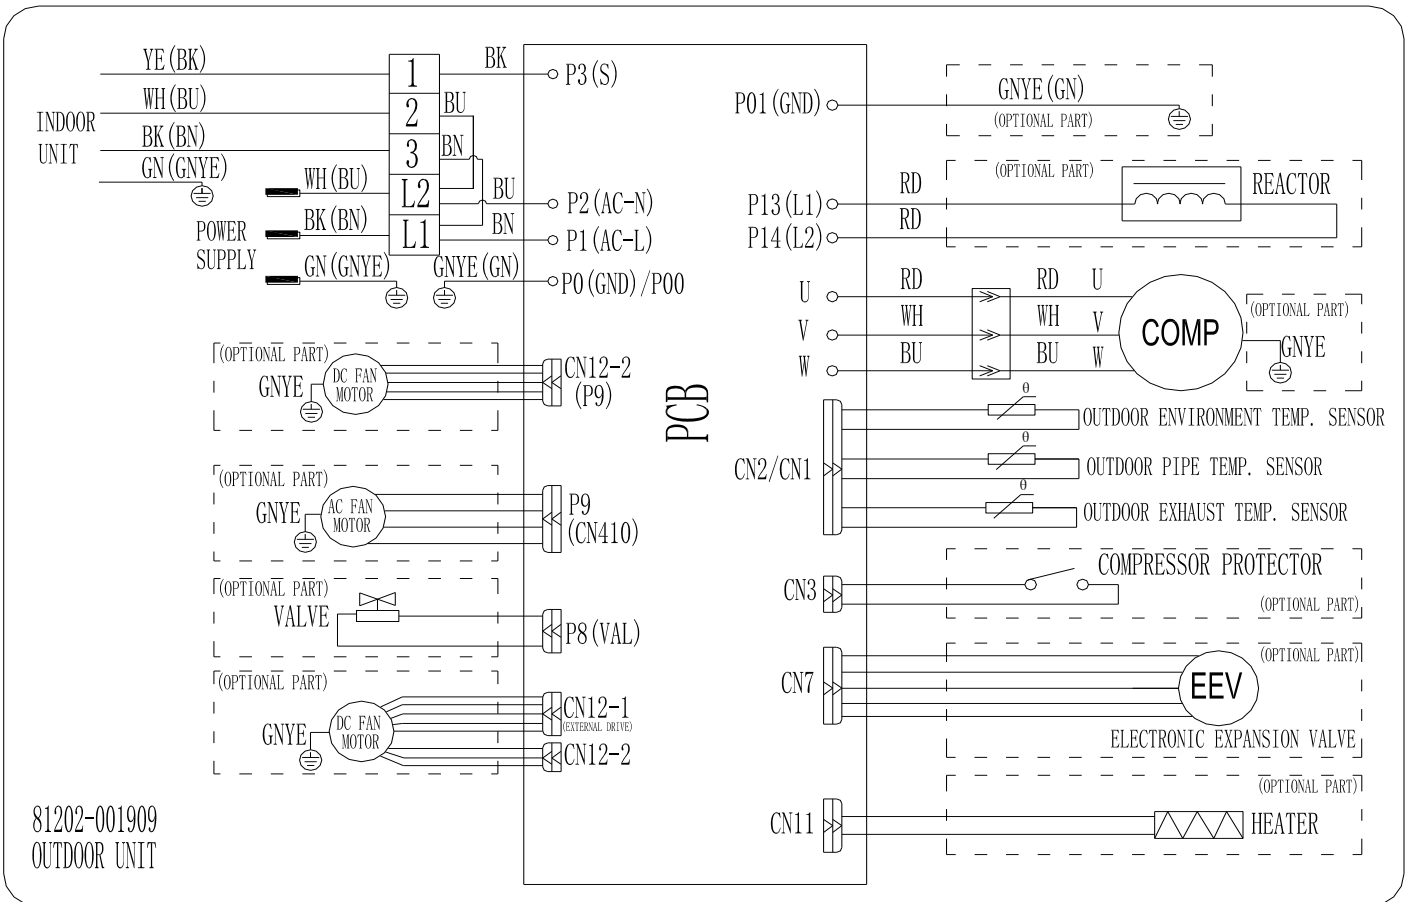

1 — [Power Button] 6 — [OPTION]

2 — [Down Arrow] 7 — [Up Arrow]

3 — [ECO] 8 — [TURBO]

4 — [MODE] 9 — [FAN]

5 — [Speaker Icon] 10 — [Fan Speed Icon]

To switch the conditioner on and off.

Decrease the temperature or time by 1 unit.

Press this button to activate/deactivate the ECO function.

To select the mode of operation.

To activate the swing of horizontal flap(up/down) or deactivate it.

To select the option function.

Increase the temperature or time by 1 unit.

Press this button to activate/deactivate the Super function which enables the unit to reach the preset temperature in the shortest time.

To select the fan speed of auto/mute/low/mid-low/mid/mid-high/high/turbo , cycle as below.

To activate the swing of vertical flap(left/right) or deactivate it.

⚠ The shape and position of switches and indicators may be different according to the model, but their function is the same. The actual shape and position shall prevail.

Remote controller DISPLAY

Meaning of symbols on the liquid crystal display.

1	 or  or AUTO	FEEL mode indicator
2	 or COOL	COOLING indicator
3	 or  or DRY	DEHUMIDIFYING indicator
4	 or FAN	FAN ONLY OPERATION indicator
5	 or HEAT	HEATING indicator
6	 or 	SIGNAL RECEPTION indicator
7	 or  or  or 	TIMER OFF indicator
8	 or  or  or  or 	TIMER ON indicator
9	AUTO  or  or (FLASH)  or (FLASH)  or 	AUTO FAN indicator
10	 or  or  or  or  or 	LOW FAN SPEED indicator
11	 or  or  or  or  or 	MIDDLE FAN SPEED indicator
12	 or  or  or  or  or 	HIGH FAN SPEED indicator
13	QUIET  or  or  or 	SLEEP indicator
14		COMFORTABLE SLEEP indicator (optional)
15		FEEL indicator(optional)
16	 or  or  or 	FLAP SWING indicator
17		FLAP and Deflectors SWING indicator
18	 or TURBO or POWERFUL	SUPER indicator
19	 or  or 	HEALTHY indicator
20	 or ECO or 	ECO indicator
21		ANTI-MILDEW indicator
22	 or  or 	BATTERY indicator
23		CLOCK indicator
24		Mute indicator
25	GEN	GEN function indicator
26		Comfortable cooling airflow indicator
27		Comfortable heating airflow indicator
28	         	Optional functions indicator

5.2 Electronic controller

RT-----Room Temperature.

IPT-----Indoor Pipe (Coil) Temperature.

ST-----Indoor Setting Temperature.

OPT---Outdoor Pipe Temperature.

OAT---Outdoor Ambient Temperature.

ODT---Outdoor Discharge Temperature.

CRT---Compensated Room Temperature.

IDU--- Indoor unit

ODU---Outdoor unit.

Note: When AC finishing installation, because of the air ventilation and the distance of temperature test sensor to different location of the house, the temperature for IDU PCB control need compensation.

1) . **Cooling mode.** CRT=RT;

2) . **Heating mode.** CRT=RT-3°C(37.4°F)-----Split AC.

5.2.1 Auto mode

5.2.1.1. The set temperature can be adjusted from 16-31°C(60.8-87.8°F) on auto mode, the operation of fan speed and vane position according to preset.

5.2.1.2. Operation

When unit set to auto mode, it will work on cooling, heating or fan mode totally according to Δt --the temperature difference between RT and ST shown as table:

Mode	$\Delta t = RT - ST$
COOLING	$\Delta t > 1^{\circ}\text{C}(1.8^{\circ}\text{F})$
FAN	$-1^{\circ}\text{C}(-1.8^{\circ}\text{F}) \leq \Delta t \leq 1^{\circ}\text{C}(1.8^{\circ}\text{F})$
HEATING	$\Delta t < -1^{\circ}\text{C}(-1.8^{\circ}\text{F})$

5.2.2 Cooling mode

5.2.2.1. Temperature control :16-31°C(60.8-87.8°F), and the operation of fan speed and vane position according to preset.

5.2.2.2. Compressor and process control

1). When $RT - ST \geq 0.5^{\circ}\text{C}$ (32.9°F), the compressor starts up working, AC operates as customer preset;

2). When

a. $RT - ST \leq -3^{\circ}\text{C}$ (-37.4°F) and compressor keeps 2 min continuously; or

b. $RT - ST \leq -2^{\circ}\text{C}$ (-35.6°F) and compressor works in lowest frequency for 5 min continuously; or

c. $RT - ST \leq -1^{\circ}\text{C}$ (-33.8°F) and compressor works in lowest frequency for 10 min continuously,

The compressor stops operation.

3). The compressor frequency control: Based on relation of RT & ST, and the changing speed of RT.

4). The compressor will also stop working while unit:

a. switched off.

b. under protection.

c. changed to fan mode.

5). Under normal operation, the compressor can be stopped by program only working after 7 min once it starts up.

6). In the process of unit operation, once the compressor ceased, it should be 3 min delay for the next procedure.

5.2.2.3. ODU Fan motor control:

1). While unit:

a. switched off.

b. under protection.

c. to the set temperature.

After compressor ceased, the fan motor stops working according to the temperature of OPT and OAT, the max delay for the motor should be less than 160s.

2). When switch on unit on cooling mode, ODU fan motor will delay 5s after compressor starts up.

5.2.2.4. When ODU failure or stops for protection, IDU works as preset.

5.2.2.5. Anti-frosting protection

Control the unit operation frequency and the frequency changing rate to achieve anti-frosting protection.

1). Frequency Slowly Increasing(FSI):

a. If $6^{\circ}\text{C} \leq \text{IPT} < 7^{\circ}\text{C}$ (44.6°F), the frequency increasing rate is 1Hz/60s, slowly increasing operation speed.

b. When $\text{IPT} \geq 7^{\circ}\text{C}$ (44.6°F), unit quit from protection.

2). Frequency Limitation:

If $5^{\circ}\text{C} \leq \text{IPT} < 6^{\circ}\text{C}$ (42.8°F), the compressor frequency forbidden to increase

3). Normal Frequency Decreasing (NFD):

If 3°C (37.4°F) $\leq \text{IPT} < 4^{\circ}\text{C}$ (39.2°F), the frequency decreasing rate is 8Hz/90s, until to the lower frequency limit.


4). Fast Frequency Decreasing (FFD):

If 2°C (35.6°F) $\leq \text{IPT} < 3^{\circ}\text{C}$ (37.4°F), the frequency decreasing rate is 16Hz/90s, until to the lower frequency limit.

5). Unit stop:

a. When $\text{IPT} < 1^{\circ}\text{C}$ (33.8°F) for 3min continuously, unit stops working for anti-defrosting protection.

b. While $\text{IPT} > 6^{\circ}\text{C}$ (42.8°F), and the unit stopped for 3 min already, can the unit recover to operation.

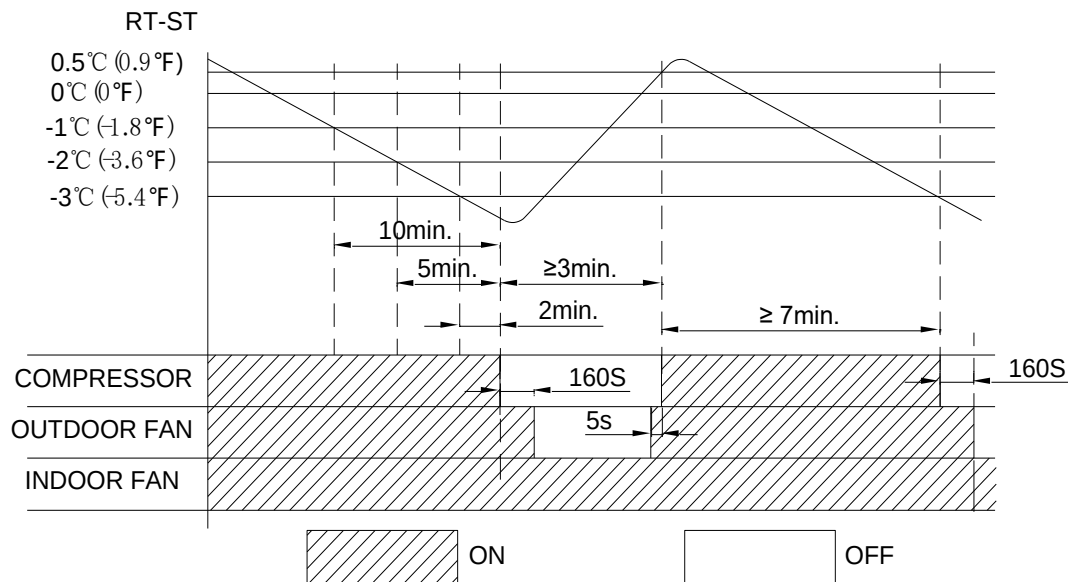

5.2.3 Dry mode

5.2.3.1. Temperature control: 16~31°C (60.8-87.8°F).

Fan speed: low

Vane blade position: as customer preset

5.2.3.2. When ODU failure or stops for protection, IDU works as preset.

5.2.3.3. Failure protection: as cooling mode.

5.2.3.4. Energy saving and sleep mode: Invalid.

5.2.3.5. ODU Fan motor stops working.

5.2.4 Heating mode

5.2.4.1. Temperature control: 16-31°C (60.8-87.8°F).

5.2.4.2. Compressor and process control.

1). When $\text{ST-CRT} \geq 0.5^{\circ}\text{C}$ (0.9°F), the compressor starts up working, AC operates as customer preset;;

2). When

a. $\text{ST-CRT} \leq -3^{\circ}\text{C}$ (-5.4°F) and compressor keeps 2 min continuously; or

- b. $ST-CRT \leq -2^{\circ}C (-3.6^{\circ}F)$ and compressor works in lowest frequency for 5 min continuously; or
- c. $RT-CRT \leq -1^{\circ}C (-1.8^{\circ}F)$ and compressor works in lowest frequency for 10 min continuously,
The compressor stops operation.
- 3). The compressor frequency control: Based on relation of RT & ST, and the changing speed of RT.
- 4). The compressor will also stop working while unit:
 - a. switched off.
 - b. under protection.
 - c. changed to fan mode.
- 5). Under normal operation, the compressor can be stopped by program only working after 7 min once it starts up.
- 6). In the process of unit operation, once the compressor ceased, it should be 3 min delay for the next procedure.

5.2.4.3. IDU time delay: When compressor stops or unit switches off while in heating mode, IDU fan motor will work for a few seconds more to prevent overheat.

5.2.4.4. ODU Fan motor control:

1). While unit:


- a. To be switched off
- b. Under protection.
- c. To the set temperature

After compressor ceased, the fan motor stops working according to the temperature of OPT and OAT, the max delay for the motor should be less than 160s.

- 2). When switch on unit on heating mode, ODU fan motor will delay 5s after compressor starts up
- 3). in the process of defrosting, the fan motor will stop operation 48s delay after compressor stopped.
- 4). defrosting finish, the compressor stops operation, the fan motor will start working simultaneously.

5.2.4.5. 4-way valve control

- 1). On Cooling/Dry/Fan mode, 4-way valve: **OFF**, when unit switched on heating mode, 4-way valve: **ON**.
- 2). When heating mode switched off, or changed from heating to other modes, the 4-way valve will be **OFF** 2 min delay after the compressor stops working.
- 3). Unit stops working caused by any kind of protection, the 4-way valve will be **OFF** 4 min delay.
- 4). In the process of defrosting, 4-way valve will be **OFF** 43s delay after compressor stopped.
- 5). When defrosting finish, the compressor stops operation, 4-way valve will be **ON** after 43s delay.

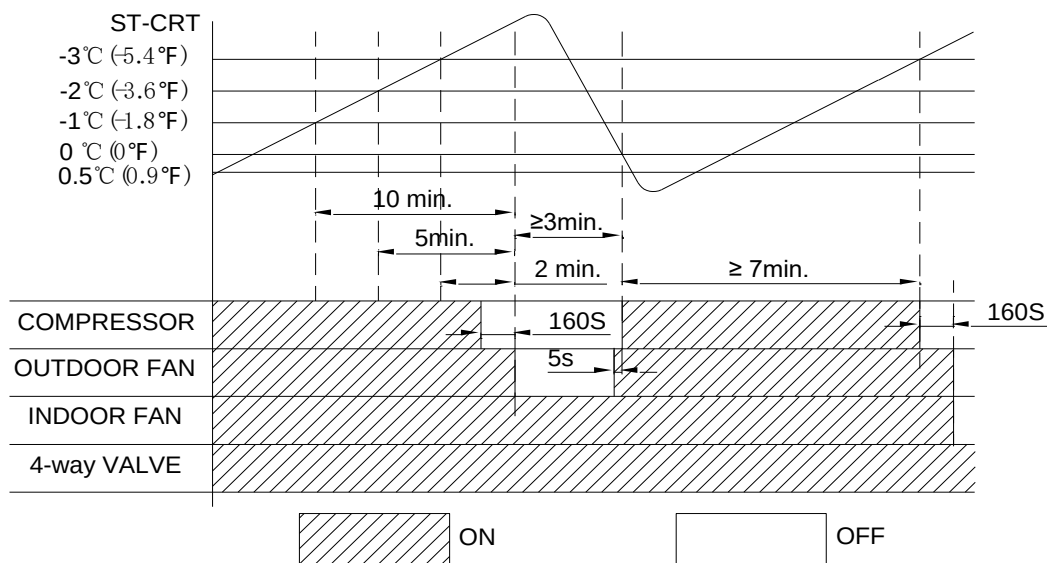

5.2.4.6. Defrost

Note: t_1 : compressor continuous works time.

t_2 : AC unit operation first time going to defrost circle.

t_3 : compressor accumulated working time (when $OPT \leq 3^{\circ}C (37.4^{\circ}F)$ unit starts to count the time for t_3).


When AC unit working to:

- a. $t_1 \geq t_2$, or
- b. $t_3 \leq t_1 < t_2$.

and also the temperature (related to OAT & OPT) tested 3 min continuously meets for defrosting.

- 1) **Defrosting start up:** Compressor stops working, and re-starts to working after 50s delay;
- 2) Conditions for quitting defrosting
 - a. After defrosting 60s, and $OAT \geq 12^\circ\text{C}$ (53.6°F); or
 - b. $OAT < -5^\circ\text{C}$ (-41°F), and $OPT \geq 8^\circ\text{C}$ (46.4°F) for 80s continuously; or
 - c. The defrosting for 10 min.

When AC meet any of condition a, b or c, defrosting finish.

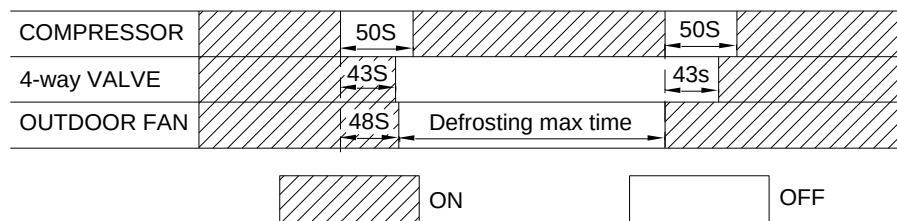

- 3) **Defrosting end off:** Compressor stops working, and re-starts to working after 50s delay;

5.2.4.7. Cold air prevention:

This function intends to prevent cold air from being discharged when the heating operation starts up

- 1). IDU fan motor cold air prevention

① .When $RT < 24^\circ\text{C}$ (75.2°F):

- a. If $ITP > 31^\circ\text{C}$ (87.8°F) while compressor works for 5 min, fan motor will work according to preset fan speed.
- b. If $ITP \leq 31^\circ\text{C}$ (87.8°F), fan motor stops working while compressor operation within 2min, if $ITP \geq 27^\circ\text{C}$ (89.6°F), fan motor works in low speed 2 min, then change to preset speed.

② When $RT \geq 24^\circ\text{C}$ (75.2°F):

- a. Within 2 min after compressor start up working, once $ITP > 27^\circ\text{C}$ (89.6°F), fan motor will change to preset speed.
- b. After compressor starts working 2 min, fan motor change to preset speed directly.

- 2). Vane blade operation for cold air prevention.

- a. If the vane works on status of **non-swing**: While IPT increase to a special degree, the vane blade will change the position to:

- ① Default angle; or
- ② Previous position; or
- ③ Customer preset.

The above operation can work one time only, when compressor stops working, the unit will once again inspect the function.

- b. If the vane works on **swing**: When IDU quits from cold air prevention, vane operate as preset.

6.2.4.8. " 8°C (46.4°F)" Heating

When function effective, it will make sure the room temperature not lower than 8°C (46.4°F), unit works on heating mode.


5.2.5 Fan mode

- 5.2.5.1. The temperature setting: $16 \sim 31^\circ\text{C}$ ($60.8 \sim 87.8^\circ\text{F}$),

Fan speed and vane position: as preset. The function for remote controller 58E only.

- 5.2.5.2. For above function, when unit preset to be auto fan mode, the fan motor will change its operation speed based on the temperature difference of ambient and preset temperature.

5.2.5.3. ODU always OFF.

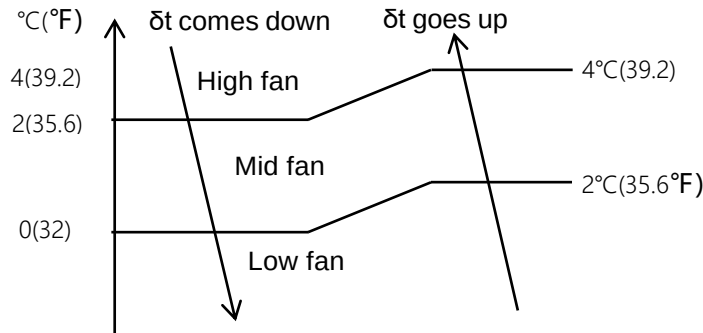

5.2.6 Timer

The unit has times control, when the unit meet the timer preset, it will be switched on or off automatically.

5.2.6.1 TIMER ON

- 1). TIMER ON can be set only when the air conditioner is OFF.
- 2). Press TIMER on the remote control ONCE to enter time setting.
- 3). Press “▲” or “▼” to set the time for unit to start working.
- 4). Set other function as MODE, FAN SPEED, SWING etc.
- 5). Press TIMER ONCE AGAIN to confirm the TIME ON setting

5.2.6.2 TIMER OFF

- 1). TIMER OFF can be set only when the air conditioner is ON.
- 2). Press TIMER on the remote control ONCE to enter time setting.
- 3). Press “▲” or “▼” to set the time for unit to stop working.
- 4). Press TIMER ONCE AGAIN to confirm the TIME OFF setting

Note: In case of no selection for the time setting within 10s, the timer function will be OFF automatically.

5.2.7 Sleeping mode

While AC works in sleeping mode, the light of POWER SUPPLY and SLEEP always ON, and the temperature display will be OFF after 15s.

In this mode, the AC unit works according to the SLEEP CURVE as designed.

Sleeping mode the unit can work 10 hours continuously, after that it will quit from this mode and work as previous presetting.

5.2.8 Emergency switch

When the EMERGENCY switch is pressed one time, COOLING mode is selected and if it pressed again within 3s, HEATING mode selected, while press once again, the unit will be switched off.

When the remote controller out of function, batteries lost power, for example, the EMERGENCY button in the front of indoor unit can be used for function test.

NOTE: Do not press the EMERGENCY switch during normal operation.

5.2.9 Auto-restart function

While air conditioner is operating in one mode, all of its operation data, such as working mode, preset temperature etc. would be memorized into IC by main PCB. If power supply cut off due to reasons and recover again, the AUTO-RESTART function will set synchronously and the air conditioner would work at the same mode as before.

Note: The function setting:

Within 3 min while power on unit, set the unit on cooling mode, set temperature 30°C(86°F), and mid fan speed, press the ECO button 10 times within 8s, the AUTO-RESTART will be activated.

5.2.10 Protection

5.2.10.1 Overload protection

5.2.10.1.1. Overload protection for Cooling or Dry mode

1). if:

- a. $OPT \geq 62^{\circ}\text{C}(143.6^{\circ}\text{F})$, unit stops working for overload protection.
- b. $OPT < 55^{\circ}\text{C}(131^{\circ}\text{F})$, after compressor stopped for 3 min, can the unit be started to operate.

2). When $OPT \geq 55^{\circ}\text{C}(131^{\circ}\text{F})$, the compressor will be frequency limited/reduced for over load protection.

3). If unit have 6 times of over load stop-working protection continuously, this protection can't be recovered unless press ON/OFF button, and unit will show failure code.

In the process of operation, once the compressor runs continuously more than 6 min, the counter of over load stop-working protection will be reset to zero and start a new counting process.

The failure and times for protection will eliminate immediately once the unit to be switched off, on fan mode or changed to be heating mode from others.

Note: If the defective failure can't be recovered, the failure can't eliminate even if operation mode changed.

5.2.10.1.2. Overload protection for Heating mode

1). If:

- a. $IPT \geq 62^{\circ}\text{C}(143.6^{\circ}\text{F})$, unit stops working for overload protection.
- b. $IPT < 55^{\circ}\text{C}(131^{\circ}\text{F})$, after compressor stopped for 3 min, can the unit be started to operate.

2). When $IPT \geq 55^{\circ}\text{C}(131^{\circ}\text{F})$, the compressor will be frequency limited/reduced for over load protection.

3). If unit have 6 times of over load stop-working protection continuously, this protection can't be recovered unless press ON/OFF button, and unit will show failure code.

In the process of operation, once the compressor runs continuously more than 6 min, the counter of over load stop-working protection will be reset to zero and start a new counting process.

The failure and times for protection will eliminate immediately once the unit to be switched off, on fan mode or changed to be heating mode from others.

Note: If the defective failure can't be recovered, the failure can't eliminate even if operation mode changed.

5.2.10.2 The compressor discharge temperature protection

5.2.10.2.1. If $ODT \geq 115^{\circ}\text{C}(239^{\circ}\text{F})$, unit stops working for over temperature protection;

While $ODT < 100^{\circ}\text{C}(212^{\circ}\text{F})$, & after compressor stopped for 3 min, the unit can be started to operate.

5.2.10.2.2. If $ODT \geq 100^{\circ}\text{C}(212^{\circ}\text{F})$, the compressor will be frequency limited/reduced for over temperature protection.

5.2.10.2.3. If unit have 6 times of **discharge over temperature stop working protection** continuously, this protection can't be recovered unless press ON/OFF button, and unit will show failure code.

In the process of operation, once the compressor runs continuously more than 6 min, the counter of discharge over temperature stop working protection will be reset to zero and start a new counting process.

The failure and times for protection will eliminate immediately once the unit to be switched off, or changed to fan mode.

Note: If the defective failure can't be recovered, the failure can't eliminate even if operation mode changed.

5.2.10.3 The current protection

5.2.10.3.1. If the unit A/C working current more than **Limited current (I_{LC})**, the compressor will be frequency limited / reduced for over current protection.

5.2.10.3.2. When unit A/C working current more than **Stopped current (I_{SC})**, AC unit stops working. Only when the compressor stops for 3 min can the unit be recovered operation.

5.2.10.3.3. If unit have 6 times of **over current stop-working protection** continuously, this protection can't be recovered unless press ON/OFF button.

In the process of unit operation, once the compressor runs continuously more than 6 min, the counter of stop-working protection will be reset to zero and re-start a new counting process.

Note: For different models, I_{LC} and I_{SC} have different programmed value.

5.2.10.4 IPM overheating protection

5.2.10.4.1. When IPM temperature $T_{IPM} \geq 87^{\circ}\text{C}$ (188.6°F), the compressor will be frequency limited / reduced for IPM over temperature protection.

5.2.10.4.2. When $T_{IPM} \geq 95^{\circ}\text{C}$ (203°F), the AC unit stops working for AC system protection.

If $T_{IPM} < 87^{\circ}\text{C}$ (188.6°F), and after compressor stopped for 3 min, can the unit be started to operate.

5.2.10.4.3. If unit have 6 times of **IPM over temperature stop working protection** continuously, this protection can't be recovered unless press ON/OFF button, and unit will show failure code.

In the process of operation, once the compressor runs continuously more than 6 min, the counter of over load stop working protection will be reset to zero and re-start a new counting process.

The failure and times for protection will eliminate immediately once the unit to be switched off, or changed to fan mode.

Note: If the defective failure can't be recovered, the failure can't eliminate even if operation mode changed.

5.2.11 Complementary

5.2.11.1 Energy saving (ECO)

Function effective on Cooling and Heating mode only.

On cooling mode, the set temperature range from 26°C (78.8°F) to 31°C (87.8°F), on heating mode, from 16°C (60.8°F) to 25°C (77°F).

5.2.11.2 TURBO

Function effective on Cooling, Heating, Fan and Auto modes, and fan speed operates on highest.

5.2.11.3 The communication control

If ODU PCB can't get signal feedback from IDU for 2 min continuously, AC unit stops working and shows E0 error code as IDU/ODU communication failure.

Once the IDU & ODU communication recovery, and also the compressor stopped for 3 min already, can the unit be recovered to operate.

5.2.12 Calibration Test Mode:


Within 3 min while indoor unit switch on, and set the unit as:

- 1) Cooling mode.
- 2) set temperature to 30°C .
- 3) Mid-fan speed.

by press ECO button 7 times within 8s, the unit will change to calibration test mode, and the buzzer sounds 3 times.

5.3 WIFI OPERATION MAUAL

5.3.1 The WIFI control logic

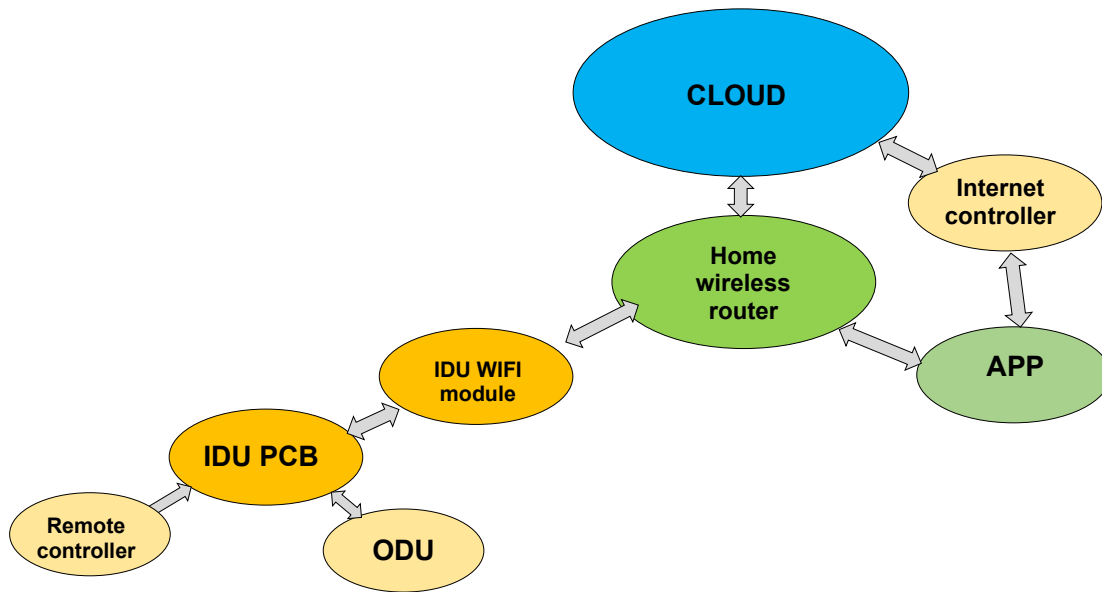

5.3.2 Download and installation

Customer can scan the QR in the user manual or from appliance APP store to download the APP and install it in the cell phone, while installation achieved, there would be an icon as picture created on the desktop. Register the account and add the device to system, customer can control the air conditioner by internet or LAN.

TUYA APP



GUBEI APP



PART II Installation and Maintenance

1. Notes for installation and maintenance

Safety Precautions

Important!

Please read the safety of precautions carefully before installation and maintenance. The following contents are very important for installation and maintenance. Please follow the instructions below.

- The installation or maintenance must accord with the instructions.
- Comply with all national electrical codes and local electrical codes.
- Pay attention to the warnings and cautions in this manual.
- All installation and maintenance shall be performed by distributor or qualified person.
- All electric work must be performed by licensed technician according to local regulations and instructions given in this manual.
- Be caution during installation and maintenance. Prohibit incorrect operation to prevent electric shock, casualty and other accidents.
- Please do not use the flammable gas detector to check before unload and open the container.
- No fire and smoking.
- According to the local rules and laws.

Warnings

Electrical safety Precautions.

- 1) Cut off the power supply of air conditioner before checking and maintenance.
- 2) The air conditioner must apply specialized circuit and prohibit share the same circuit with other appliances.
- 3) The air conditioner should be installed in suitable location and ensure the power plug is touchable.
- 4) Make sure each wiring terminal is connected firmly during installation and maintenance.
- 5) Have the unit adequately grounded. The grounding wire can't be used for other purposes.
- 6) Must apply protective accessories such as protective boards, cable-cross loop and wire clip.
- 7) The live wire, neutral wire and grounding wire of power supply must be corresponding to the live wire, neutral wire and grounding wire of the air conditioner.
- 8) The power cord and power connection wires can't be pressed by hard objects.
- 9) If power cord or connection wire is broken, it must be replaced by qualified person.
- 10) If the power cord or connection wire is not long enough, please get the specialized power cord or connection wire from the manufacture or distributor. Prohibit prolong the wire by yourself.
- 11) For the air conditioner without plug, an air switch must be installed in the circuit. The air switch should be all-pole parting and the contact parting distance should be more than 3mm.
- 12) Make sure all wires and pipes are connected properly and the valves are opened before energizing.
- 13) Check if there is electric leakage on the unit body. If yes, please eliminate the electric leakage.
- 14) Replace the fuse with a new one of the same specification if it is burnt down, don't replace it with a cooper wire or conducting wire.
- 15) If the unit is to be installed in a humid place, the circuit breaker must be installed.

Risk of fire Precautions.

- **WARNING – Risk Of Fire. Flammable Refrigerant Used.** These Air Conditioner To Be Repaired and installed Only By Trained Service Personnel. Do Not Puncture Refrigerant Tubing.
- **WARNING – Risk Of Fire.** Dispose Of Installation Properly According To Federal Or Local Regulations. As Flammable Refrigerant Used.

● WARNING – Risk Of Fire. Flammable Refrigerant Used. Consult Service Manual/Owner's Guide Before Installation and Maintenance. All Safety Precautions Must Be Followed.



Read operator's manual



Operating instructions



Read technical manual

Installation Safety Precaution

- 1) Select the installation location according to the requirement of this manual. (See the requirements in installation part).
- 2) Handle unit transportation with care, the unit should not be carried by only one person if it is more than 20kg.
- 3) When installing the indoor unit and outdoor unit, a sufficient fixing bolt must be installed, make sure the installation supporter is firm.
- 4) Wear safety belt if the height of working is above 2m.
- 5) Use equipped components or appointed components during installation.
- 6) Make sure no foreign objects are left in the unit after finishing installation.

Improper installation may lead to fire hazard, explosion, electric shock or injury.

Safety precautions for Installing and Relocating the unit.
To ensure safety, please be mindful of the following precautions.



Warnings

- 1) When installing or relocating the unit, be sure to keep the refrigerant circuit free from air or substances other than the specified refrigerant.
 Any presence of air or other foreign substance in the refrigerant circuit will cause system pressure rise or compressor rupture, resulting in injury.
- 2) When installing or moving this unit, do not charge the refrigerant which is not comply with that on the nameplate or unqualified refrigerant.
 Otherwise, it may cause abnormal operation, wrong action, mechanical malfunction or even series safety accident.
- 3) When refrigerant needs to be recovered during relocating or repairing the unit, be sure that the unit is running in cooling mode. Then, fully close the valve at high pressure side (two-way valve). About 30-40 seconds later, fully close the valve at low pressure side (3-way valve), immediately stop the unit and disconnect power. Please note that the time for refrigerant recover should not exceed 1 minute.
 If refrigerant recovery takes too much time, may be cause compressor overheat, resulting in injury.
- 4) During refrigerant recovery, make sure that two-way valve and 3-way valve are fully closed and power is disconnected before detaching the connecting pipe.
 If compressor starts running when the valves is open and connecting pipe is not yet connected, air will be sucked in

and cause pressure rise and then compressor overheat or gas leak, resulting in injury.

5) When installing the unit, make sure that connecting pipe is securely connected before the compressor starts running.

If compressor starts running when the valves is open and connecting pipe is not yet connected, air will be sucked in and cause pressure rise and then compressor overheat or gas leak, resulting in injury.

6) Prohibit installing the unit at the place where there may be leaked corrosive gas or flammable gas.

If there leaked gas around the unit, it may cause explosion and other accidents.

7) Do not use extension cords for electrical connections. If the electric wire is not long enough, please contact a local service center authorized and ask for a proper electric wire.

Poor connection may lead to electric shock or fire.

8) Use the specified types of wires for electrical connections between the indoor and outdoor units. Firmly clamp the wires so that their terminals receive no external stresses.

Electric wires with insufficient capacity, wrong wire connections and insecure wire terminals may cause electric shock or fire.

Introduction of R32, R454B air conditioner refrigerants

1) Introduction of refrigerants R32 and R454B

The refrigerants used for air conditioners are environmentally friendly hydrocarbons R32 and R454B. The two kinds of refrigerants are combustible and odorless. Moreover, they can burn and explode under certain condition. However, there will be no risk of burning and explosion if you comply with the following table to install your air conditioner in a room with an appropriate area and use it correctly.

Compared with ordinary refrigerants, Refrigerants R32 and R454B are environmentally friendly and do not destroy the ozone sphere and that their values of greenhouse effect are also very low.

2) R32/R454B air conditioner installation area requirement

$m_1 = (6\text{m}^3) \times \text{LFL}$, $m_2 = (52\text{m}^3) \times \text{LFL}$, $m_3 = (260\text{m}^3) \times \text{LFL}$

Where LFL is the lower flammable limit in kg/m^3 , R32 LFL is 0.306 kg/m^3 ., R454B LFL is 0.296 kg/m^3 .

For the appliances with a charge amount $m_1 < M < m_2$:

The maximum refrigerant charge in a room shall be in accordance with the following: $M_{\max} = 2.5 \times (\text{LFL})^{(5/4)} \times h_0 \times A^{1/2}$ not to exceed $M_{\max} = \text{SF} \times \text{LFL} \times h_0 \times A$ (GG.3DV)

The required minimum floor area $A_{\min}$ to install an appliance with refrigerant charge $M(\text{kg})$ shall be in accordance with following: $A_{\min} = (M / (2.5 \times (\text{LFL})^{(5/4)} \times h_0))^2$ not less than $A_{\min} = M / (\text{SF} \times \text{LFL} \times h)$ (GG.4DV)

Where:

$M_{\max}$ is the allowable maximum charge in a room, in kg;

M is the refrigerant charge amount in appliance, in kg;

$A_{\min}$ is the required minimum room area, in m^2 ;

A is the room area, in m^2 ;

LFL is the lower flammable limit, in kg/m^3

h_0 is the installation height of the appliance, in meters for calculating $M_{\max}$ or $A_{\min}$, 1.8 m for wall mounted;

Table GG.1 - Maximum charge (kg)

Category	LFL kg/m^3 (kg/ft^3)	h_0 (m/ft)	Floor area (m^2/ft^2) Maximum charge (kg)						
			4/43.06	7/75.35	10/107.64	15/161.46	20/215.28	30/322.92	50/538.2
R32	0.306/0.0086	0.6/1.97	0.37	0.64	0.92	1.32	1.53	1.87	2.41
		1/3.28	0.61	1.07	1.53	2.20	2.54	3.12	4.02
		1.8/5.9	1.10	1.93	2.75	3.97	4.58	5.61	7.24
		2.2/7.22	1.35	2.36	3.37	4.85	5.60	6.86	8.85
		2.6/8.53	1.59	2.78	3.98	5.73	6.62	8.10	10.46

		3.0/9.84	1.84	3.21	4.59	6.61	7.63	9.35	12.07
R454B	0.296/0.083	0.6/1.97	0.36	0.62	0.89	1.27	1.46	1.79	2.32
		1/3.28	0.59	1.04	1.48	2.11	2.44	2.99	3.86
		1.8/5.9	1.07	1.86	2.66	3.81	4.39	5.38	6.95
		2.2/7.22	1.3	2.28	3.26	4.65	5.37	6.58	8.49
		2.6/8.53	1.54	2.69	3.85	5.50	6.35	7.77	10.03
		3.0/9.84	1.78	3.11	4.44	6.34	7.32	8.97	11.58

Table GG.2 - Minimum room area (m²)

Category	LFL kg/m ³ (kg/ft ³)	h0 (m/ft)	Charge amount (M) (kg)						
			Minimum room area (m ² /ft ²)						
R32	0.306/0.0086		1.836kg	2.448kg	3.672kg	4.896kg	6.12kg	7.956kg	10.34kg
		0.6/1.97	/	51.42	115.70	205.68	321.38	543.13	917.39
		1/3.28	/	18.51	41.65	74.05	115.70	195.53	330.26
		1.8/5.9	/	8.89	13.33	22.85	35.71	60.35	101.93
		2.2/7.22		7.27	10.91	15.30	23.90	40.40	68.24
		2.6/8.53		6.15	9.23	12.31	17.11	28.92	48.86
		3.0/9.84	/	5.33	8.00	10.67	13.33	21.73	36.70
R454B	0.296/0.083		1.776kg	2.664kg	3.552kg	5.328kg	7.104kg	8.88kg	11.544kg
		0.6/1.97	/	66.17	117.63	264.68	470.54	735.21	1242.51
		1/3.28	/	23.82	42.35	95.28	169.39	264.68	447.3
		1.8/5.9	/	10	13.33	29.41	52.28	81.69	138.06
		2.2/7.22	/	8.18	10.91	19.69	35	54.69	92.42
		2.6/8.53	/	6.92	9.23	14.10	25.06	39.15	66.17
		3.0/9.84	/	6.00	8.00	12.00	18.82	29.41	49.70

Caution:

- Please contact the nearest after-sale service center when maintenance is necessary. At the time of maintenance, the maintenance personnel must strictly comply with the Operation Manual provided by the corresponding manufacturer and any non-professional is prohibited to maintain the air conditioner.
- It is necessary to comply with the provisions of gas-related national laws and regulations.
- It is necessary to clear away the refrigerant in the system when maintaining or scrapping an air conditioner.
- When filling the combustible refrigerant, any of your rude operations may cause serious injury or injuries to human body or bodies and object or objects.
- A leak test must be done after the installation is completed.
- It is a must to do the safety inspection before maintaining or repairing an air conditioner using combustible refrigerant in order to ensure that the fire risk is reduced to minimum.

3) Installation Safety

Installation Safety Principles

Site Safety



Open Flames Prohibited



Ventilation Necessary

Operation Safety

Open Flames Prohibited



Mind Static Electricity Must wear protective clothing and anti-static gloves Don't use mobile phone

Installation Safety

- Refrigerant Leak Detector
- Appropriate Installation Location



The left picture is the schematic diagram of a refrigerant leak detector.

Caution:

- The installation should be in a well-ventilated condition location.
- When you installing or maintaining an air conditioner using Refrigerant R32/R454B, the location should be free fire from open or any other goods temperature higher than 548°C for R32 / 396°C for R454B which easily produces open fire include welding, smoking, drying oven.
- When installing an air conditioner of R32/R454B, it is necessary to take appropriate anti-static measures such as wear anti-static clothing and gloves.
- It is necessary to choose the location for installation or maintenance where in the air inlets and outlets of the indoor and outdoor units should be not surrounded by obstacles or close to any heat source or combustible and/or explosive environment.
- If the indoor unit suffers refrigerant leak during the installation, it is necessary to immediately turn off the valve of the outdoor unit and all the personnel should go out till the refrigerant leaks completely for 15 minutes. If the product is damaged, it is a must to carry such damaged product back to the maintenance station and it is prohibited to weld the refrigerant pipe or conduct other operations on the user's site.
- It is necessary to choose the place where the inlet and outlet air of the indoor unit is even.
- It is necessary to avoid the places where there are other electrical products, power switch plugs and sockets, kitchen cabinet, bed, sofa and other valuables right under the lines on two sides of the indoor unit.
- Information on servicing

1) Checks to the area

Prior to beginning work on systems containing flammable refrigerants, safety checks are necessary to ensure that the risk of ignition is minimized. For repair to the refrigerating system, the following precautions shall be complied with prior to conducting work on the system.

2) Work procedure

Work shall be undertaken under a controlled procedure so as to minimize the risk of a flammable gas or vapor being present while the work is being performed.

3) General work area

All maintenance staff and others working in the local area shall be instructed on the nature of work being carried out. Work in confined spaces shall be avoided. The area around the workspace shall be sectioned off. Ensure that the conditions within the area have been made safe by control of flammable material

4) Checking for presence of refrigerant

The area shall be checked with an appropriate refrigerant detector prior to and during work, to ensure the technician is aware of potentially flammable atmospheres. Ensure that the leak detection equipment being used is suitable for use with flammable refrigerants, i.e. non-sparking, adequately sealed or intrinsically safe.

5) Presence of fire extinguisher

If any hot work is to be conducted on the refrigeration equipment or any associated parts, appropriate fire extinguishing equipment shall be available to hand. Have a dry powder or CO₂ fire extinguisher adjacent to the charging area.

6) No ignition sources

No person carrying out work in relation to a refrigeration system which involves exposing any pipe work shall use any sources of ignition in such a manner that it may lead to the risk of fire or explosion. All possible ignition sources, including cigarette smoking, should be kept sufficiently far away from the site of installation, repairing, removing and disposal, during which refrigerant can possibly be released to the surrounding space. Prior to

work taking place, the area around the equipment is to be surveyed to make sure that there are no flammable hazards or ignition risks. "No Smoking" signs shall be displayed.

7) Ventilated area

Ensure that the area is in the open or that it is adequately ventilated before breaking into the system or conducting any work that will produce heat. A degree of ventilation shall continue during the period that the work is carried out.

The ventilation should safely disperse any released refrigerant and preferably expel it externally into the atmosphere.

8) Checks to the refrigeration equipment

Where electrical components are being changed, they shall be fit for the purpose and to the correct specification. At all times the manufacturer's maintenance and service guidelines shall be followed. If in doubt consult the manufacturer's technical department for assistance.

The following checks shall be applied to installations using flammable refrigerants:

- The charge size is in accordance with the room size within which the refrigerant containing parts are installed;
- The ventilation machinery and outlets are operating adequately and are not obstructed;
- If an indirect refrigerating circuit is being used, the secondary circuit shall be checked for the presence of refrigerant;
- Marking to the equipment continues to be visible and legible. Markings and signs that are illegible shall be corrected;
- Refrigeration pipe or components are installed in a position where they are unlikely to be exposed to any substance which may corrode refrigerant containing components, unless the components are constructed of materials which are inherently resistant to being corroded or are suitably protected against being so corroded.

9) Checks to electrical devices

Repair and maintenance to electrical components shall include initial safety checks and component inspection procedures. If a fault exists that could compromise safety, then no electrical supply shall be connected to the circuit until it is satisfactorily dealt with. If the fault cannot be corrected immediately but it is necessary to continue operation, an adequate temporary solution shall be used. This shall be reported to the owner of the equipment so all parties are advised. Initial safety checks shall include:

- That capacitors are discharged: this shall be done in a safe manner to avoid possibility of sparking;
- That no live electrical components and wiring are exposed while charging, recovering or purging the system;
- That there is continuity of earth bonding.

Special tools:

Tool Name	Requirement(s) for Use
Mini Vacuum Pump	It should be an explosion-proof vacuum pump; can ensure certain precision and its vacuum degree should be lower than 10Pa.
Filling Device	It should be a special explosion-proof filling device; have certain precision and its filling deviation should be less than 5g.
Leak Detector	It should be calibrated regularly; and its annual leak rate should not exceed 10g.
Concentration Detector	A) The maintenance site should be equipped with a fixed-type combustible refrigerant concentration detector and connected to a safeguard alarm system; its error must be not more than 5%. B) The installation site should be equipped with a portable combustible refrigerant concentration detector which can realize two-level audible and visual alarm; its error must be not more than 10%. C) The concentration detectors should be calibrated regularly. D) It is necessary to check and confirm the functions before using the concentration detectors.

Pressure Gauge	A) The pressure gauges should be calibrated regularly. B) The pressure gauge used for Refrigerant 22 can be used for Refrigerants R290 and R161; the pressure gauge used for R410A can be used for Refrigerant 32.
Fire Extinguisher	It is necessary to carry fire extinguisher(s) when installing and maintaining an air conditioner. On the maintenance site, there should be two or more kinds of dry powder, carbon dioxide and foam fire extinguishers and that such fire extinguishers should be placed at stipulated positions, with eye-catching labels and in handy places.

Maintenance

1). Inspections before maintenance.

(1) Inspection of maintenance environment

- There should be no leaked refrigerant in the room before operation.
- It is only allowed to operate in a room which meets the area requirement on the nameplate.
- It is necessary to make the room keep a continuous ventilation state at the time of maintenance.
- The room in the maintenance should be free from fire or welding, smoking, drying oven or any other goods temperature higher than 548°C (R32) / 396°C (R454B) which easily produces fire.
- During the maintenance, it is necessary to ensure that any person's any mobile phone or any electronic product with radiation in the room is powered off.
- The maintenance area should be equipped with a drying powder or carbon dioxide fire extinguisher and that such fire extinguisher can work.

(2) Inspection of maintenance equipment

- Check the maintenance equipment is applicable to the refrigerant or not and it is only allowed to use the professional equipment recommended by the air conditioner manufacturer.
- Check the refrigerant leak detector whether has been calibrated. The set maximum alarm concentration of the refrigerant leak detector should not exceed 25% of the lower explosion limit (LEL), the refrigerant leak detector must be working during maintenance.

2) Inspection of air conditioner

- It is necessary to ensure that the air conditioner is in reliable ground connection before maintenance.
- Make sure powered supply to air conditioner is off. Before maintenance, it is necessary to cut off the power and discharge the capacitor power which used in the air conditioner. If it is a must to need the power supply during the maintenance, it is necessary to do ongoing leak detection at the most dangerous position/point in order to avoid potential danger.
- Check the warning labels on the air conditioner whether are in good condition. It is necessary to replace the damaged or smeared warning labels.

3). Leak inspection before maintenance

Before maintenance, use the leak detector or concentration detector (pump-type) recommended by the corresponding air conditioner manufacturer to check the air conditioner leak or not.

Warning

If leak may exist, it is necessary to move all the fire out from the site or extinguish fire and then immediately shut off the air conditioner. Meanwhile, it is necessary to make sure well-ventilated.

4). Safety principles during the maintenance

- At the time of maintenance, it is necessary to ensure well-ventilation on the site.
- It is prohibited to use fire including welding, smoking or other purposes. It is prohibited to use mobile phones.
- At the time of maintenance, if the relative humidity is lower than 40%, it is necessary to wear anti-static clothing and gloves.
- If the combustible refrigerant is found leaking during the maintenance, it is a must to immediately take forced ventilation and plug up the leak source.
- If the product is damaged to the extent that it is a must to open the refrigerating system for maintenance, it is a must to carry the product back to the maintenance station for maintenance. (It is prohibited to weld the refrigerant pipe and do other operations on the user's site.)
- It is necessary to return the air conditioner to its initial state if it is necessary to provide visiting service again due to lacking spare part during the maintenance. Moreover, it is a must to ensure that the refrigerating system is in secure ground connection.
- If it is necessary to provide visiting service with a refrigerant cylinder, the volume of refrigerant filled in such refrigerant cylinder should not exceed the stipulated value. When such cylinder is stored in a vehicle or placed on the installation or maintenance site, it is necessary to place it vertically and securely and keep it away from any place where there is any heat source, combustion source, radiation source or electrical equipment.

5). Requirements for the site of maintenance-station

- The maintenance location should be well-ventilated, with leveled ground and not in a basement.
- The maintenance should be divided into welding and non-welding areas both of which should be labeled clearly. There should be a certain safety distance between the two areas. The maintenance location should be equipped with ventilating and air-exhausting equipment to prevent the refrigerant gas from aggregating.
- It is necessary to provide some relevant instruments such as combustible refrigerant leak detector and have a leak detecting instrument management system. It is necessary to confirm that the leak detector can work normally before maintenance.
- The main power switch should be set outside the maintenance location and equipped with protective (explosion-proof) devices.
- It is necessary to provide firefighting devices such as dry powder or carbon dioxide fire extinguisher appropriate for extinguishing the electrical fire and keep such firefighting devices in a usable condition.
- Temporary wires and sockets are prohibited on the maintenance location.

6). Requirements for fill the refrigerants

- It is necessary to use nitrogen to clear the cyclic system before operating the refrigerating system and vacuumize the outdoor unit for 30 minutes at least.
- It is necessary to ensure that there is no cross contamination among different refrigerants when the refrigerant filling device is used. The total length including the refrigerant pipeline should be as short as possible in order to reduce the residual refrigerant inside such pipeline.
- It is necessary to vertically place the refrigerant storage tanks.
- It is necessary to ensure that the refrigerating system is in ground connection before the refrigerant is filled.
- When filling the refrigerant, it is necessary to fill corresponding type and volume of refrigerant as per the requirements on the product nameplate and overfilling is prohibited.
- It is necessary to seal the system in a safe sealing way after maintaining the refrigerating system.
- It is necessary to ensure that the maintenance will not damage or reduce the safety protection grade of the original system.

7). In-maintenance welding

- It is necessary to ensure that the maintenance location is well-ventilated.
- Before welding the outdoor unit, it is a must to confirm that the refrigerating system has been drained and the system has been cleaned and ensure that there has been no refrigerant in the outdoor unit.
- It is necessary to close the stop valve of the outdoor unit when using a welding gun to do the maintenance work such as cutting and welding.

8). Maintenance of electrical components

- It is necessary to use a special leak detector to check whether the maintained electrical parts location have the leak refrigerant.
- It is not allowed to refit, remove or cancel any component with the safety protection function after finishing the maintenance process.
- When maintaining the sealed parts, it is necessary to turn off the power of air conditioner before opening the sealing cover. When power supply is needed, it is necessary to do the ongoing leak detection at the most dangerous position in order to prevent potential danger.
- It is necessary to specially note that the maintenance of electrical components will not affect the replacement of protective cover.
- In order to ensure that the sealing function is not damaged after maintenance or the sealing material will not lose the effect of preventing the combustible gas leak due to ageing. So the substitute components should meet the requirements recommended by the air conditioner manufacturer.

Warning

Before doing the trial operation after finishing the maintenance, it is a must to use a practical leak detector to inspect the leakage and reliability of ground connection in order to ensure that no refrigerant leakage and reliable ground connection.

The refrigerant storage tanks should be separately placed in a well-ventilated place at the temperature ranging from -10℃ to 50℃ and label them with warning labels.

9). Emergency Accident Handling


A maintenance station should establish emergency handling plans. It is necessary to take appropriate precautionary measures in work. For example, it is prohibited to enter the location with any kindling material and it is prohibited to wear clothing or shoes which easily produce static.

Handling suggestions when a large amount of combustible refrigerant leaks:



- It is necessary to immediately operate the ventilating equipment while cutting off other power supply and evacuating the affected personnel urgently from the location.
- It is necessary to inform near residents of evacuating for over 20 meters from the location, make an alarm call, set the emergency area and prohibit irrelevant personnel and vehicles from approaching.
- The professional firefighters should wear anti-static clothing to handle the emergency on the site and cut off the source of leak.
- It is necessary to use nitrogen for blowing the site, especially the low-lying positions, clear away the residual combustible refrigerant gas from any area nearby and surrounding the leak point and use a handheld detector for detection and not clear the alarm until the concentration of refrigerant is zero.

2 Installation

2.1 Dimension diagram for installation

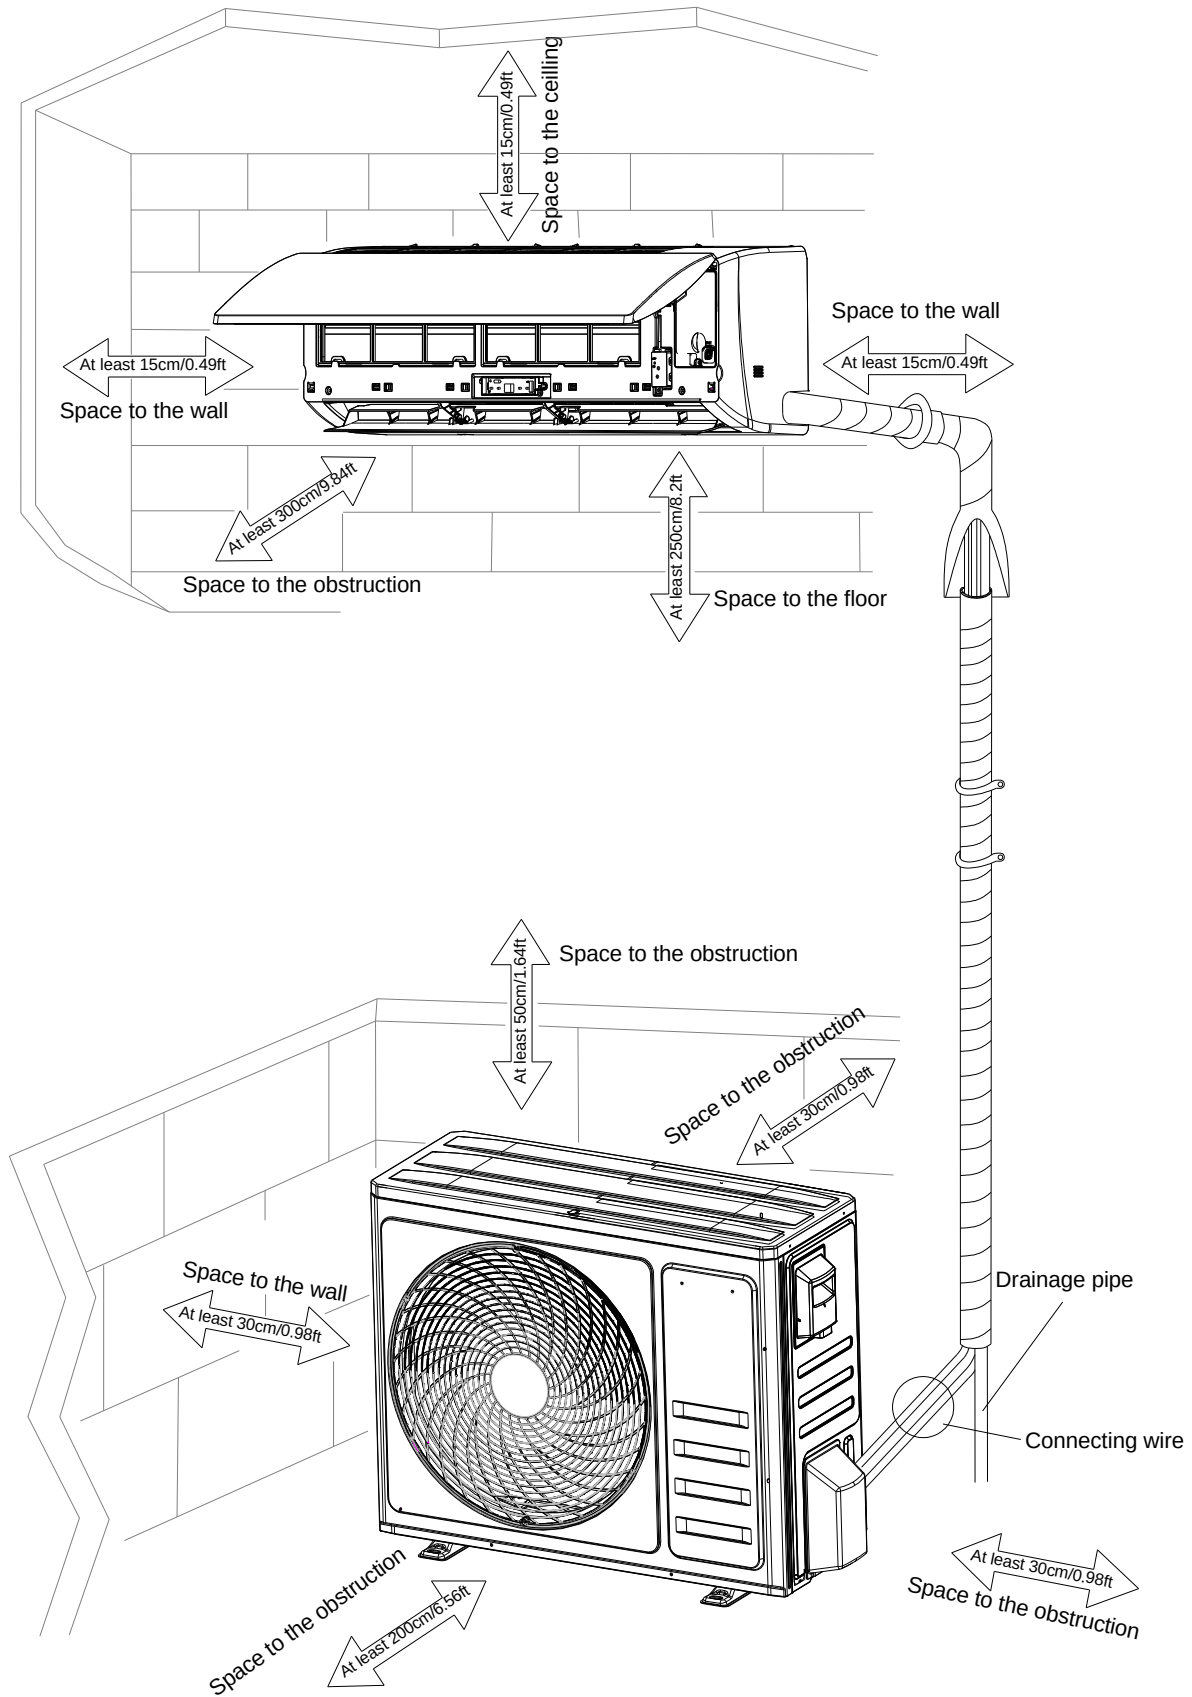

2.2 Inspection of Accessories

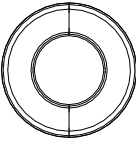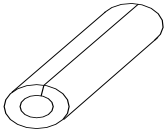Remote controller 	Remote controller supporter 	Batteries 	Vinyl tape 
Drain hose 	Hole cover 	Screw 	Insulation material 

2.3 Position of IDU/ODU

Indoor unit

- Install the indoor unit level on a strong wall that is not subject to vibrations
- The inlet and outlet ports should not be obstructed: the air should be able to blow all over the room.
- Do not install the unit near a source of heat, steam or flammable gas.
- Do not install the unit in too windy or dusty places.
- Do not install the unit where people often pass. Select a place where the air discharge and operating sound level will not disturb the neighbors.
- Install the unit where connection between indoor and outdoor unit is as easy as possible.
- Install the unit where it is easy to drain the condensed water.
- Check the machine operation regularly and leave the necessary spaces as shown in the picture.
- Install the indoor unit where the filter can be easily accessible.

OUTDOOR UNIT

- Do not install the outdoor unit near sources of heat, steam or flammable gas.
 - Do not install the unit in too windy or dusty places.
 - Do not install the unit where people often pass. Select a place where the air discharge and operating sound level will not disturb the neighbors.
 - Avoid installing the unit where it will be exposed to direct sunlight (other wise use a protection, if necessary, that should not interfere with the air flow).
 - Leave the spaces as shown in the picture for
 - The air to circulate freely.
 - Install the outdoor unit in a safe and solid place.
 - If the outdoor unit is subject to vibration, place rubber gaskets onto the feet of the unit.
 - Install the indoor unit in the room to be air conditioning, avoiding to installation in corridors or communal areas.
 - Install the indoor unit at a height of at least 2.5m
 - from the ground.
- Minimum space to be left (mm) showing in the

picture.

2.4 Electricity and wiring

Safety precaution

- 1) Must follow the electric safety regulations when installing the unit.
- 2) According to the local safety regulations, use qualified power supply circuit and air switch.
- 3) Make sure the power supply matches with the requirement of air conditioner. Unstable power supply or incorrect wiring may result in electric shock, fire hazard or malfunction. Please install proper power supply cables before using the air conditioner.

The power cord should be selected according to the following specifications sheet.


Appliance Amps(A)	Wire Size (mm ² /in ²)
5	0.75/0.0012
10	1.0/0.0016
13	1.5/0.0023
18	1.6/0.0025
25	2.0/0.0031
30	2.5/0.0039

2.5 IDU Installation


To install, proceed as follows:

2.5.1 Installation of the mounting plate.


- 1) By using a level, put the mounting plate in a perfect square position vertically and horizontally.
- 2) Drill 32mm deep holes in the wall to fix the plate.
- 3) Insert the plastic anchors into the hole.
- 4) Fix the mounting plate by using the provided tapping screws.
- 5) Check that the mounting plate is correctly fixed.

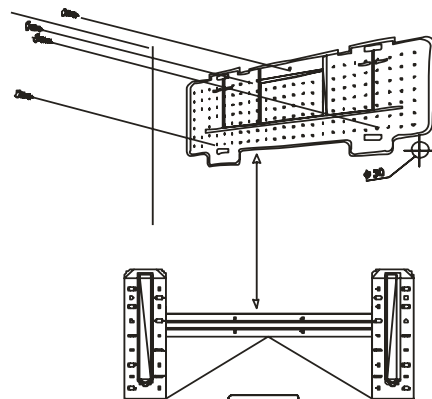


9K

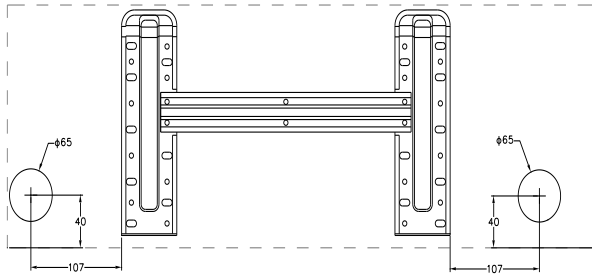


12K

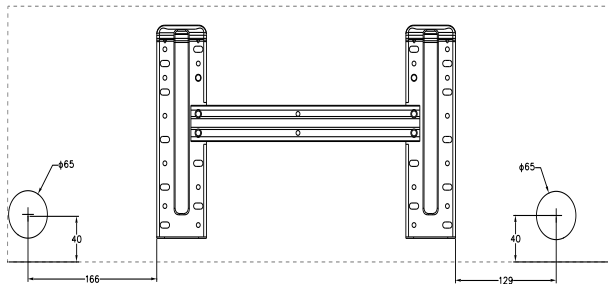


18K

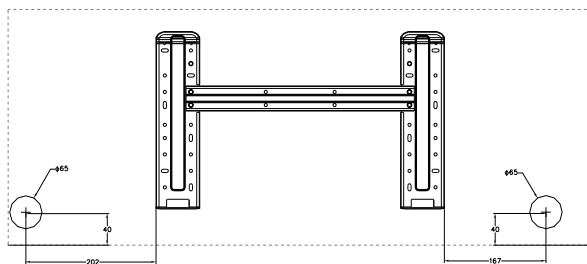

24K

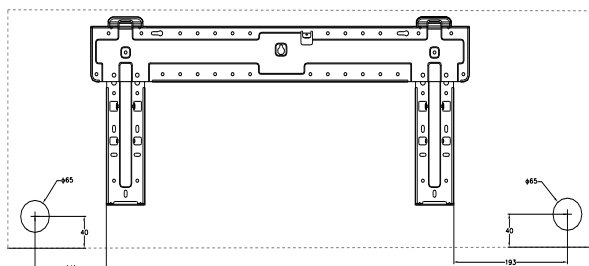


36K

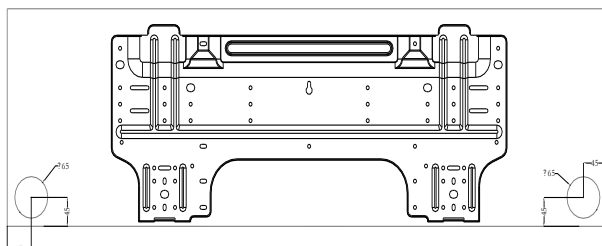

Note: The shape of the mounting plate may be different from the one above, but installation method is similar.


2.5.2 Drilling a hole in the wall for the piping

- 1) Decide where to drill the hole in the wall for the piping (if necessary) according to the position of the mounting plate
- 2) Install a flexible flange through the hole in the wall to keep the latter intact and clean.

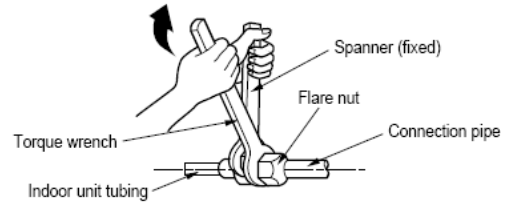

Indoors

Out doors

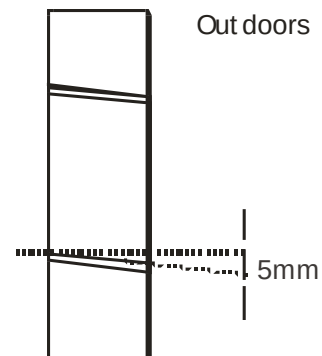


The hole must slope downwards towards the exterior.

Note: Keep the drain pipe down towards the direction of the wall hole, otherwise leakage may occur.

2.5.3 Electrical connections---Indoor unit

- 1).Lift the front panel.
- 2).Take off the cover as indicated in the picture (by removing a screw or by breaking the hooks).
- 3).For the electrical connections, see the circuit diagram on the right part of the unit under the front panel.
- 4).Connect the cable wires to the screw terminals by following the numbering, Use wire size suitable to the electric power input (see name plate on the unit) and according to all current national safety code requirements.
- 5).The cable connecting the outdoor and indoor units must be suitable for outdoor use.
- 6).The plug must be accessible also after the appliance has been installed so that it can be pulled out if necessary.
- 7).An efficient earth connection must be ensured.
- 8).If the power cable is damaged, it must be


replaced by an authorized Service Centre.

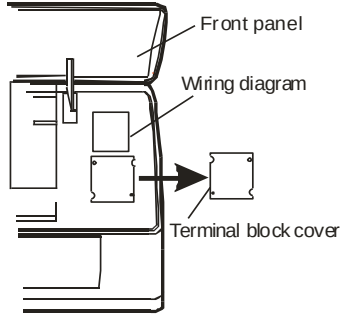

★ Refrigerant piping connection


The piping can be run in the 3 directions indicated by numbers in the picture. When the piping is run in direction 1 or 3, cut a notch along the groove on the side of the indoor unit with a cutter.

Run the piping in the direction of the wall hole and bind the copper pipes, the drain pipe and the power cables together with the tape with the drain pipe at the bottom, so that water can flow freely.

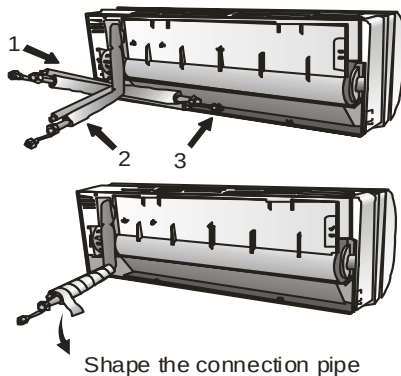

2.5.4 Connecting the pipes.

- Do not remove the cap from the pipe until connecting it, to avoid dampness or dirt from entering.
- If the pipe is bent or pulled too often, it will become stiff. Do not bend the pipe more than three times at one point.
- When extending the rolled pipe, straighten the pipe by unwinding it gently as shown in the picture.

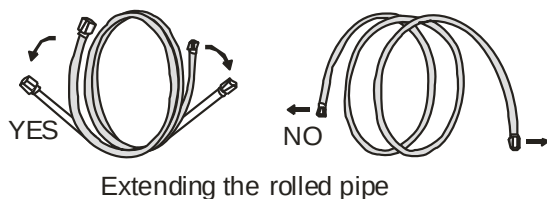


2.5.5 Connections to the indoor unit

- 1). Remove the indoor unit pipe cap (check that

there is no debris inside).

- 2). Insert the flare nut and create a flange at the extreme end of the connection pipe.

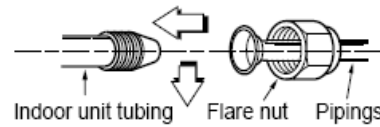


- 3). Tighten the connections by using two wrenches working in opposite directions.


When extending the drain hose at the indoor unit, install the drain pipe.

Wrap the insulation material around the connecting portion.


- Overlap the connection pipe insulation material and the indoor unit pipe insulation material. Bind them together with vinyl tape so that there is no gap.

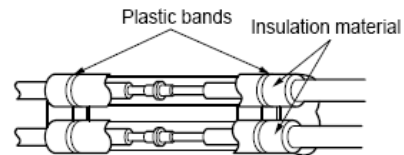

Wrap the area which accommodates the rear piping housing section with vinyl tape.

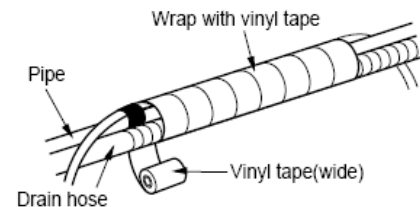

- Bundle the piping and drain hose together by wrapping them with vinyl tape over the range within which they fit into the rear piping housing section.

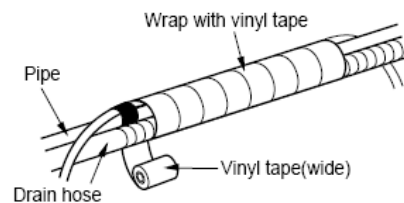


2.5.6 Indoor unit condensed water drainage

The indoor unit condensed water drainage is fundamental for the success of the installation.

- 1). Place the drain hose below the piping, taking care not to create siphons.


- 2).The drain hose must slant downwards to aid drainage.
- 3).Do not bend the drain hose or leave it protruding or twisted and do not put the end of it in water. If an extension is connected to the drain hose, ensure that it is lagged when it passes into the indoor unit.
- 4).If the piping is installed to the right, the pipes, power cable and drain hose must be lagged and secured onto the rear of the unit with a pipe connection.

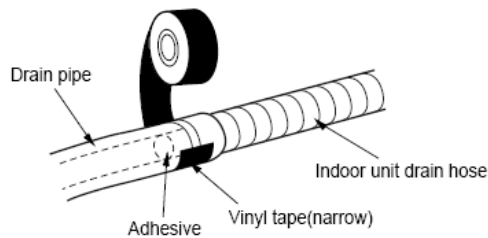

- Insert the pipe connection into the relative slot.

Capacity (Btu/h)	Pipe Size (Torque)	
	Gas	Liquid
7/9/12K	3/8" (4.2kg.m/30.3 8ibf.ft)	1/4" (1.8kg.m/13.02 ibf.ft)
18K	1/2" (5.5kg.m/39.7 8ibf.ft)	1/4" (1.8kg.m/13.02 ibf.ft)
24K	5/8" (6.6kg.m/47.74 ibf.ft)	1/4" (1.8kg.m/13.02 ibf.ft)

- Press to join the pipe connection to the base.

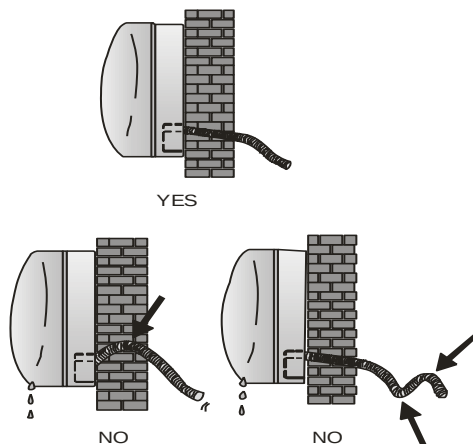

2.6 ODU Installation


- The outdoor unit should be installed on a solid wall and fastened securely.

- The following procedure must be observed before connecting the pipes and connecting cables : decide which is the best position on the wall and leave enough space to be able to carry out maintenance easily.
- Fasten the support to the wall using screw anchors which are particularly suited to the type of wall;
- Use a larger quantity of screw anchors than normally required for the weight they have to bear to avoid vibration during operation and remain fastened in the same position for years without the screws becoming loose.
- The unit must be installed following the national regulations.

Outdoor unit condensed water drainage (only for heat pump models)

The condensed water and the ice formed in the outdoor unit during heating operation can be drained away through the drain pipe.


- 1) Fasten the drain port in the 25mm hole placed in the part of the unit as shown in the picture.
 - 2) Connect the drain port and the drain pipe.
- Pay attention that water is drained in a suitable place.

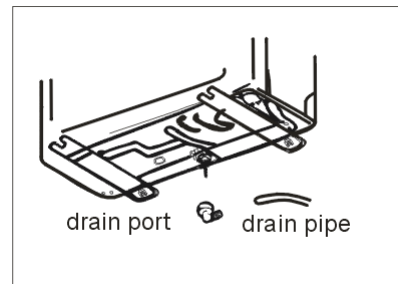

Electronic connections

1. Take the cover away.
2. Connect the cable wires to the terminal board using the same numbering as in the indoor unit.
3. For the electrical connections, see the wiring diagram on the back of the cover
4. Fasten the cables with a cable-clamp.
5. An efficient earth connection must be ensured.
6. Replace the covers.


Wiring diagram on the back of the cover

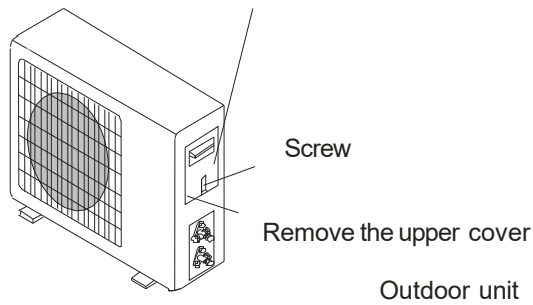

Connecting the pipe

Screw the flare nuts to the outdoor unit coupling with the same tightening procedures described for the indoor unit.


Note: If the tightening torque is not sufficient, there will probably be some leakage. With excessive tightening torque there will also be some leakage, as the flange could be damaged.

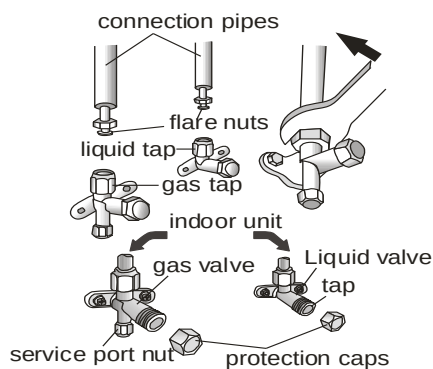

2.7 Vacuum and gas leakage test

1. Use vacuum Pump

- 1) Air and humidity left inside the refrigerant circuit can cause compressor malfunction. After having connected the indoor and outdoor units, bleed the air and humidity from the refrigerant circuit by using a vacuum pump.
- 2) Open the piezometer and operation for 10-15 minutes to check if the pressure of piezometer remains in -0.1Mpa.
- 3) Close the vacuum pump and maintain this status for 1-2min to check if the pressure of piezometer remains in -0.1Mpa. If the pressure decrease, there may be leakage.
- 4) Remove the piezometer, open the valve core of liquid valve and gas valve completely.
- 5) Tighten the screw caps of valve and refrigerant charging vent.

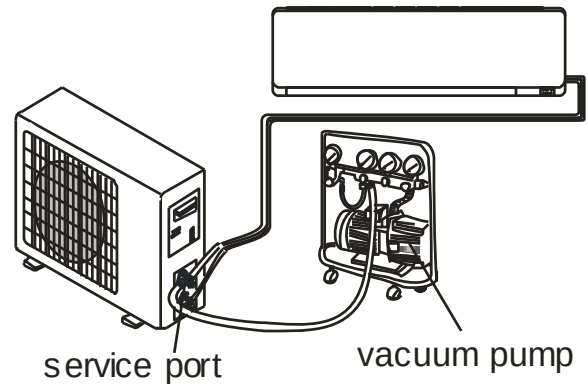

2. Leakage Detection

- 1).With leakage detection.

Check if there is leakage with leakage detection.

- 2).With soap water. If leakage detection is not available, please use soap water for leakage detection. Apply soap water at the suspected position and keep the soap water for more than 3min. If there are air bubbles coming out of this position, there a leakage.

2.8 Final test

1 Preparation of test operation.

- The client approves the air conditioner installation.
- Specify the important notes for air conditioner to the client.

2 Method of test operation

- Put through the power, press ON/OFF button on the remote controller to start operation.
- Press MODE button the select AUTO, COOL, DRY, FAN and HEAT to check whether the operation is normal or not.
If ambient temperature is lower than 16°C, the air conditioner can't start cooling.

3. Maintenance

3.1 Failure code

Code	Reason	Remark
E0	IDU & ODU Communication failure	The IDU & ODU wiring connection correct?
E1	IDU Room Temperature sensor failure. (IDU RT failure)	IDU sensor and PCB.
E2	IDU Coil temperature sensor failure. (IDU IPT failure)	IDU sensor and PCB.
E3	ODU Coil temperature sensor failure. (OPT)	ODU coil sensor and ODU PCB
E4	AC Cooling system abnormal	Gas leakage? 2-way or 3-way valve blocked etc.
E5	IDU/ODU mismatched failure (specially performance test on the production line)	/
E6	IDU PG Fan motor / DC fan motor works abnormal (IDU failure)	Fan motor, fan blade and PCB.
E7	ODU Ambient Temperature sensor failure	ODU ambient sensor and ODU PCB.
E8	ODU Discharge Temperature sensor failure.	ODU discharge sensor and ODU PCB.
E9	IPM / Compressor driving control abnormal.	ODU PCB , compressor, etc.
EA	ODU Current Test circuit failure	ODU PCB broken?
Eb	The Communication abnormal of Main PCB and Display board (IDU failure)	Display board and main PCB.
EE	ODU EEPROM failure.	1. ODU PCB broken? 2. Try to re-power on AC unit.
EF	ODU DC fan motor failure.	Fan motor, ODU PCB.
EU	ODU Voltage test circuit abnormal.	ODU PCB.
P0	IPM module protection.	ODU PCB
P1	Over / under voltage protection.	1. ODU PCB broken? 2. Power supply abnormal?
P2	Over current protection.	1. ODU PCB broken? 2. Power supply abnormal?
P4	ODU Discharge pipe Over temperature protection.	Please check the troubleshooting for detail.
P5	Sub-cooling protection on Cooling mode.	Please check the troubleshooting for detail.
P6	Overheating protection on Cooling mode.	Please check the troubleshooting for detail.
P7	Overheating protection on Heating mode.	Please check the troubleshooting for detail.
P8	Outdoor Over temperature/Under temperature protection.	Please check the troubleshooting for detail.
P9	Compressor driving protection (Load abnormal).	Please check the troubleshooting for detail.
PA	Communication failure for TOP flow unit/ Preset mode conflict. (IDU failure)	Please check the troubleshooting for detail.
F0	Infrared Customer feeling test sensor failure. (IDU failure)	Querying by press remote controller
F1	Electric Power test module failure. (IDU failure)	Querying by press remote controller
F2	Discharge temperature sensor failure PROTECTION.	Please check the troubleshooting for detail.
F3	ODU coil temperature failure PROTECTION..	Please check the troubleshooting for detail.

F4	Cooling system gas flow abnormal PROTECTION..	Please check the troubleshooting for detail.
F5	PFC PROTECTION	Please check the troubleshooting for detail.
F6	The Compressor lack of phase / Anti-phase PROTECTION.	Please check the troubleshooting for detail.
F7	IPM Module temperature PROTECTION	Please check the troubleshooting for detail.
F8	4-Way Value reversing abnormal..	Please check the troubleshooting for detail.
F9	The module temperature test circuit failure.	ODU PCB
FA	The compressor Phase-current test circuit failure.	ODU PCB
Fb	Limiting/Reducing frequency for Over load protection on Cooling/Heating mode.	Querying by press remote controller
FC	Limiting/Reducing frequency for High power consumption protection.	Querying by press remote controller
FE	Limiting/Reducing frequency for Module current protection (phase current of compressor).	Querying by press remote controller
FF	Limiting/Reducing frequency for Module temperature protection.	Querying by press remote controller
FH	Limiting/Reducing frequency for Compressor driving protection.	Querying by press remote controller
FP	Limiting/Reducing frequency for anti-condensation protection..	Querying by press remote controller
FU	Limiting/Reducing frequency for anti-frost protection.	Querying by press remote controller
Fj	Limiting/Reducing frequency for Discharge over temperature protection.	Querying by press remote controller
Fn	Limiting/Reducing frequency for ODU AC Current protection.	Querying by press remote controller
Fy	Gas leakage protection	Please check the troubleshooting for detail.
bf	TVOC sensor failure (IDU failure, optional)	Querying by press remote controller
bc	PM2.5 sensor failure (IDU failure, optional)	Querying by press remote controller
bj	Humidity sensor failure. (IDU failure)	Querying by press remote controller


Note: Remote controller FAILURE CODE Querying function


As shown in the failure codes, some of the codes (Fb~bj) need to press remote control for inspection.


While unit on operation, press the ECO button 8 times with 8 seconds, the buzzer BIBI 2 times, you can inspect the special failure code as Fb ~Fn, bj etc.

3.2 Trouble shooting

3.2.1 E0 ---IDU & ODU communication failure

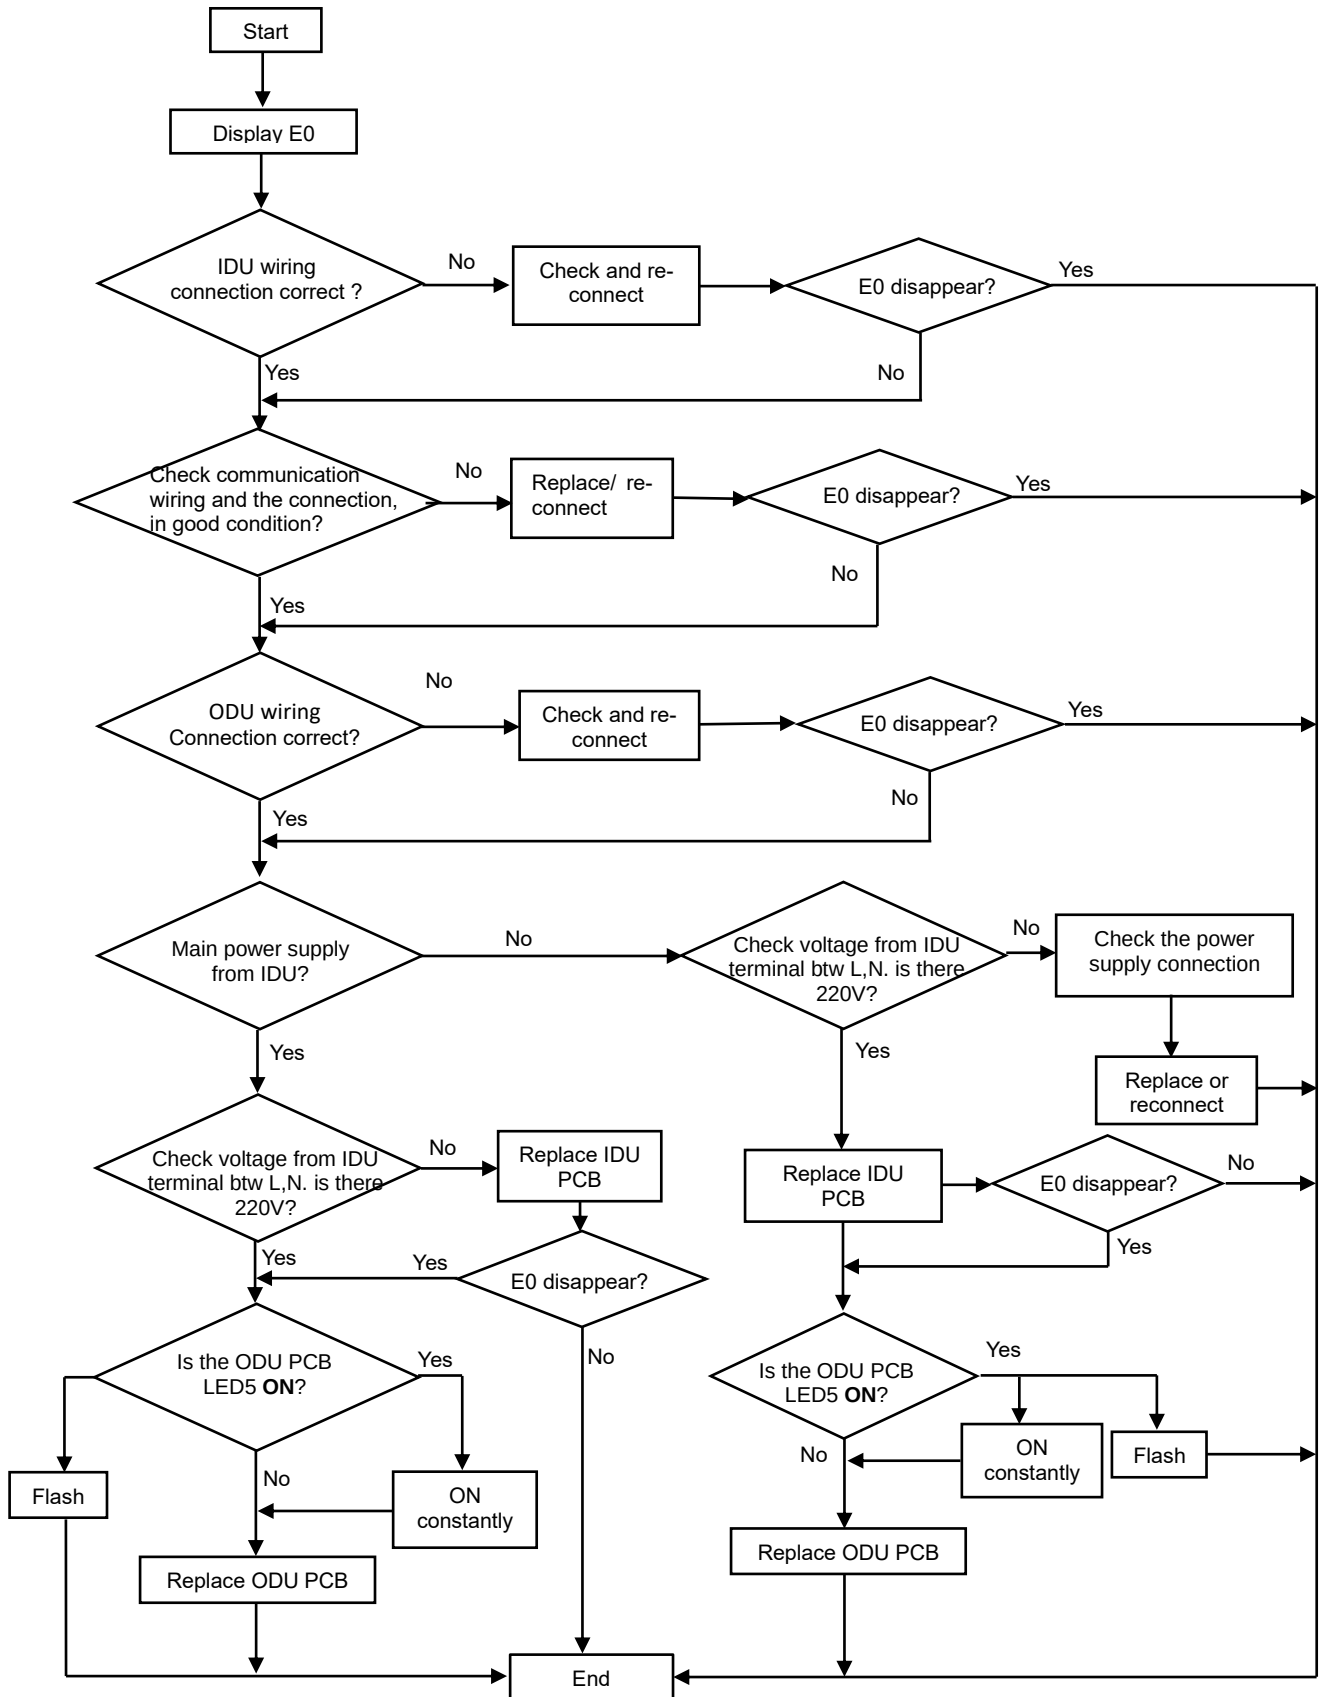


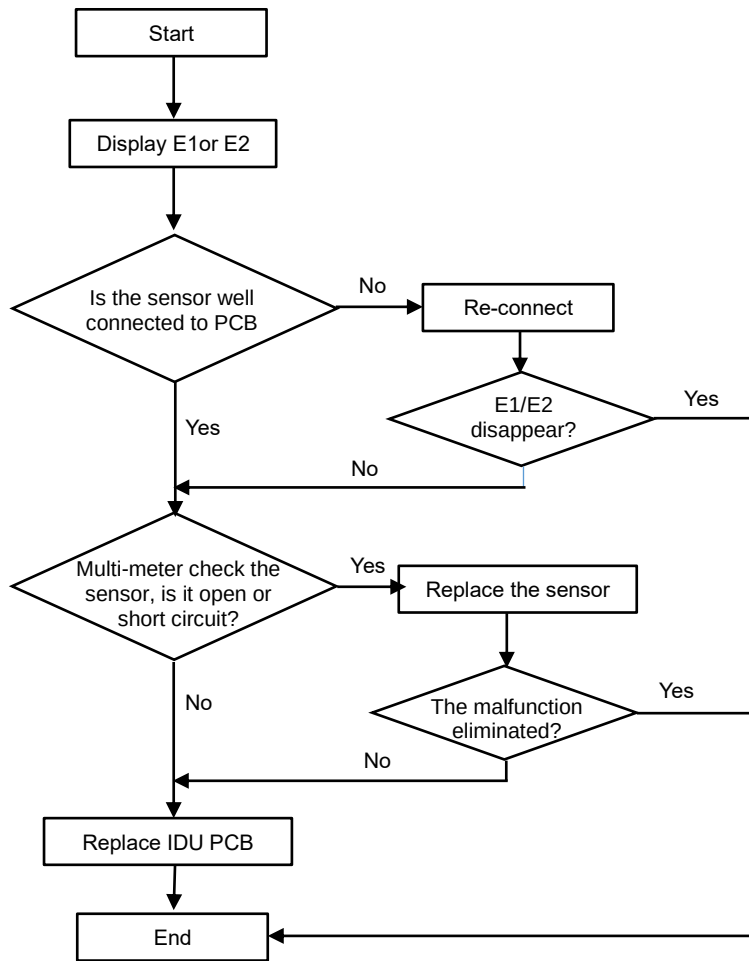3.2.2 E1, E2 ---IDU Room temperature sensor and/or coil temperature sensor failure.

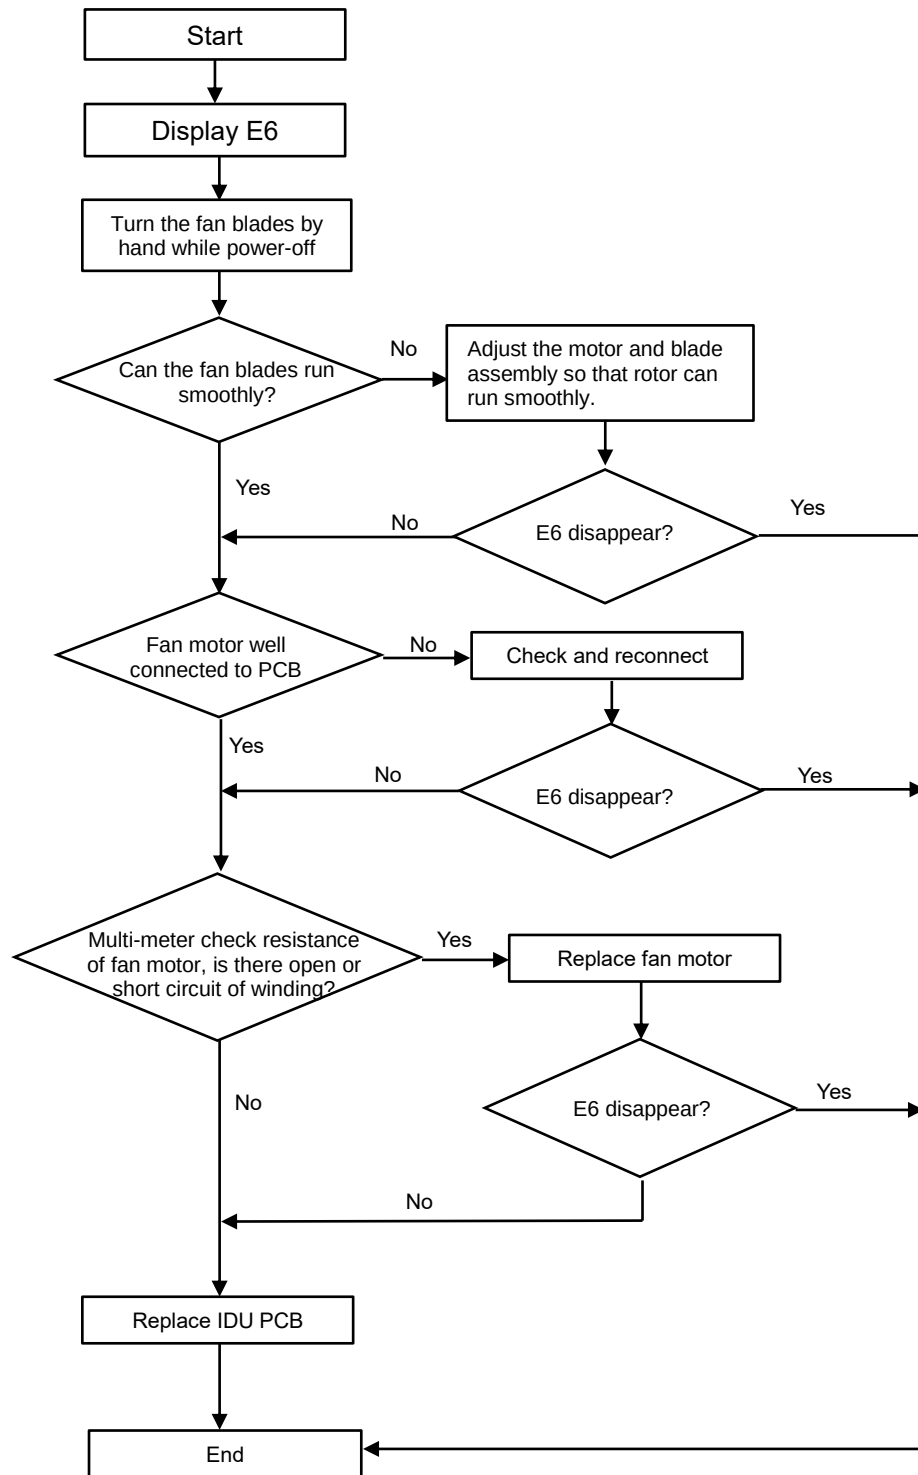3.2.3 E6----IDU ventilation failure (PG and DC fan motor only)


3.2.4 E3, E7 or E8----ODU Coil temperature sensor, Ambient temperature sensor or Discharge temperature sensor failure.

When any of the sensor resistance open or short circuit , unit will display failure code as E3/E7 or E8, IDU and ODU turns off. When the sensor resistance recovery, unit revert to be standby, customer can switch on the unit directly.

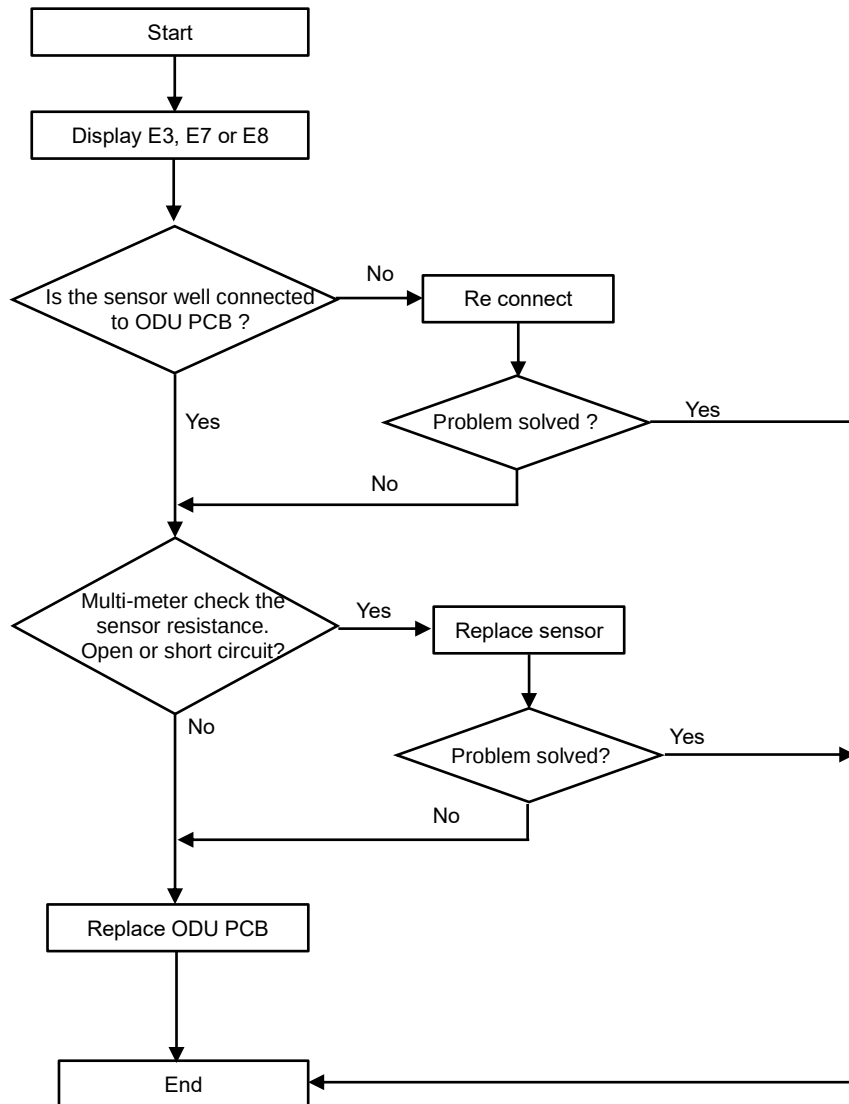

3.2.5 E9---ODU IPM /Compressor drive fault

If unit have 6 times stopping works for IPM protection (P0) continuously, it will display E9 error, and unit can't be recovered to operation, except press ON/OFF button.

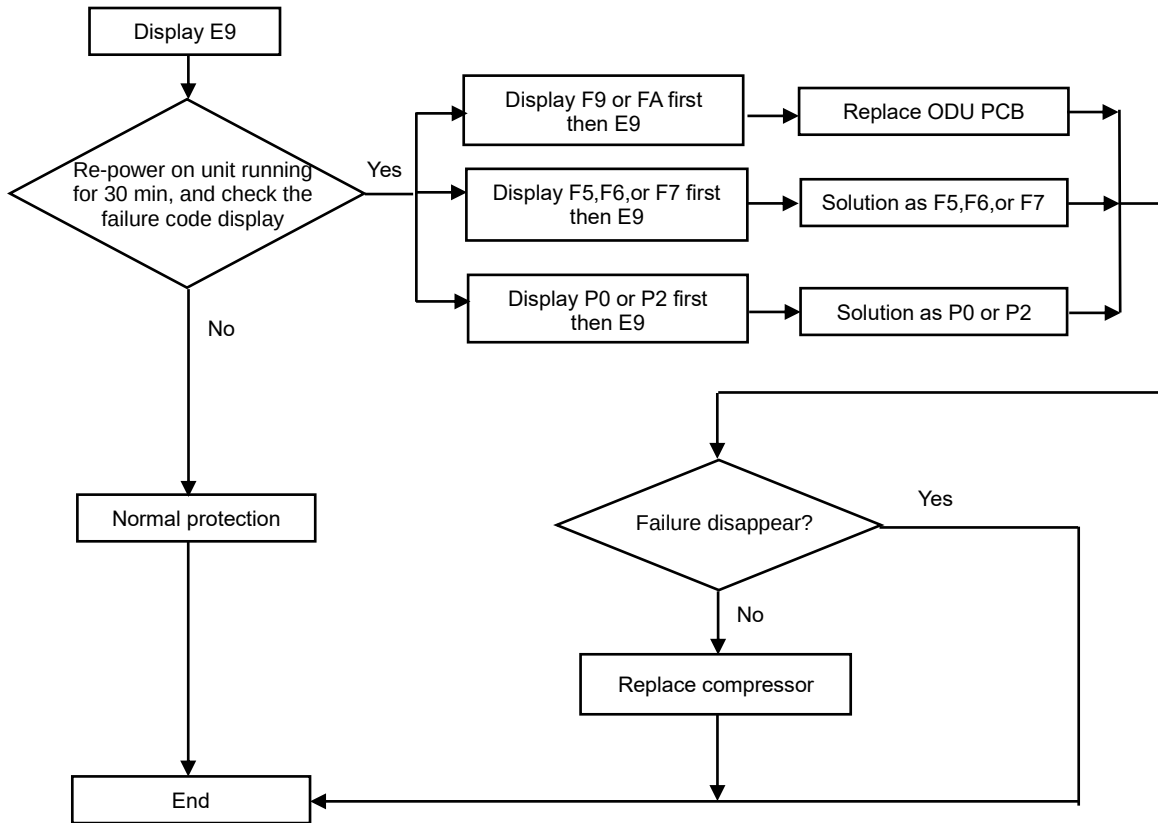

Remark:

1. F9 code

Reason: The IPM module temperature test circuit failure.


Solution: Replace the ODU PCB.

2. FA code

Reason: The compressor phase-current test circuit failure.


Solution: Replace the ODU PCB.

3.2.6 EF---ODU DC fan motor failure

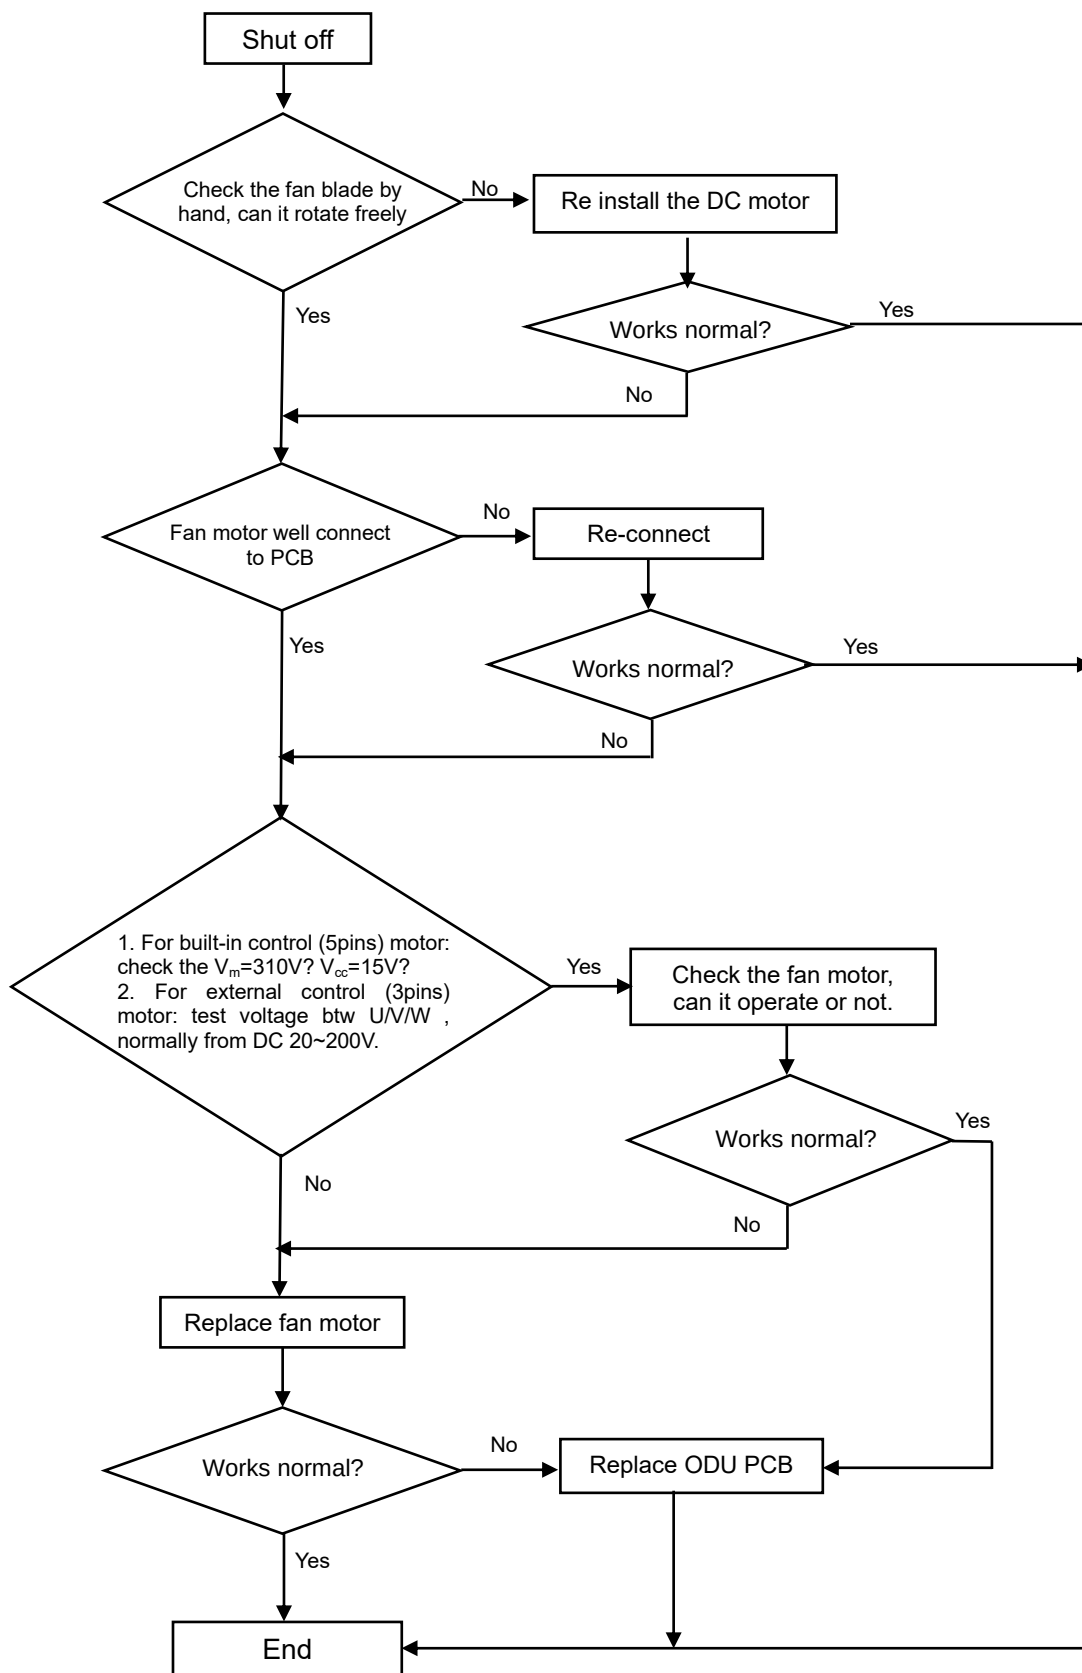


3.2.7 EU---ODU voltage test sensor failure

After power relay works, when tested voltage effective value less than 50V for 3s continuously, unit will display EU.

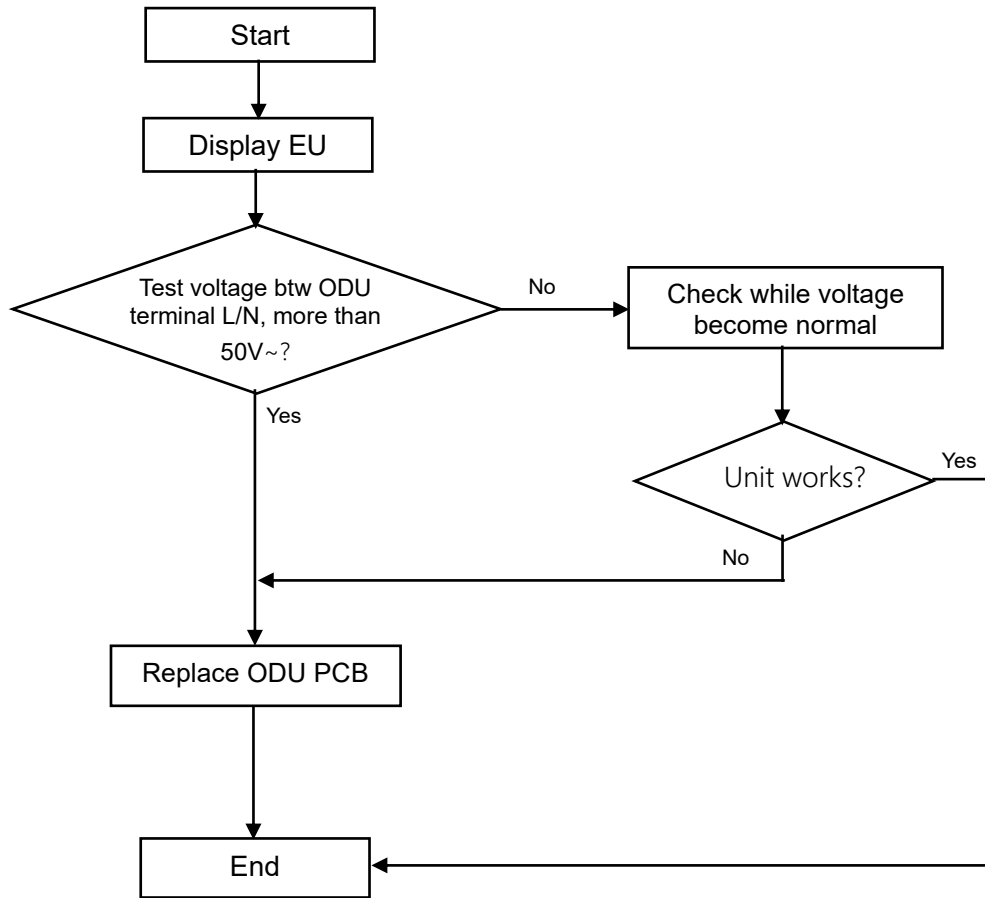


3.2.8 P0---IPM protection

When overheat or overcurrent for IPM, AC unit will display P0 protection.

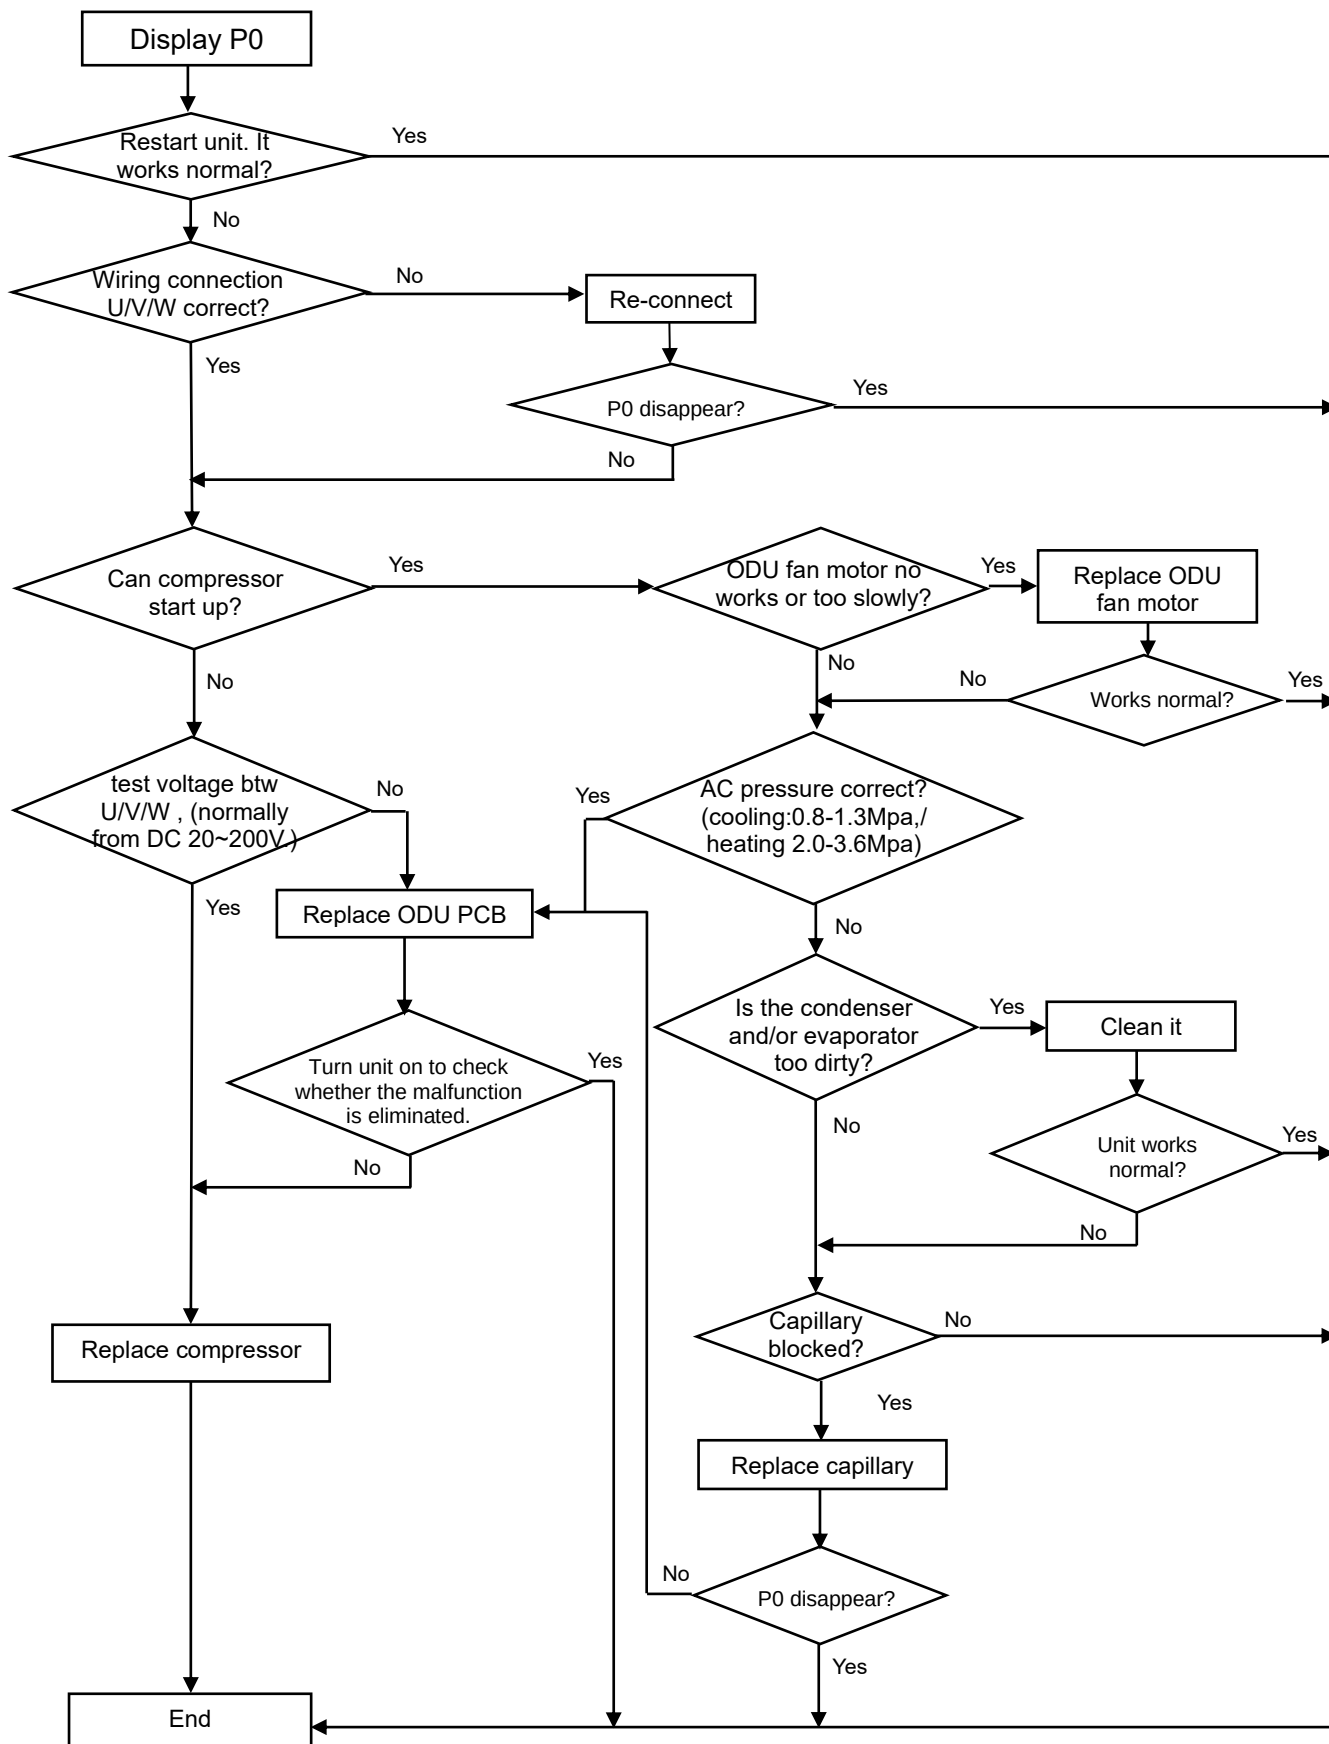

3.2.9 P1--- Over / under voltage protection


1. Test voltage between L & N, When the power supply $V > AC260V$ or $V < AC150V$, AC will display P1 protection, unit will recover back to previous status while $V > AC155V$.
2. Test voltage on the big size electrolytic capacitor of ODU PCB, When DC busbar voltage $V > DC420V$ or $V < DC150V$, unit will recover back to previous status while $DC190V < V < DC410V$

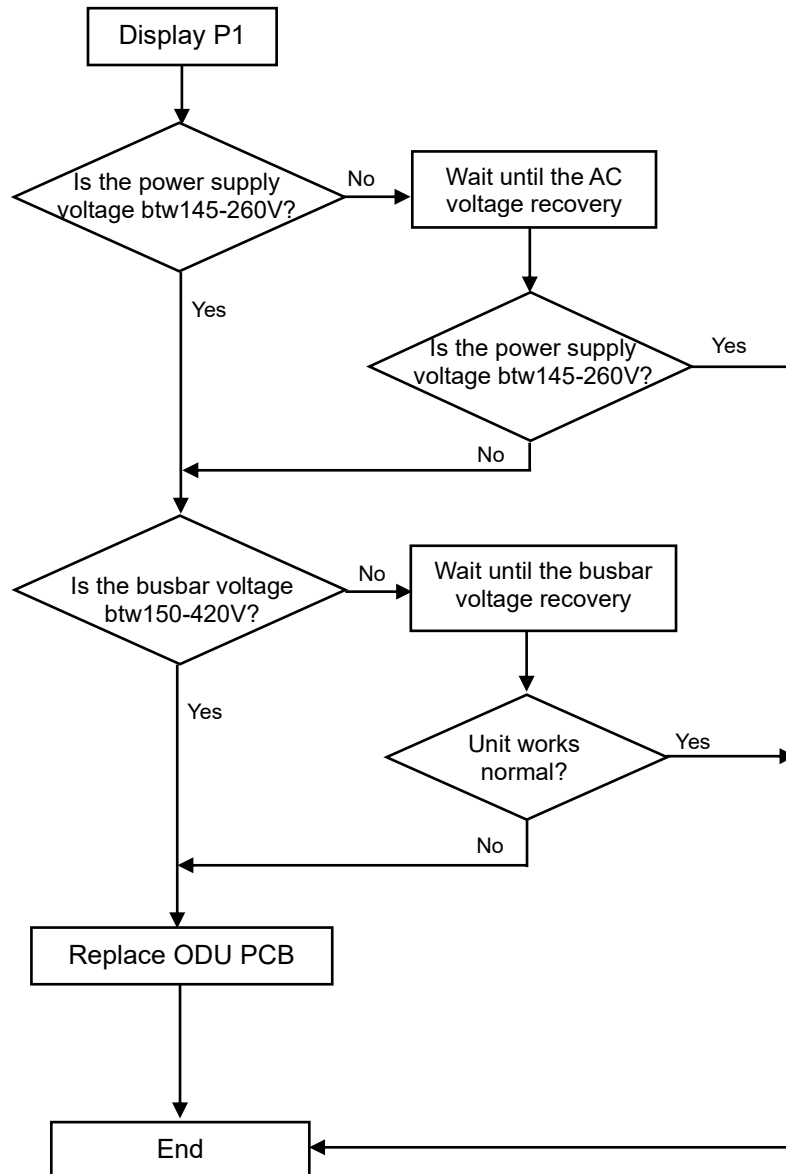


3.2.10 P2---Over Current protection

When the AC unit running current more than I_{max} , it will stop and display P2 protection.

Note: for different AC model, I_{max} has difference value.

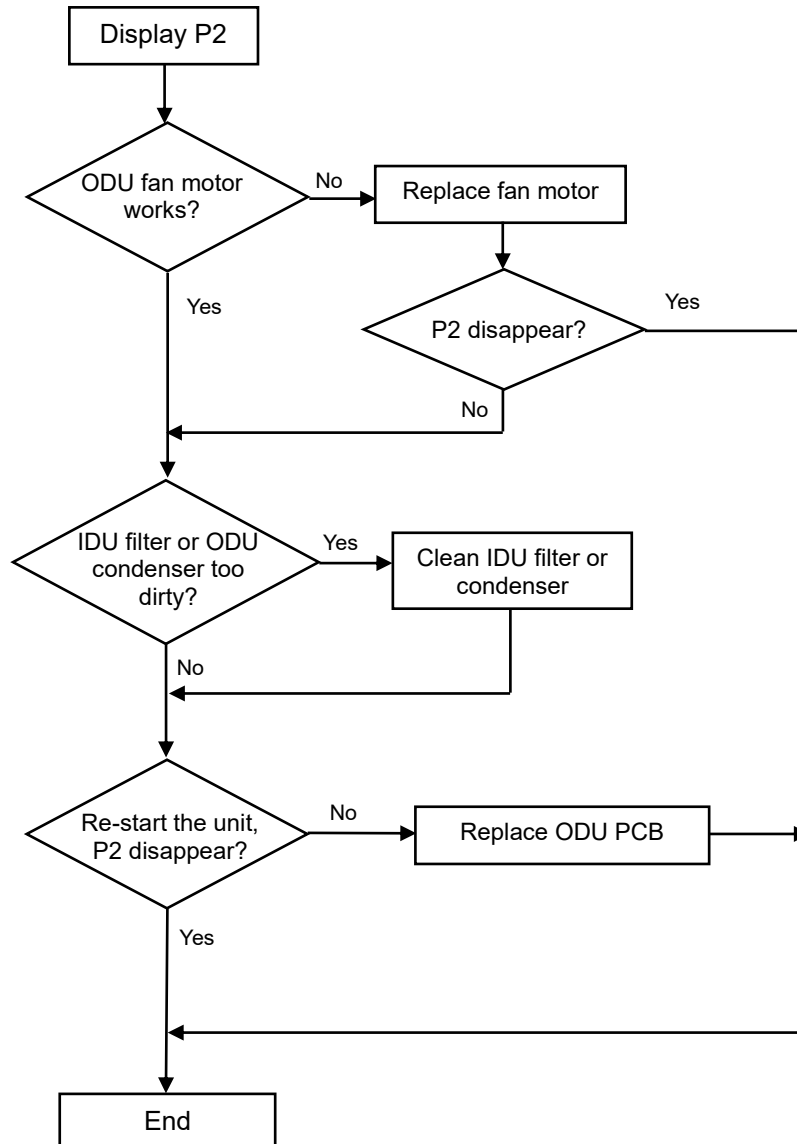


3.2.11 P4 ---ODU Discharge temperature overheating protection

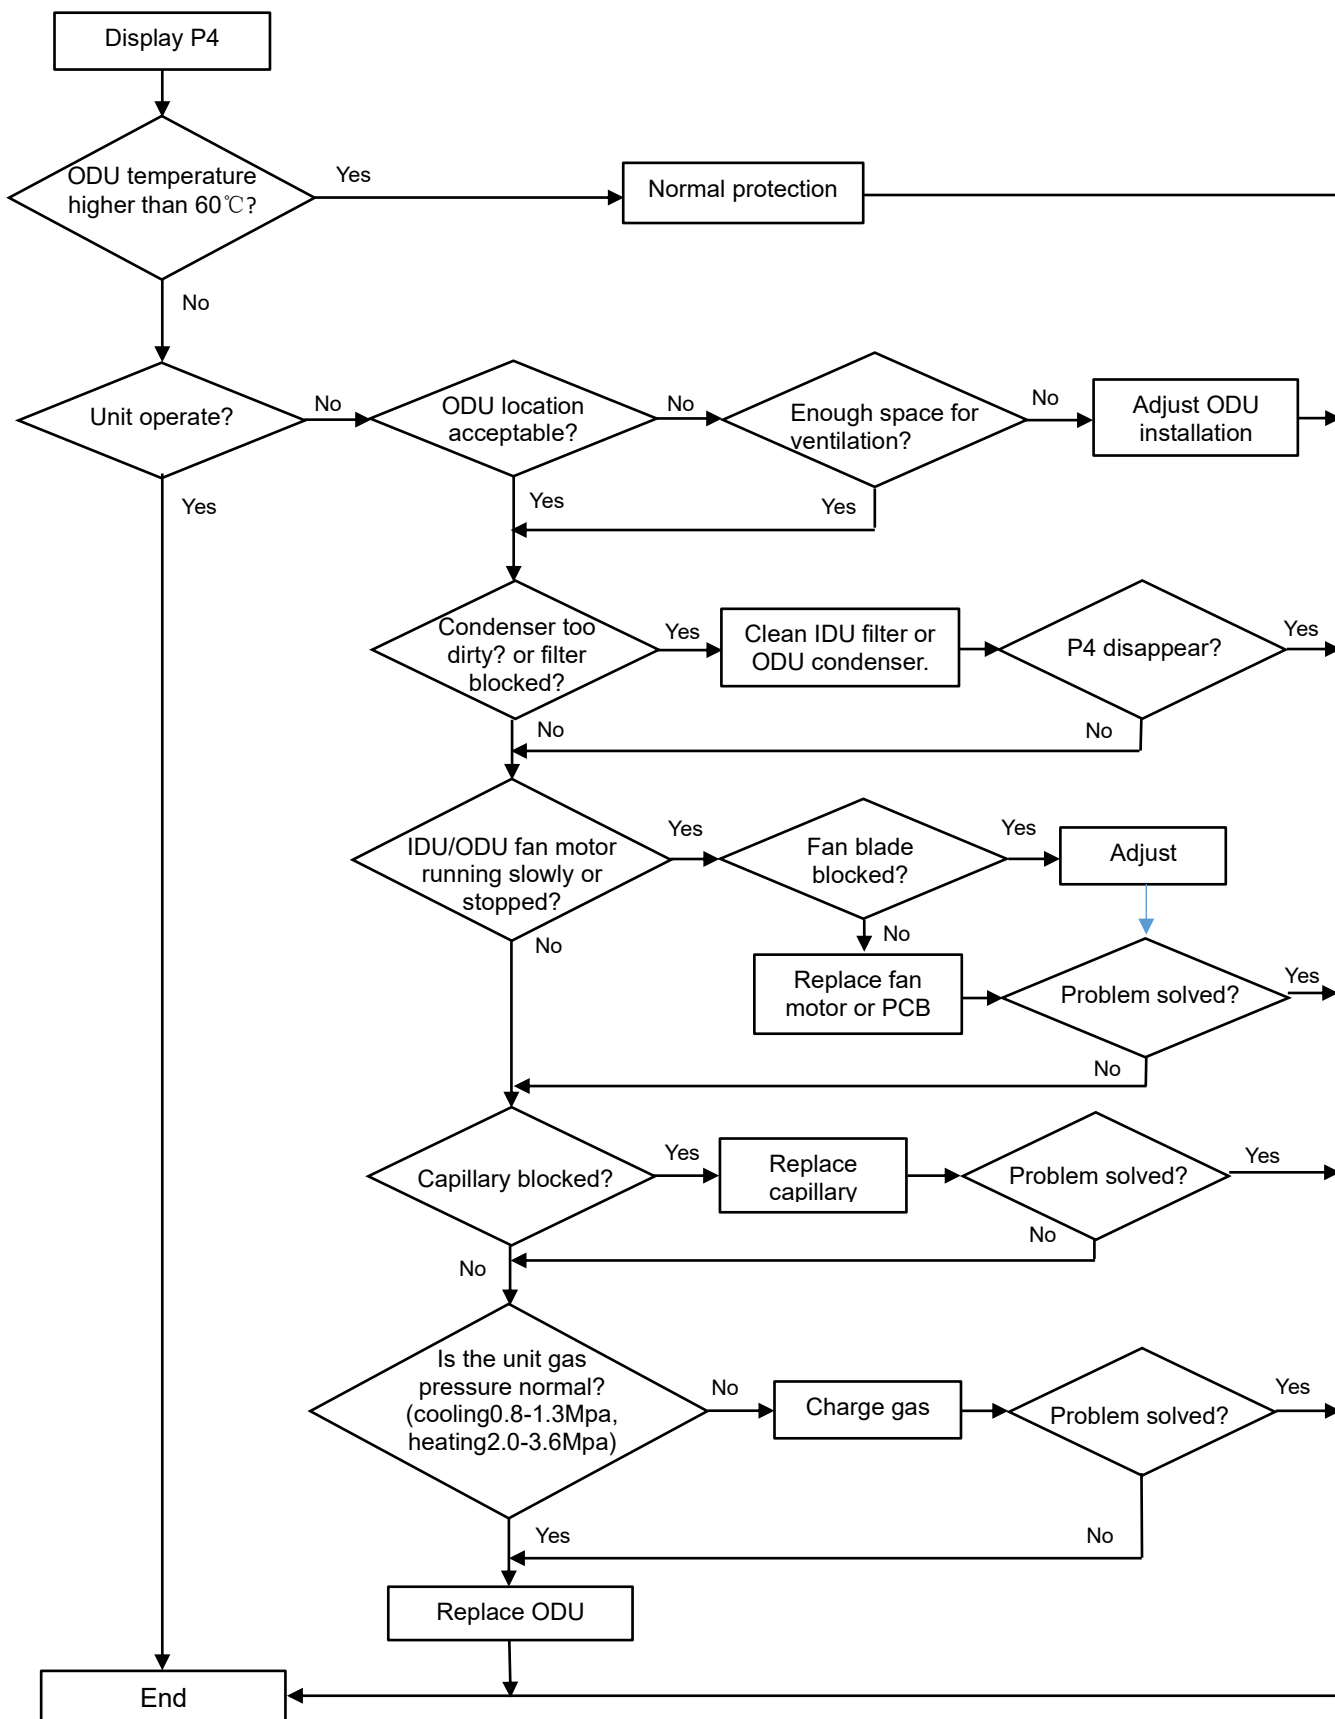


3.2.12 P5---Sub-cooling protection on Cooling/Dry mode

On Cooling or Dry mode, when IDU evaporator coil temperature $IPT < 1^{\circ}\text{C}$ continuously for 3 min after compressor start up for 6 min, CPU will switch off outdoor unit and show P5 failure code.

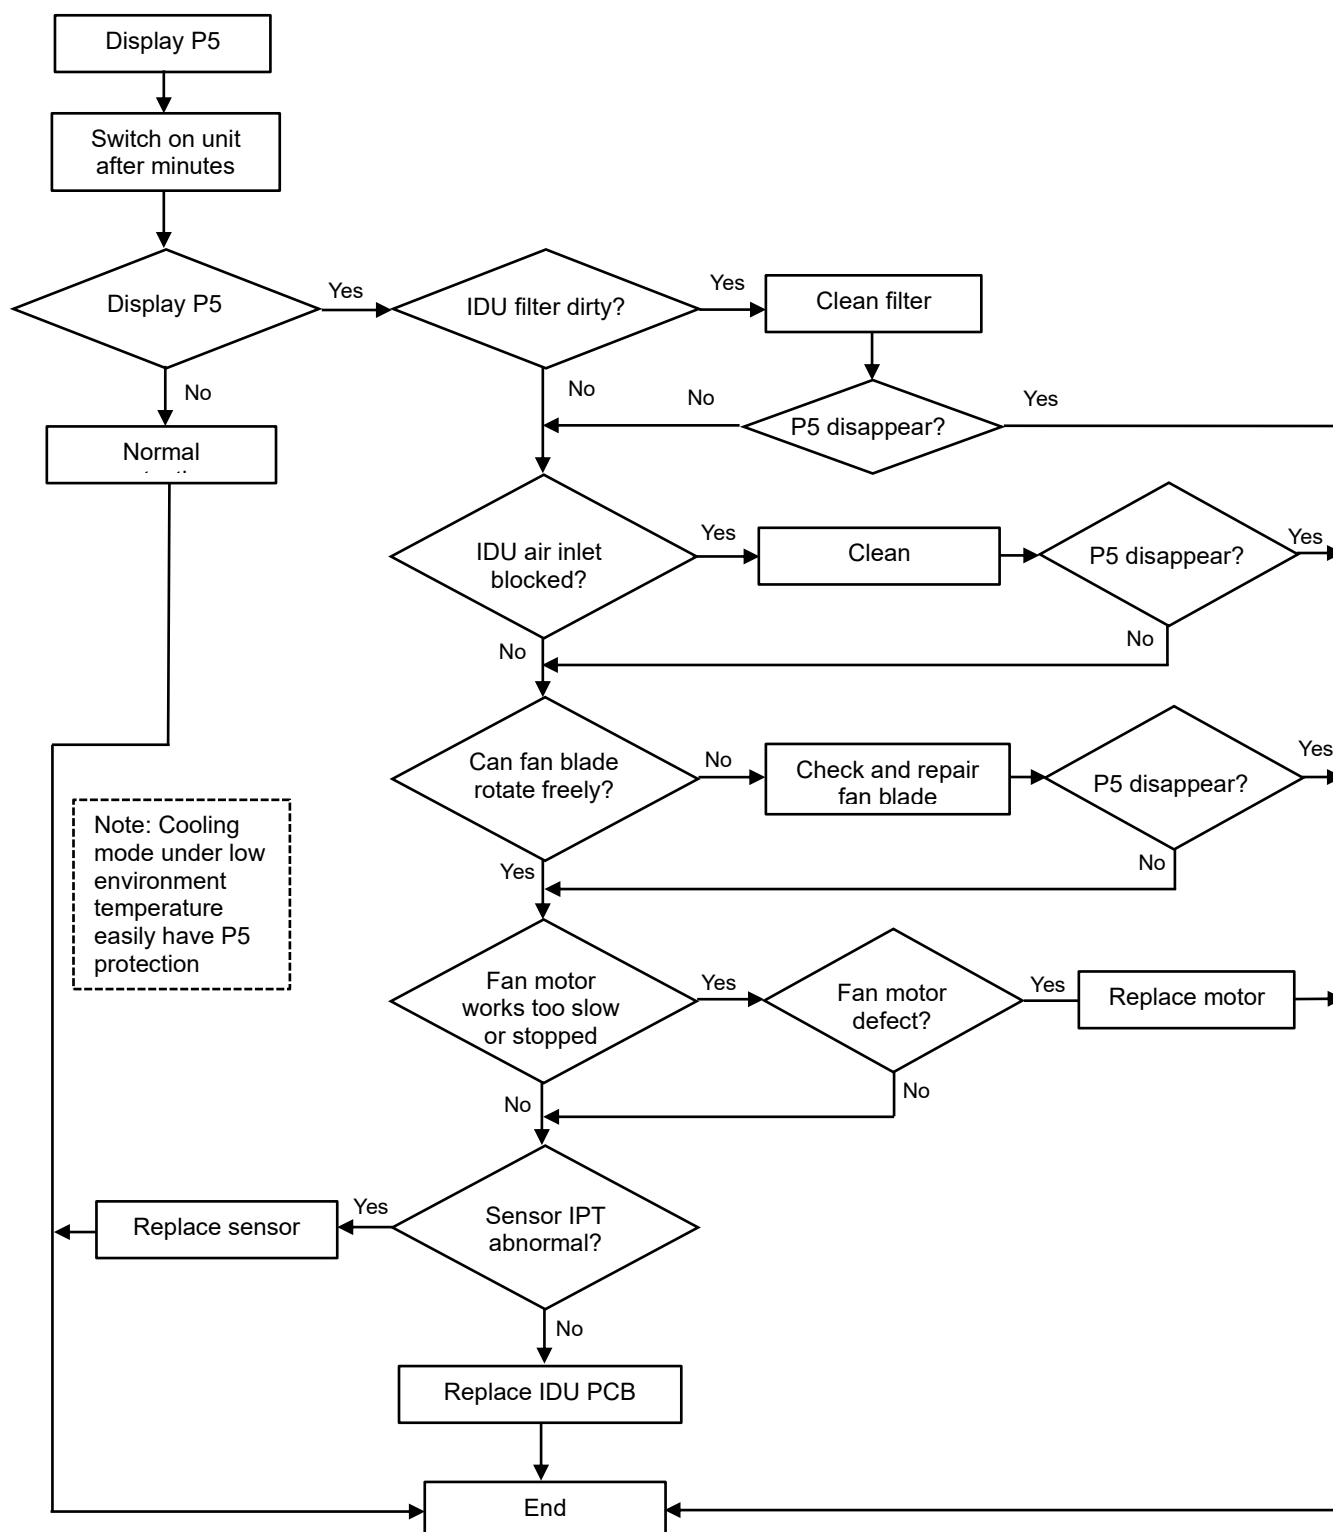


3.2.13 P6---Overheating protection on Cooling mode

On Cooling or Dry mode, when ODU condenser coil temperature $OPT \geq 62^{\circ}\text{C}$, MCU will switch off outdoor unit and show P6 failure code.

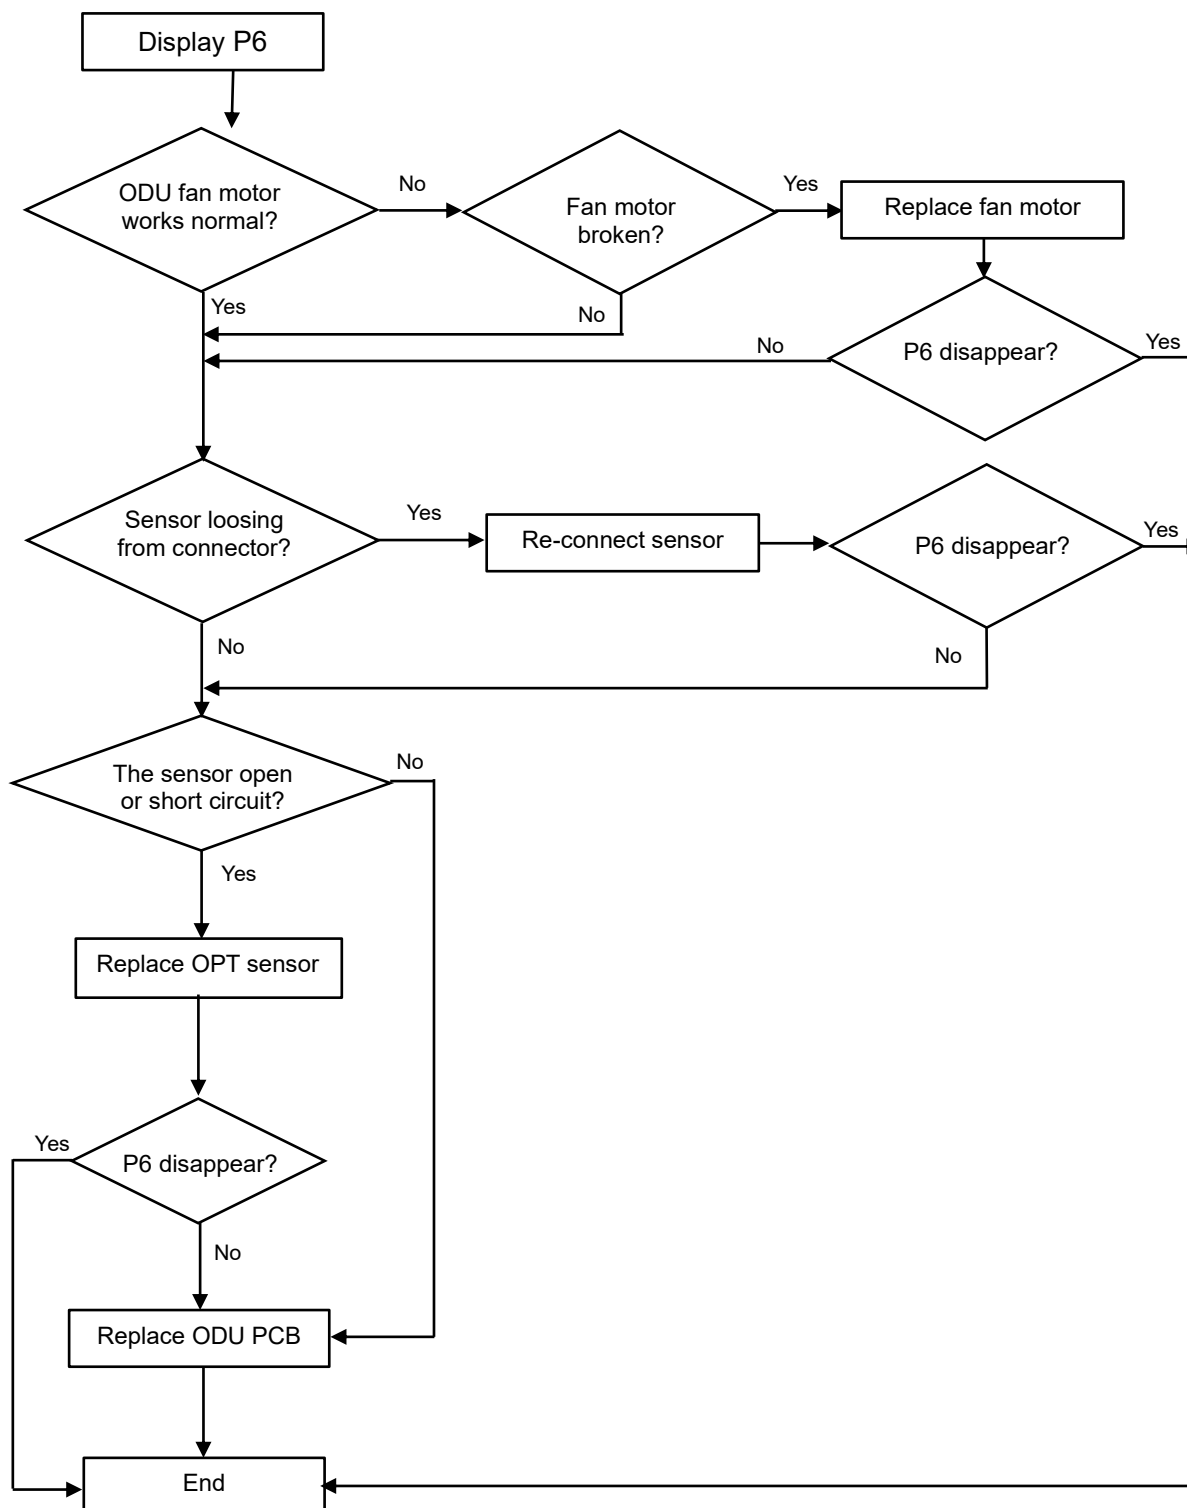

3.2.14 P7---Overheating protection on heating mode

On heating mode, when IDU evaporator coil temperature $\text{IPT} \geq 62^{\circ}\text{C}$, ODU PCB will switch off outdoor unit and show P7 failure code.

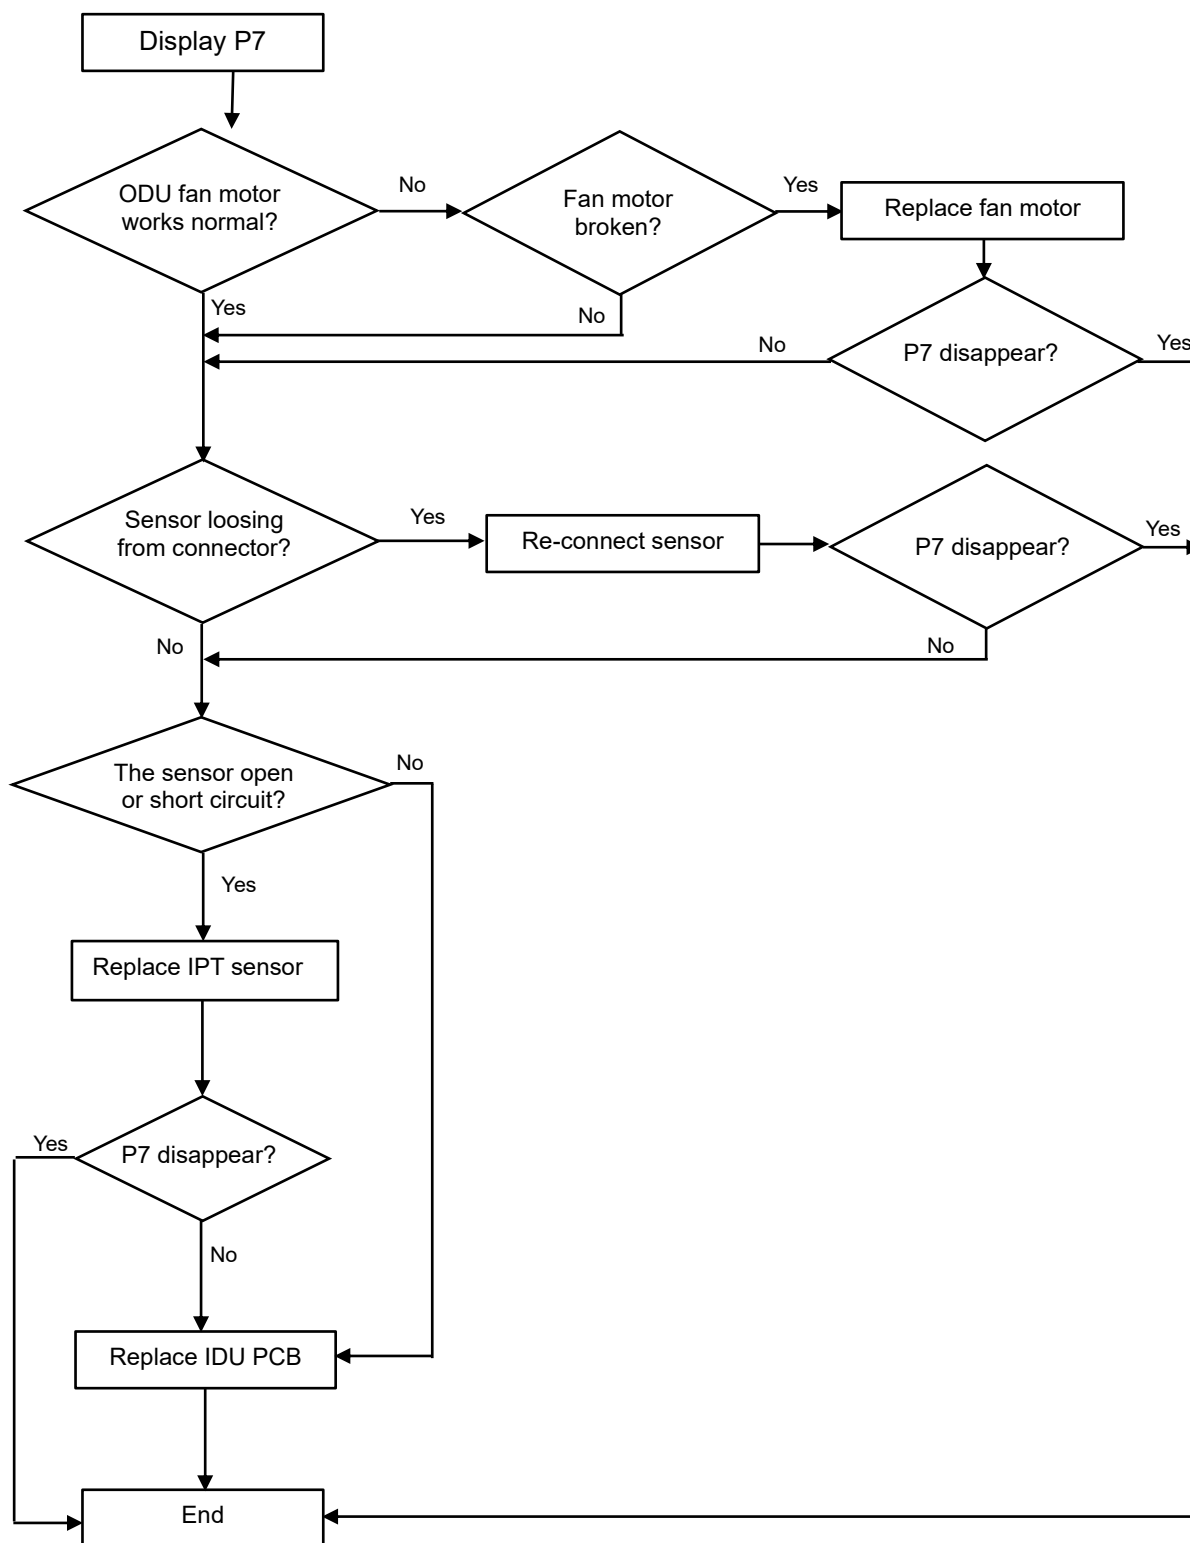

3.2.15 P8---Outdoor Overtemperature/Under-temperature protection


When environment temperature as below condition, the compressor will stop working, after 200s delay, the IDU will show P8 failure code.

(1). **On Cooling or Dry mode:** ODU ambient temperature: $OAT < -20^{\circ}\text{C}$ or $OAT > 63^{\circ}\text{C}$;

(2). **On Heating mode:**

a. $OAT \geq 40^{\circ}\text{C}$ or

b. $30^{\circ}\text{C} < OAT \leq 40^{\circ}\text{C}$ and $RT > 35^{\circ}\text{C}$

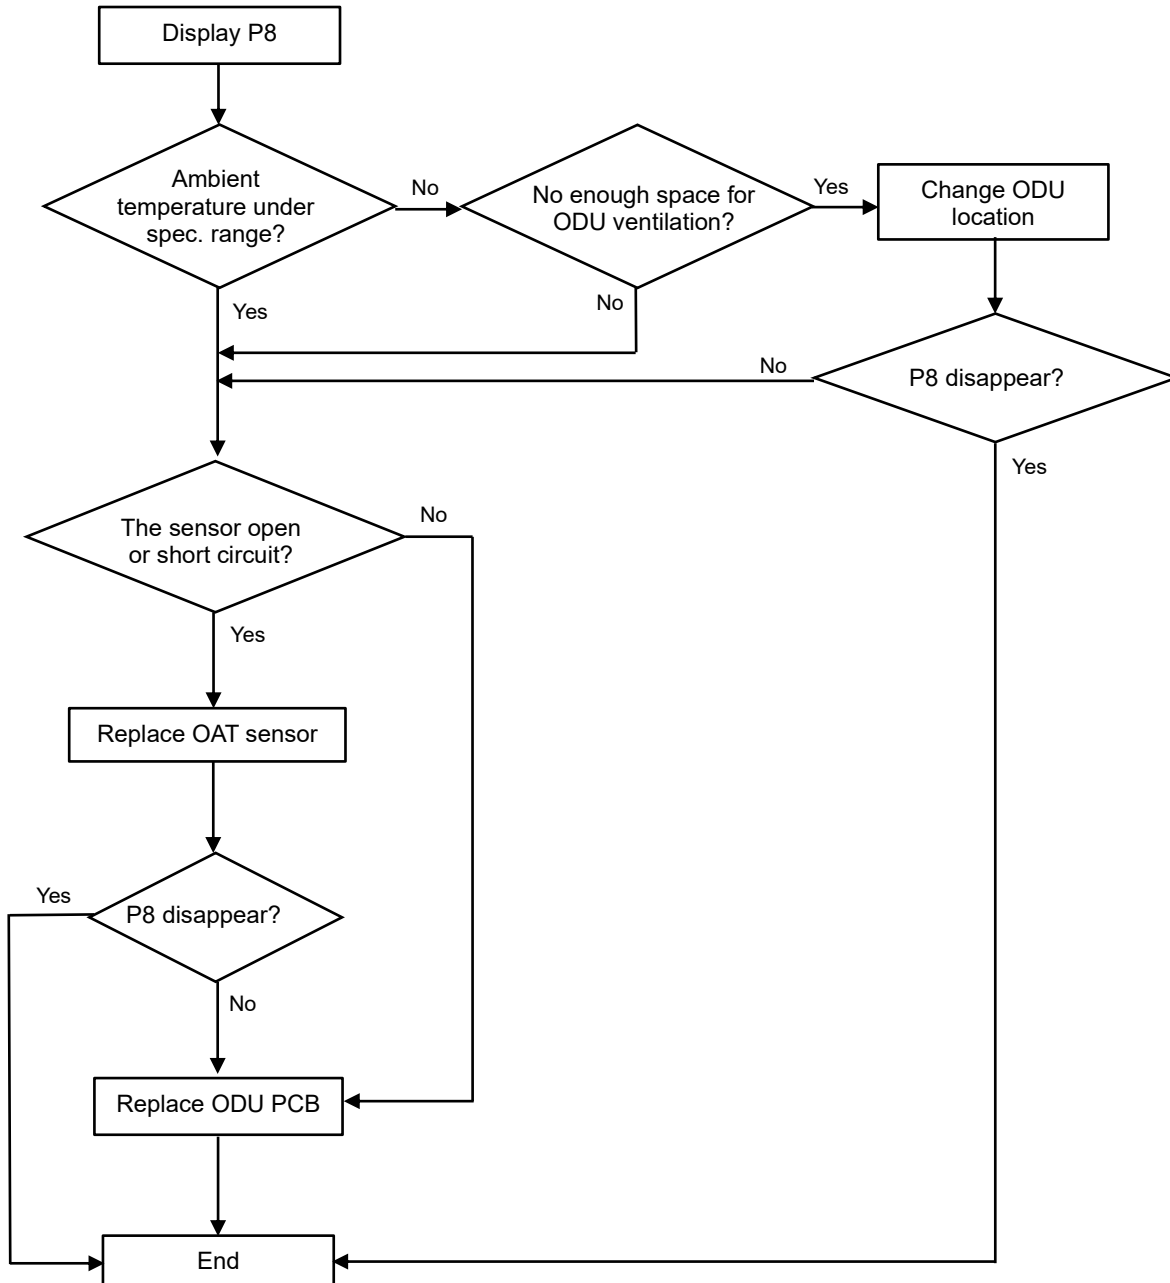


3.2.16 P9---The compressor driving protection (the compressor load abnormal)

When compressor start up or in the process of operation, if:

- (1). MCU can't test the feedback signal from compressor, or
- (2). Tested a abnormal signal from compressor, or
- (3). The compressor startup abnormal.


The outdoor unit will shut off, and show P9 protection.

(The unit will re-startup 6 times continuously, if it still can't work normal, then show P9 code)

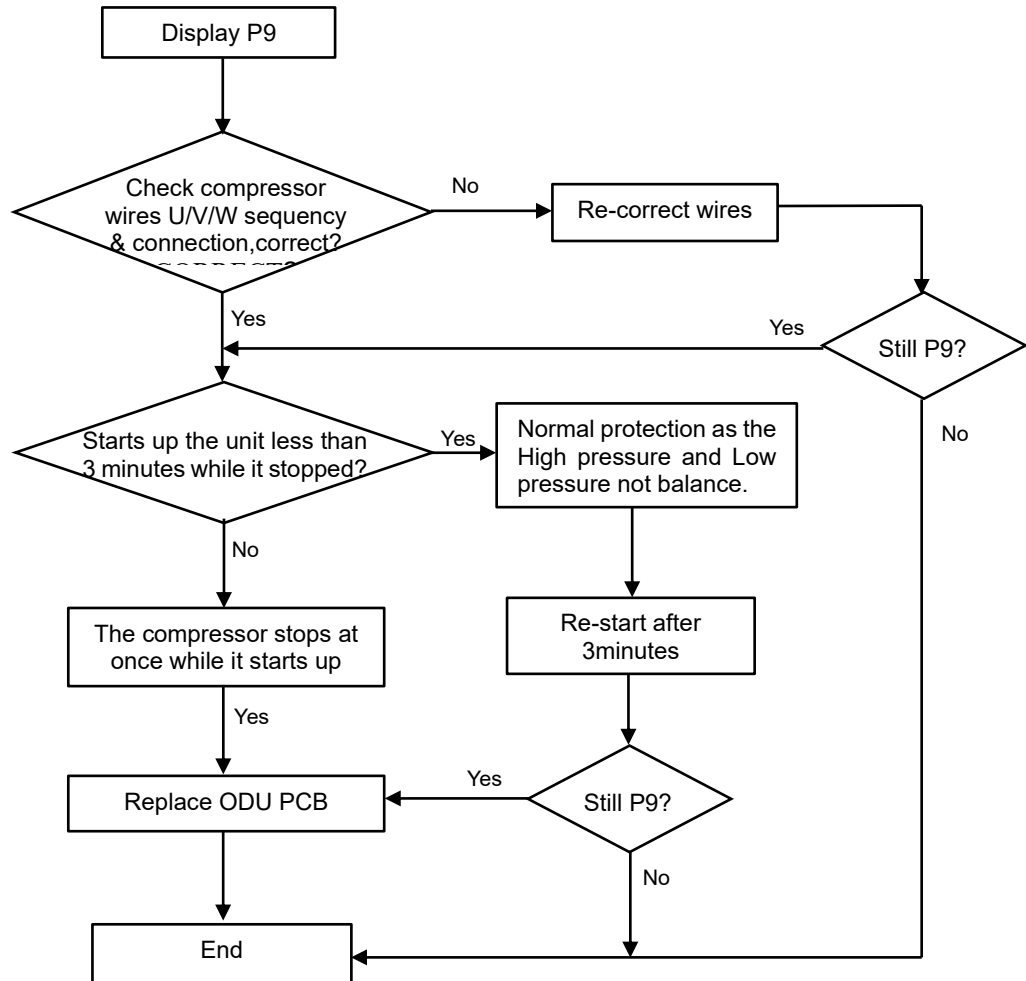


3.2.17 F4---Cooling system Gas flow abnormal protection

When compressor startup, unit will check the variation of IDU coil temperature. If there is mistake installer forgetting to open the 2-way or 3-way valve on ODU, the gas can't flow in the cooling system, it will show F4 protection.

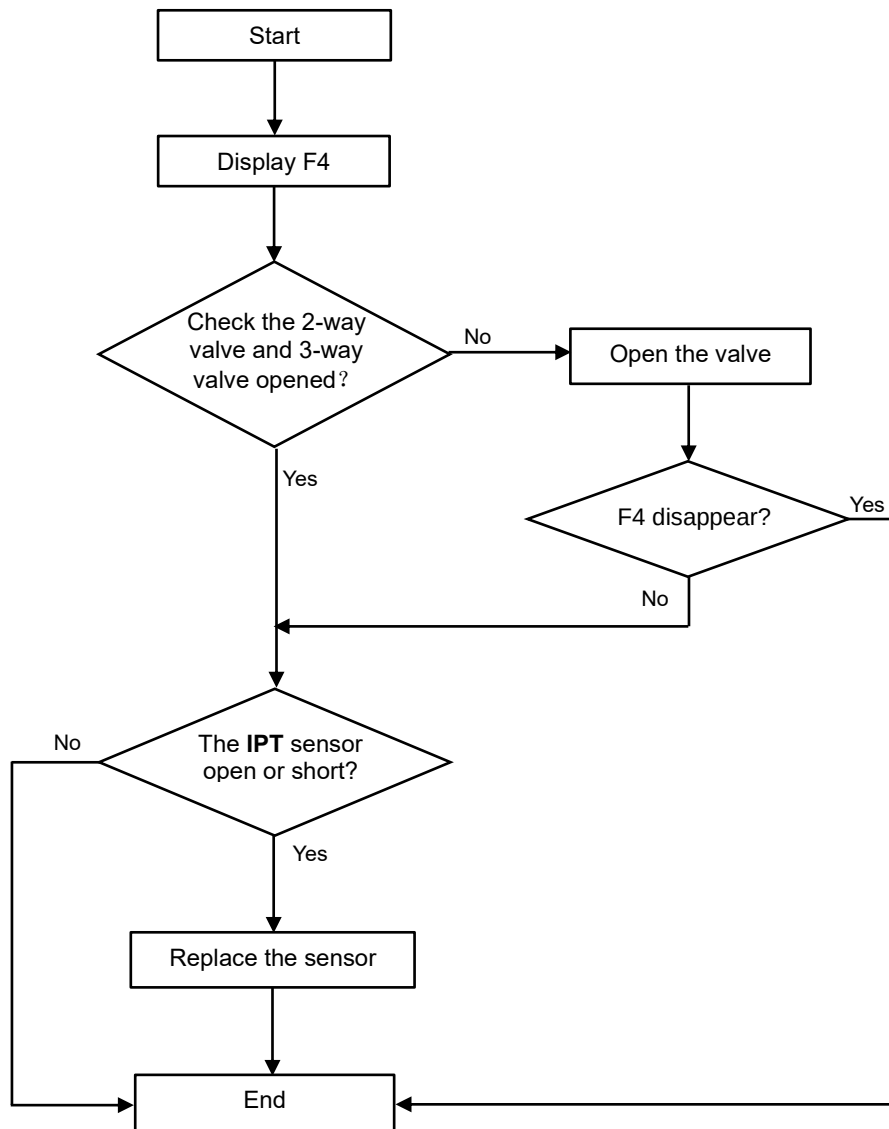


3.2.18 F5---PFC Protection

PFC Overcurrent protection

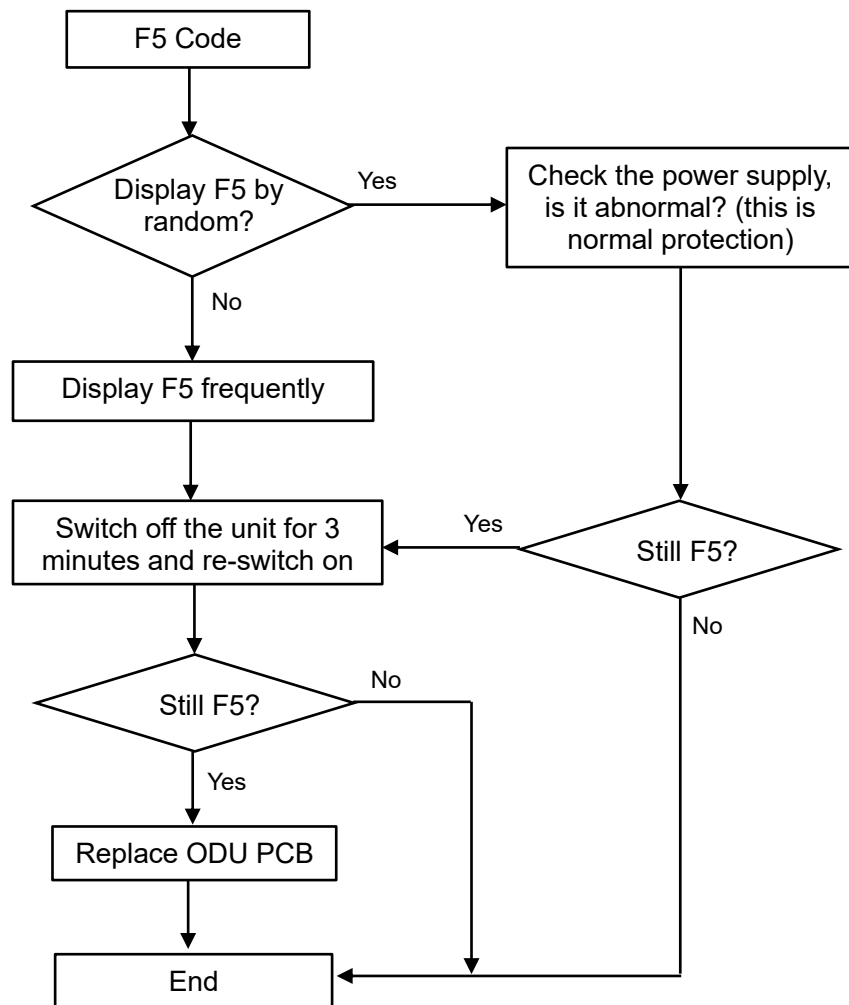


3.2.19 F6 The Compressor Lack of phase / Anti-phase protection.

If ODU PCB can't test one, or even three phase of compressor current, it will show F6 protection.

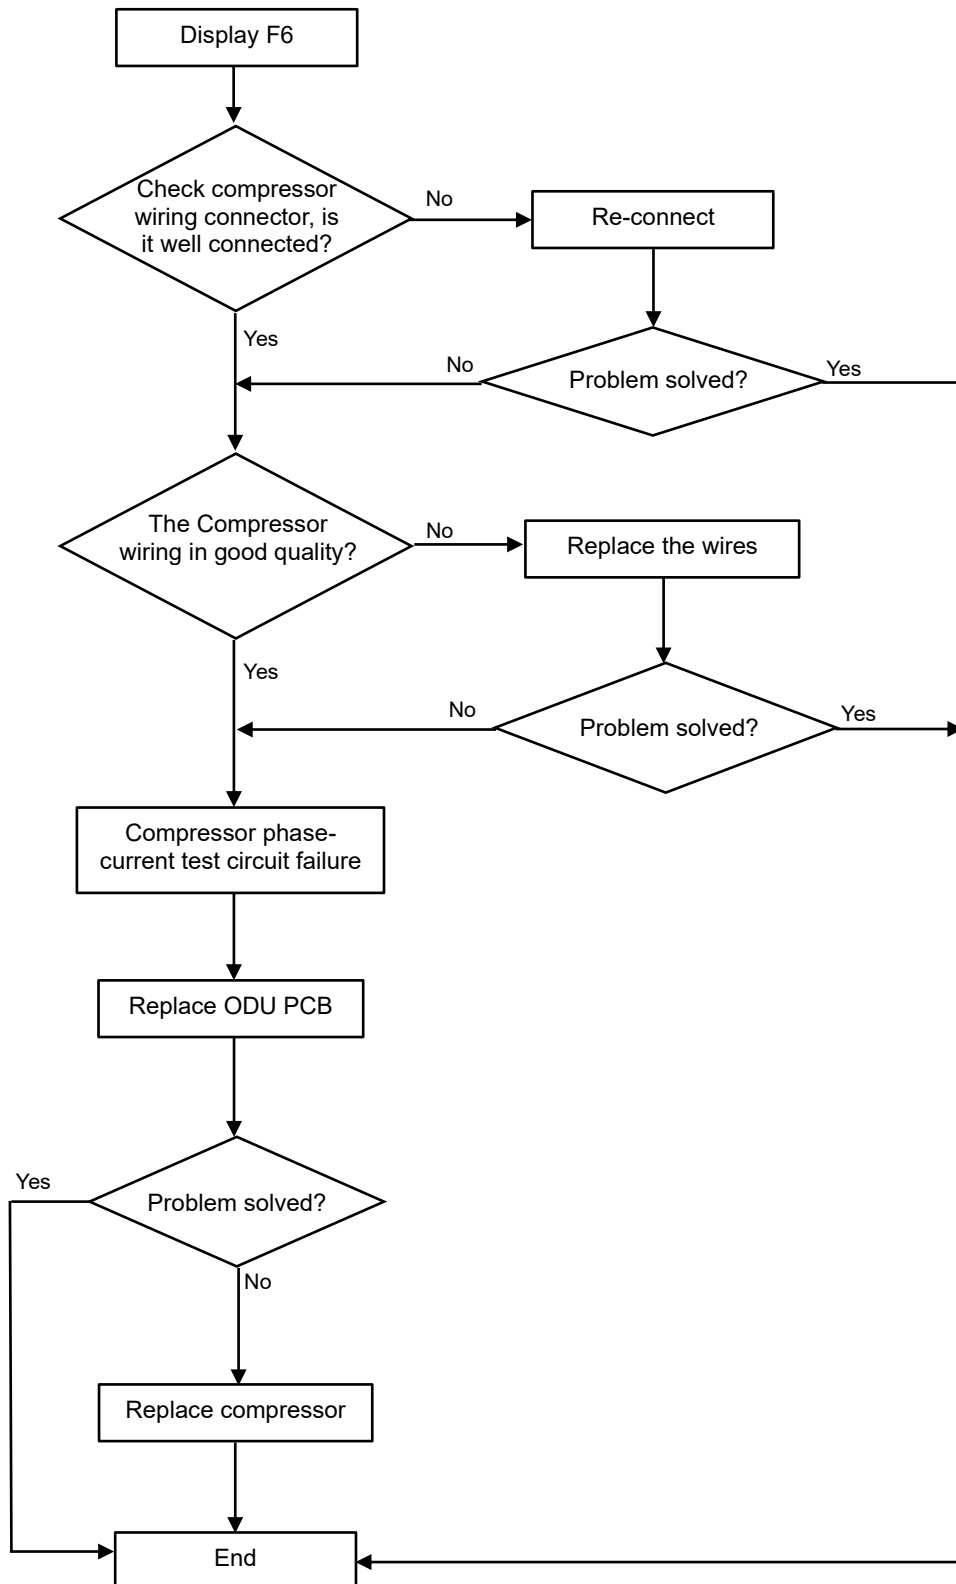


3.2.20 F7---Module temperature protection.

IPM overtemperature protection, when IPM temperature more than 95℃, it will show F7.

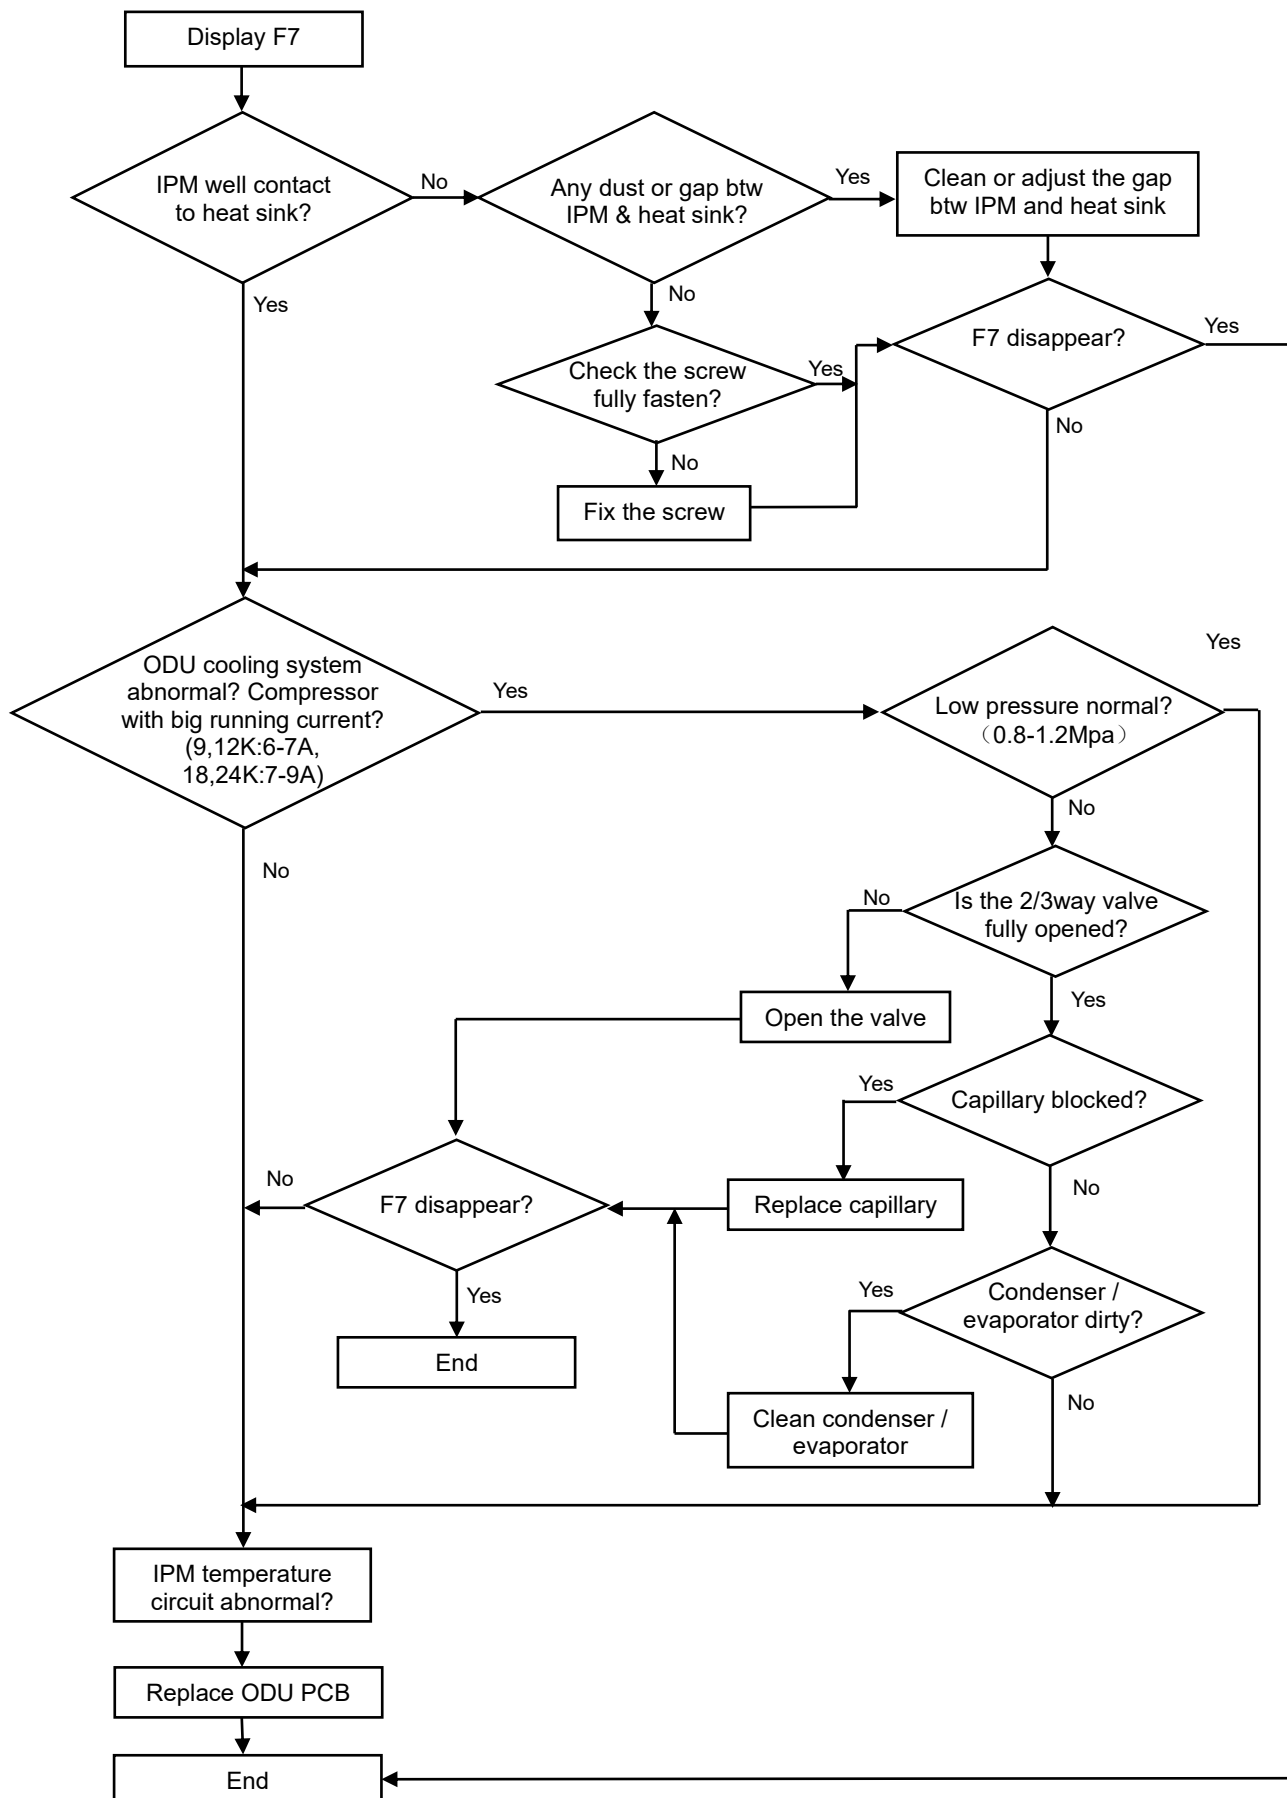


3.2.21 F8---4-Way Valve Reversing abnormal

On heating mode, if IDU Coil temperature tested lower than Room temperature 5℃ or even more after compressor works for 8min, unit will show F8 code.

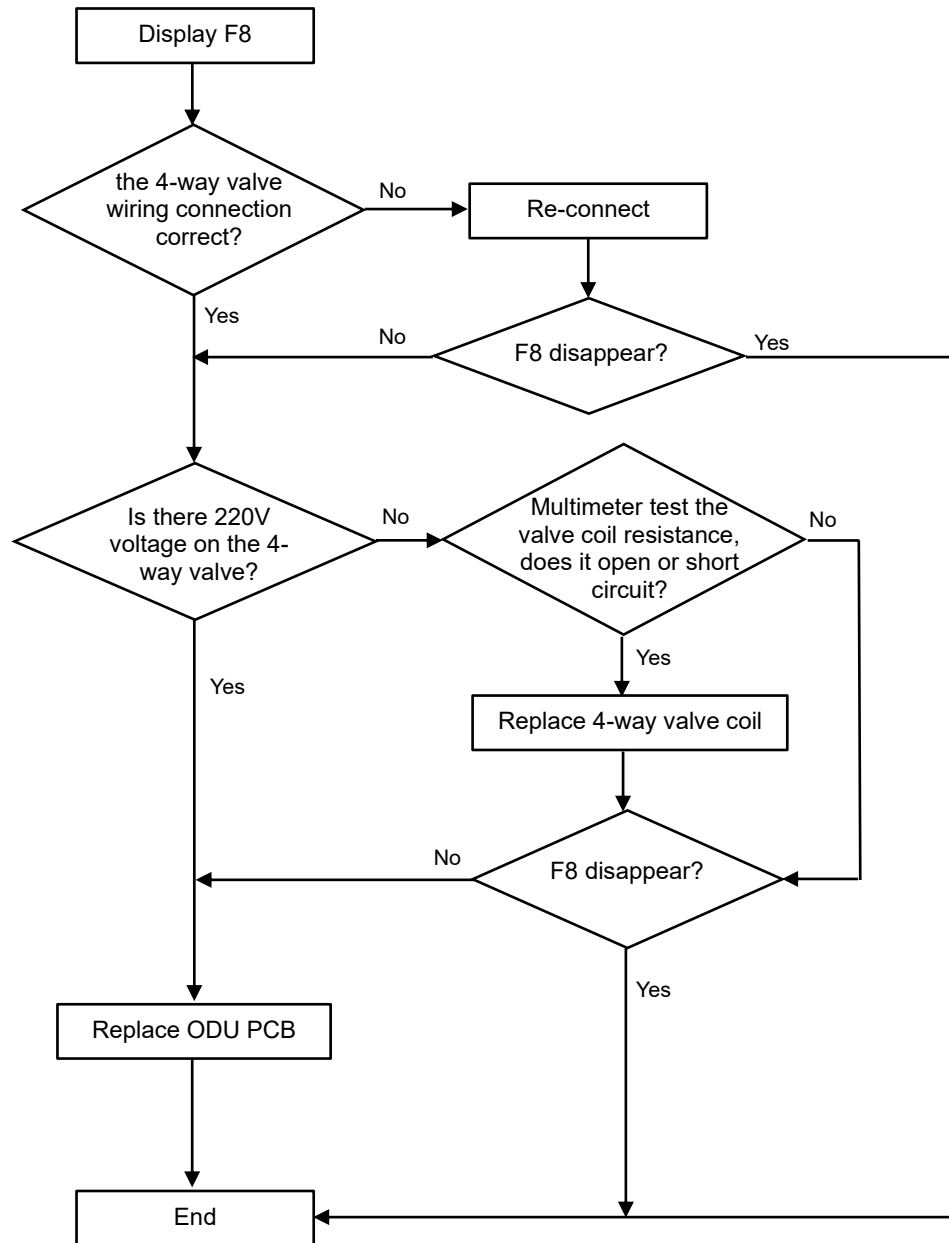


3.2.22 Fy--- Gas leakage protection

After compressor works in high frequency for 9 min, if the temperature on IDU evaporator & ODU condenser has only a little variation comparing previous, but, the compressor discharge temperature on high level, then the unit will show Fy failure code.

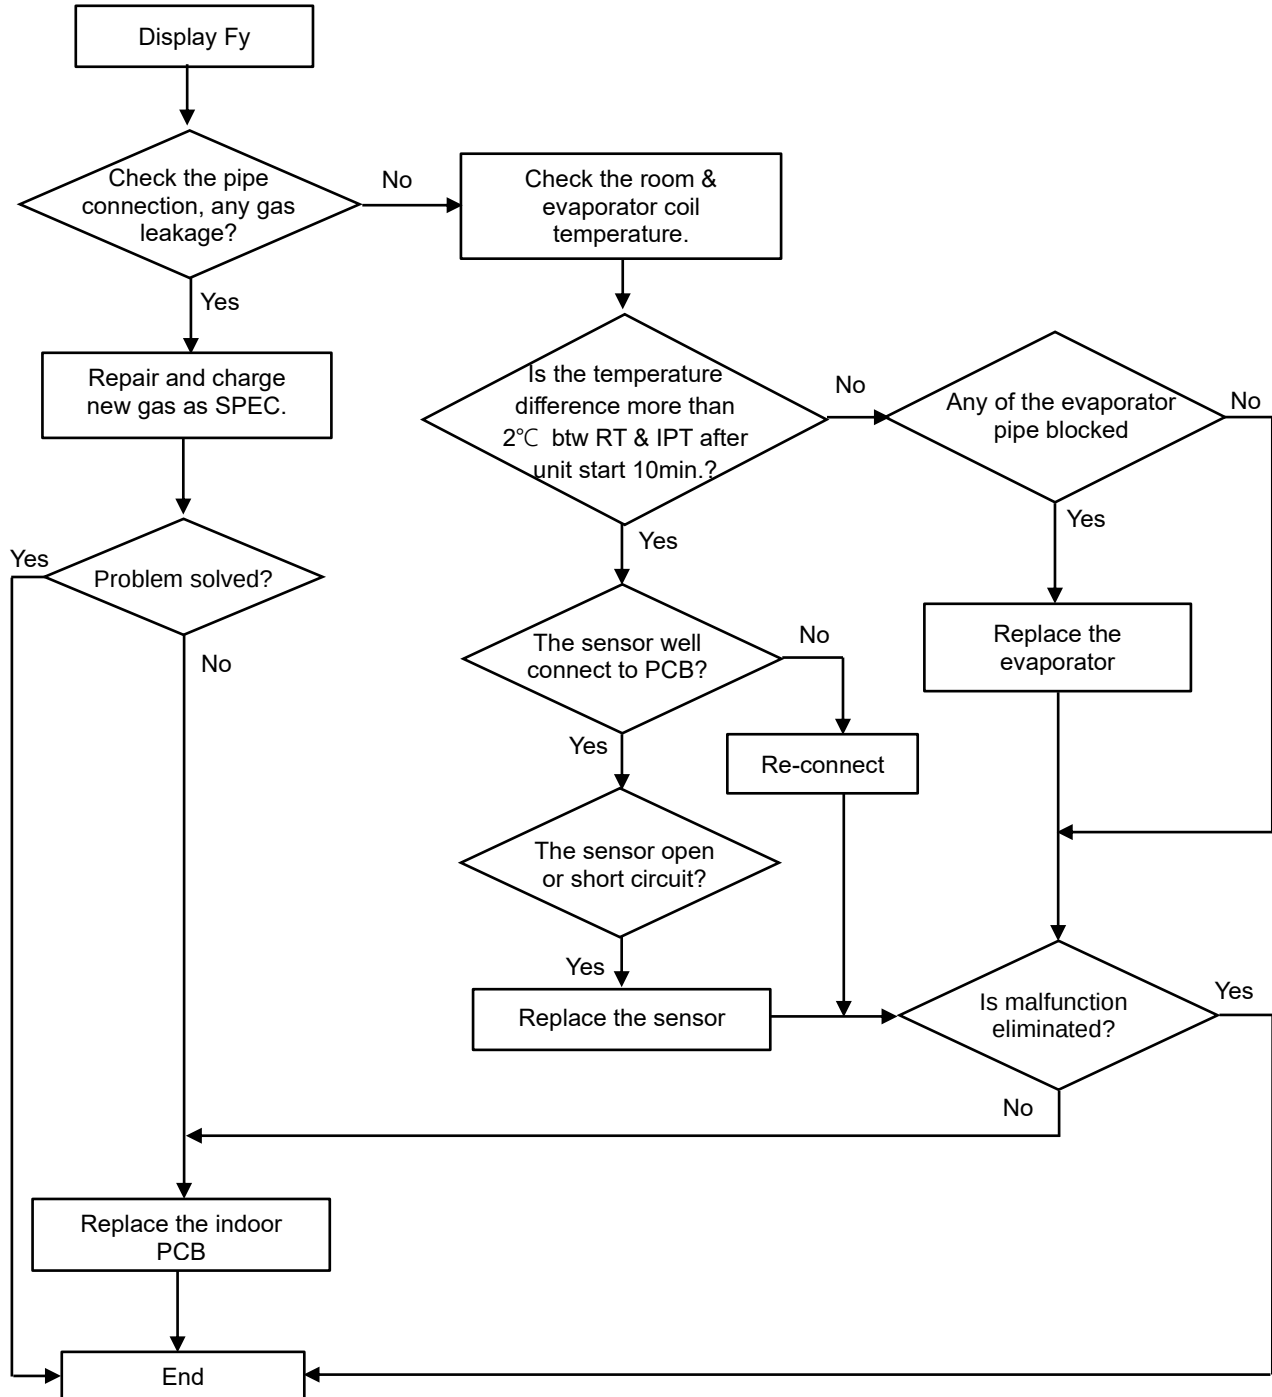

4. Exploded view and parts list


Indoor Unit- 9K 230V

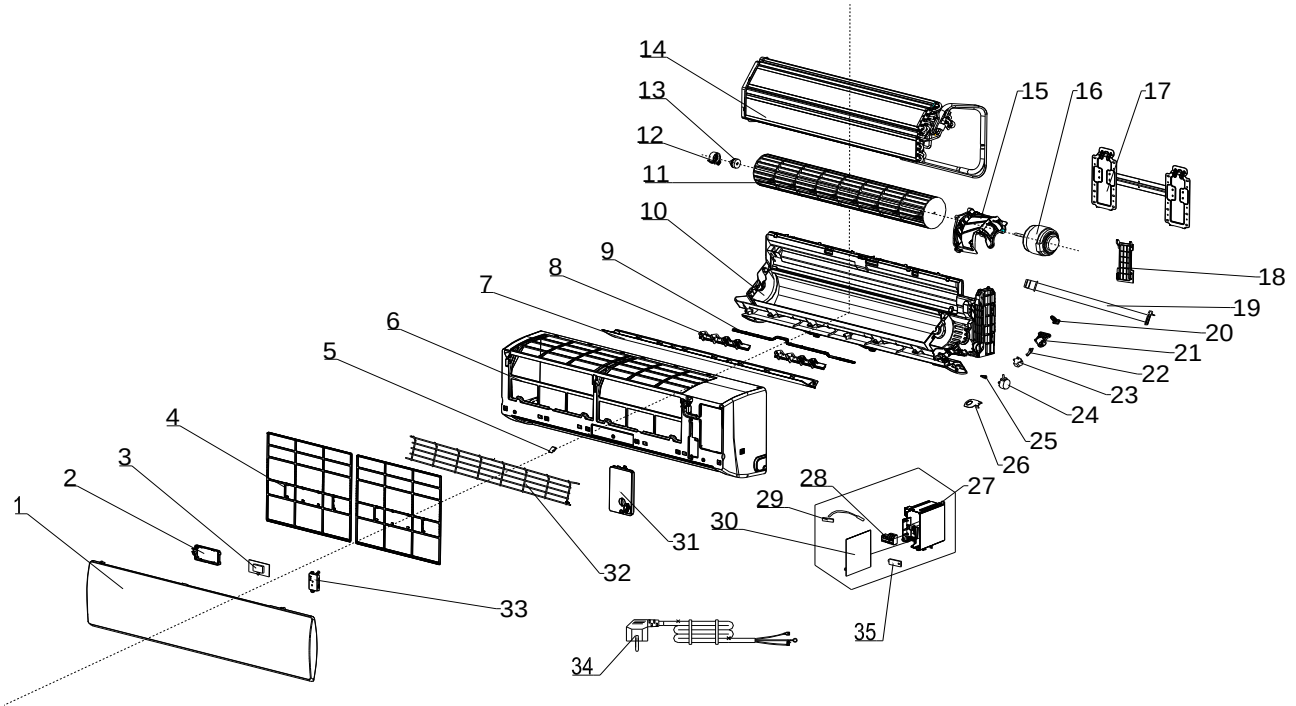

No.	Part No.	Part Name	Q'ty	Remark
1	41106-002054	Front Panel	1	
2	42003-000001	Display PCB Box	1	
3	31102-000085	Display PCB	1	
4	42008-000039	Air Filter	2	
5	41108-000066	Screw Cover	1	
6	41106-002375	Face Frame	1	
7	41103-000102	Vane	1	
8	41101-000033	Vertical Vane Assembly	2	
9	41101-000127 41101-000120	Vertical Vane Connector	1	
10	41102-000113	Base	1	
11	42004-000001	Cross Fan	1	
12	41101-000251	Bearing Mount Supporter	1	
13	42007-000001	Bearing Mount	1	
14	92011-003149	Evaporator	1	
15	42003-000051	Indoor Motor Cover	1	
16	22001-000307	Indoor Motor	1	
17	41109-000041	Installation Plate	1	
18	41101-000242	In And Out Pipe Fixer	1	
19	42009-000011	Drainage Hose	1	
20	92012-000185	Drainage Hose Plug	1	
21	41108-000118	Step Motor Supporter	1	
22	41108-000053	Step Motor connector	1	
23	22001-000318	Step Motor	1	
24	22001-000313	Vane Motor	1	

25	41101-000252	Vane Motor Connector	1	
26	41105-000283	Power Cord Mounting Broad	1	
27	41105-000134	Electrical Box	1	
28	11304-100063	Terminal	1	
29	10104-100014	Indoor Sensor Assembly	1	
30	31101-000232	Main PCB	1	
31	41211-000077	Electrical Box Cover	1	
32	41103-000475	Air Outlet Grill	1	
33	32001-000094	WIFI	1	
34	22007-000111	Power Supply Cord	1	
35	42001-000103	Cable Clamp	1	
36	22013-001263	Remote Controller	1	Not shown in Explosion view
37	A1101-001823	Indoor Carton	1	Not shown in Explosion view
38	41110-000230	Left Foaming	1	Not shown in Explosion view
49	41110-000274	Right Foaming	1	Not shown in Explosion view


Outdoor Unit- 9K 230V

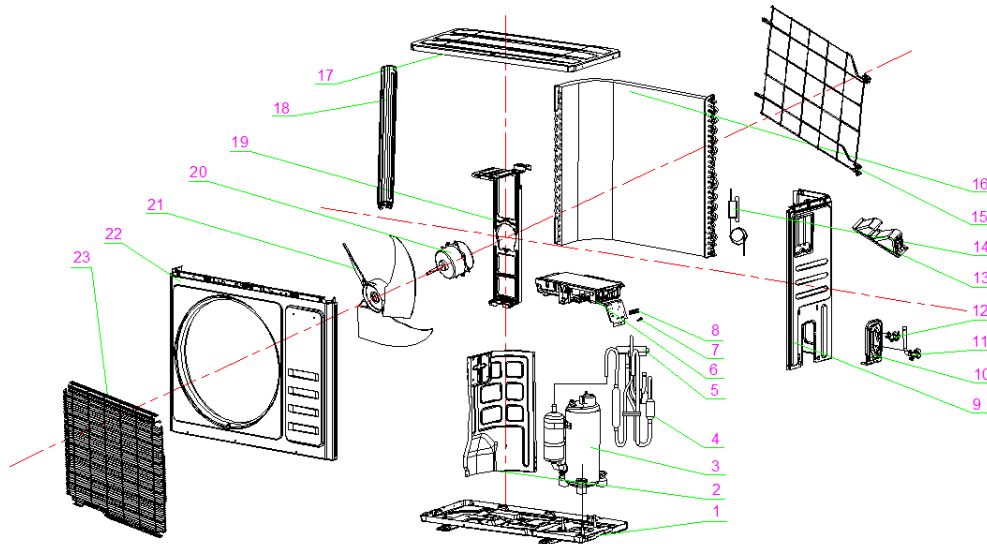

No	Part No.	Part Name	Q'ty	Remark
1	41202-000640	Base	1	
2	41208-001082	Partition plate	1	
3	92014-000950	Compressor and accessories	1	
4	92007-021496	Four-way Valve Pipe Assembly	1	
5	92007-021497	Four-way Valve	1	
6	31201-003354	Outdoor control assembly	1	
7	42001-000036	Clamp	1	
8	11304-100117	Terminal	1	
9	41205-000638	Right Plate	1	
10	41204-000018	Outdoor motor capacitor	1	
11	92008-000146	Three-way Valve	1	
12	92008-000051	Two-way Valve	1	
13	41201-000106	Electrical Box Cover	1	
14	92007-009795	Capillary assembly	1	
15	42011-000184	Rear protective net	1	
16	92011-007726	Condenser	1	
17	41207-000029	Top Cover	1	

18	41205-000133	Left support bar	1	
19	41203-000055	Outdoor Motor Supporter	1	
20	22001-000555	Outdoor Motor	1	
21	42004-000107	Propeller fan	1	
22	41206-000052	Front plate	1	
23	42011-000038	Fan guard	1	


Indoor Unit- 9K 115V

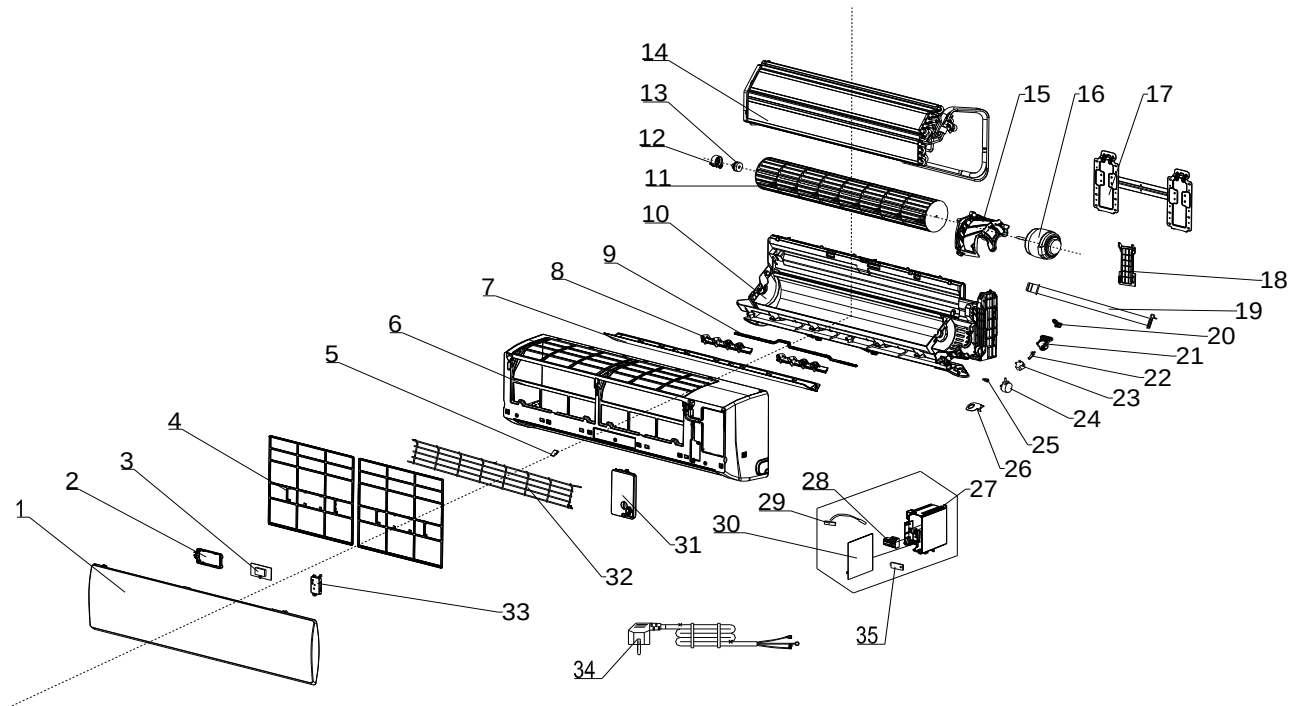

No.	Part No.	Part Name	Q'ty	Remark
1	41106-002054	Front Panel	1	
2	42003-000001	Display PCB Box	1	
3	31102-000085	Display PCB	1	
4	42008-000039	Air Filter	2	
5	41108-000066	Screw Cover	1	
6	41106-002375	Face Frame	1	
7	41103-000102	Vane	1	
8	41101-000033	Vertical Vane Assembly	2	
9	41101-000127 41101-000120	Vertical Vane Connector	1	
10	41102-000113	Base	1	
11	42004-000001	Cross Fan	1	
12	41101-000251	Bearing Mount Supporter	1	
13	42007-000001	Bearing Mount	1	
14	92011-003149	Evaporator	1	
15	42003-000051	Indoor Motor Cover	1	
16	22001-000307	Indoor Motor	1	
17	41109-000041	Installation Plate	1	
18	41101-000242	In And Out Pipe Fixer	1	
19	42009-000011	Drainage Hose	1	
20	92012-000185	Drainage Hose Plug	1	


21	41108-000118	Step Motor Supporter	1	
22	41108-000053	Step Motor connector	1	
23	22001-000318	Step Motor	1	
24	22001-000313	Vane Motor	1	
25	41101-000252	Vane Motor Connector	1	
26	41105-000283	Power Cord Mounting Broad	1	
27	41105-000134	Electrical Box	1	
28	11304-100063	Terminal	1	
29	10104-100014	Indoor Sensor Assembly	1	
30	31101-000232	Main PCB	1	
31	41211-000077	Electrical Box Cover	1	
32	41103-000475	Air Outlet Grill	1	
33	32001-000094	WIFI	1	
34	22007-000111	Power Supply Cord	1	
35	42001-000103	Cable Clamp	1	
36	22013-001263	Remote Controller	1	Not shown in Explosion view
37	A1101-001823	Indoor Carton	1	Not shown in Explosion view
38	41110-000230	Left Foaming	1	Not shown in Explosion view
39	41110-000274	Right Foaming	1	Not shown in Explosion view

Outdoor Unit- 9K 115V

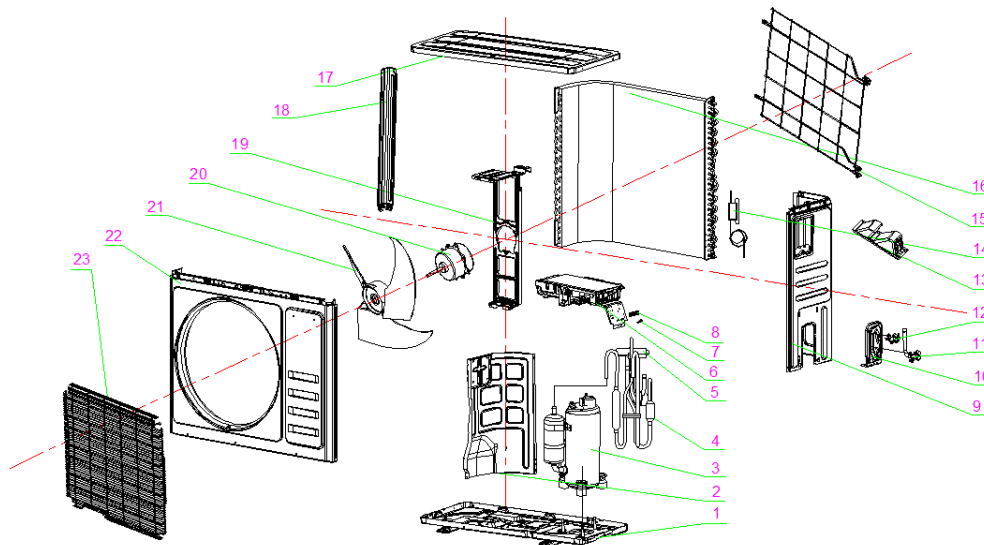


No	Part No.	Part Name	Q'ty	Remark
1	41202-000640	Base	1	
2	41208-001082	Partition plate	1	
3	92014-000950	Compressor and accessories	1	
4	92007-021456	Four-way Valve Pipe Assembly	1	
5	92007-021455	Four-way Valve	1	
6	31201-003233	Outdoor control assembly	1	
7	42001-000036	Clamp	1	
8	11304-100116	Terminal	1	
9	41205-000634	Right Plate	1	
10	41204-000018	Outdoor motor capacitor	1	
11	92008-000146	Three-way Valve	1	
12	92008-000051	Two-way Valve	1	
13	41201-000106	Electrical Box Cover	1	
14	92007-009795	Capillary assembly	1	
15	42011-000184	Rear protective net	1	
16	92011-007726	Condenser	1	
17	41207-000029	Top Cover	1	
18	41205-000133	Left support bar	1	
19	41203-000055	Outdoor Motor Supporter	1	
20	22001-000555	Outdoor Motor	1	
21	42004-000107	Propeller fan	1	
22	41206-000052	Front plate	1	
23	42011-000038	Fan guard	1	

Indoor Unit-KFR- 12K 230V

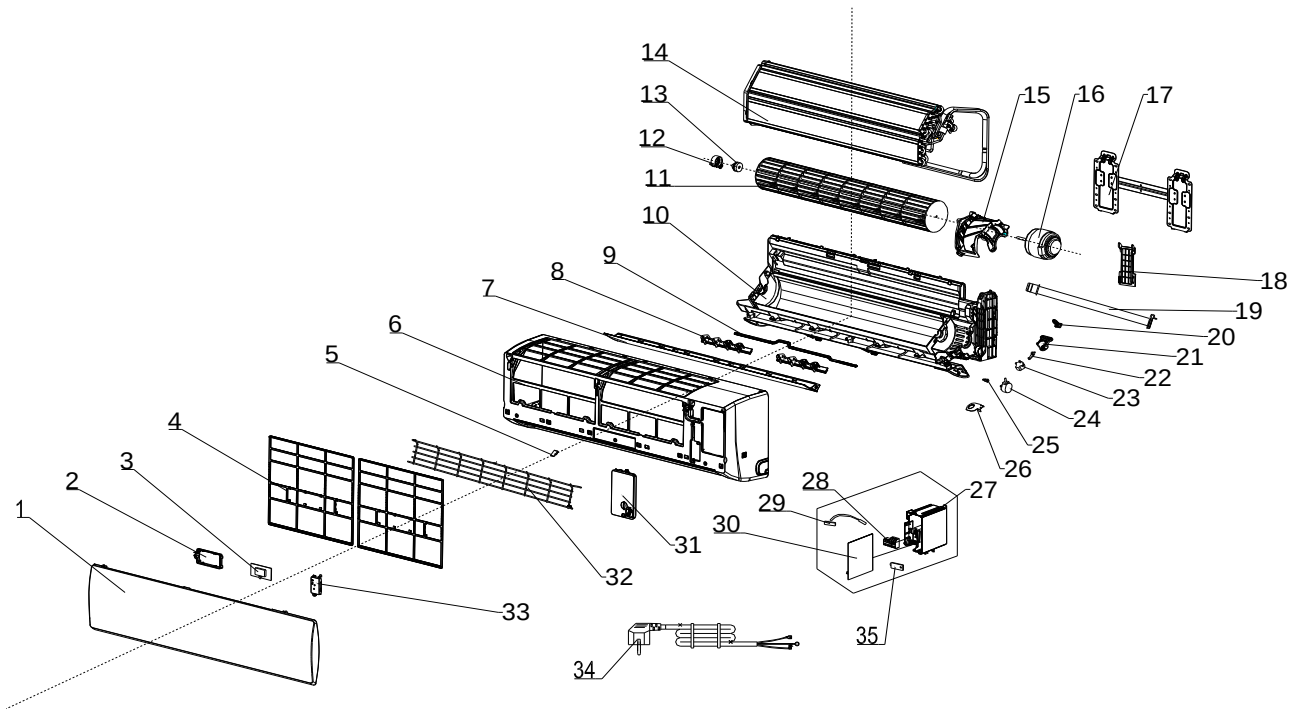


No.	Part No.	Part Name	Q'ty	Remark
1	41106-002054	Front Panel	1	
2	42003-000001	Display PCB Box	1	
3	31102-000085	Display PCB	1	
4	42008-000039	Air Filter	2	
5	41108-000066	Screw Cover	1	
6	41106-002375	Face Frame	1	
7	41103-000102	Vane	1	
8	41101-000033	Vertical Vane Assembly	2	
9	41101-000127 41101-000120	Vertical Vane Connector	1	
10	41102-000113	Base	1	
11	42004-000001	Cross Fan	1	
12	41101-000251	Bearing Mount Supporter	1	
13	42007-000001	Bearing Mount	1	
14	92011-003149	Evaporator	1	
15	42003-000051	Indoor Motor Cover	1	
16	22001-000307	Indoor Motor	1	
17	41109-000041	Installation Plate	1	
18	41101-000242	In And Out Pipe Fixer	1	
19	42009-000011	Drainage Hose	1	
20	92012-000185	Drainage Hose Plug	1	
21	41108-000118	Step Motor Supporter	1	
22	41108-000053	Step Motor connector	1	
23	22001-000318	Step Motor	1	
24	22001-000313	Vane Motor	1	
25	41101-000252	Vane Motor Connector	1	
26	41105-000283	Power Cord Mounting Broad	1	
27	41105-000134	Electrical Box	1	
28	11304-100063	Terminal	1	
29	10104-100014	Indoor Sensor Assembly	1	
30	31101-000232	Main PCB	1	
31	41211-000077	Electrical Box Cover	1	
32	41103-000475	Air Outlet Grill	1	
33	32001-000094	WIFI	1	
34	22007-000111	Power Supply Cord	1	
35	42001-000103	Cable Clamp	1	
36	22013-001263	Remote Controller	1	Not shown in Explosion view
37	A1101-001823	Indoor Carton	1	Not shown in Explosion view
38	41110-000230	Left Foaming	1	Not shown in Explosion view
39	41110-000274	Right Foaming	1	Not shown in Explosion view

Outdoor Unit- 12K 230V

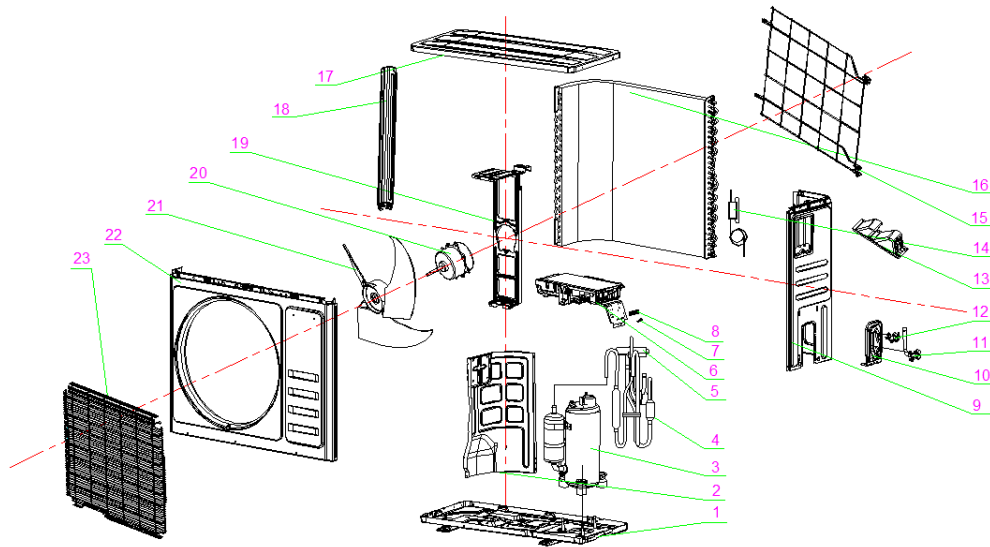

No	Part No.	Part Name	Q'ty	Remark
1	41202-000640	Base	1	
2	41208-001082	Partition plate	1	
3	92014-000760	Compressor and accessories	1	
4	92007-021982	Four-way Valve Pipe Assembly	1	
5	92007-021497	Four-way Valve	1	
6	31201-003356	Outdoor control assembly	1	
7	42001-000036	Clamp	1	
8	11304-100117	Terminal	1	
9	41205-000638	Right Plate	1	
10	41204-000018	Outdoor motor capacitor	1	
11	92008-000146	Three-way Valve	1	
12	92008-000051	Two-way Valve	1	
13	41201-000106	Electrical Box Cover	1	
14	92007-020822	Capillary assembly	1	
15	42011-000184	Rear protective net	1	
16	92011-000706	Condenser	1	
17	41207-000029	Top Cover	1	
18	41205-000133	Left support bar	1	
19	41203-000055	Outdoor Motor Supporter	1	
20	22001-000555	Outdoor Motor	1	
21	42004-000107	Propeller fan	1	
22	41206-000052	Front plate	1	
23	42011-000038	Fan guard	1	


Indoor Unit- 12K 115V

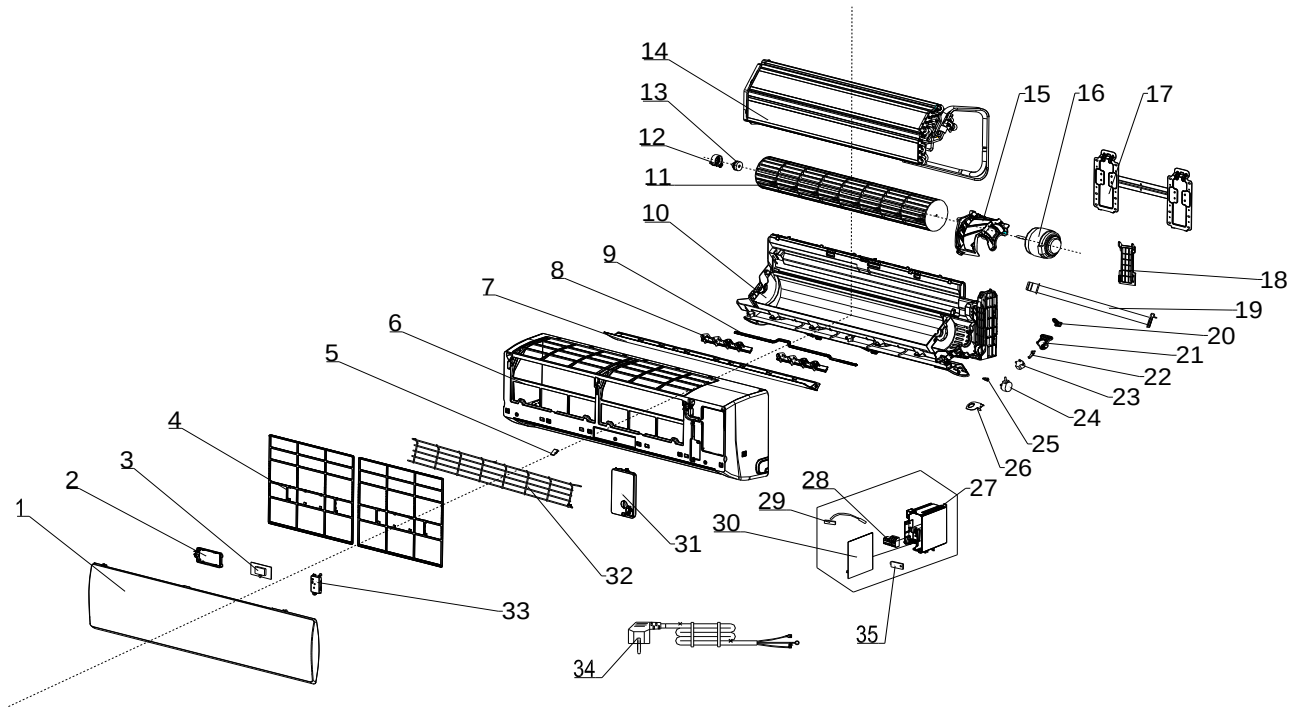

No.	Part No.	Part Name	Q'ty	Remark
1	41106-002054	Front Panel	1	
2	42003-000001	Display PCB Box	1	
3	31102-000085	Display PCB	1	
4	42008-000039	Air Filter	2	
5	41108-000066	Screw Cover	1	
6	41106-002375	Face Frame	1	
7	41103-000102	Vane	1	
8	41101-000033	Vertical Vane Assembly	2	
9	41101-000127 41101-000120	Vertical Vane Connector	1	
10	41102-000113	Base	1	
11	42004-000001	Cross Fan	1	
12	41101-000251	Bearing Mount Supporter	1	
13	42007-000001	Bearing Mount	1	
14	92011-003149	Evaporator	1	
15	42003-000051	Indoor Motor Cover	1	
16	22001-000307	Indoor Motor	1	
17	41109-000041	Installation Plate	1	
18	41101-000242	In And Out Pipe Fixer	1	
19	42009-000011	Drainage Hose	1	
20	92012-000185	Drainage Hose Plug	1	
21	41108-000118	Step Motor Supporter	1	
22	41108-000053	Step Motor connector	1	
23	22001-000318	Step Motor	1	
24	22001-000313	Vane Motor	1	
25	41101-000252	Vane Motor Connector	1	
26	41105-000283	Power Cord Mounting Broad	1	
27	41105-000134	Electrical Box	1	

28	11304-100063	Terminal	1	
29	10104-100014	Indoor Sensor Assembly	1	
30	31101-000232	Main PCB	1	
31	41211-000077	Electrical Box Cover	1	
32	41103-000475	Air Outlet Grill	1	
33	32001-000094	WIFI	1	
34	22007-000111	Power Supply Cord	1	
35	42001-000103	Cable Clamp	1	
36	22013-001263	Remote Controller	1	Not shown in Explosion view
37	A1101-001823	Indoor Carton	1	Not shown in Explosion view
38	41110-000230	Left Foaming	1	Not shown in Explosion view
39	41110-000274	Right Foaming	1	Not shown in Explosion view


Outdoor Unit- 12K 115V

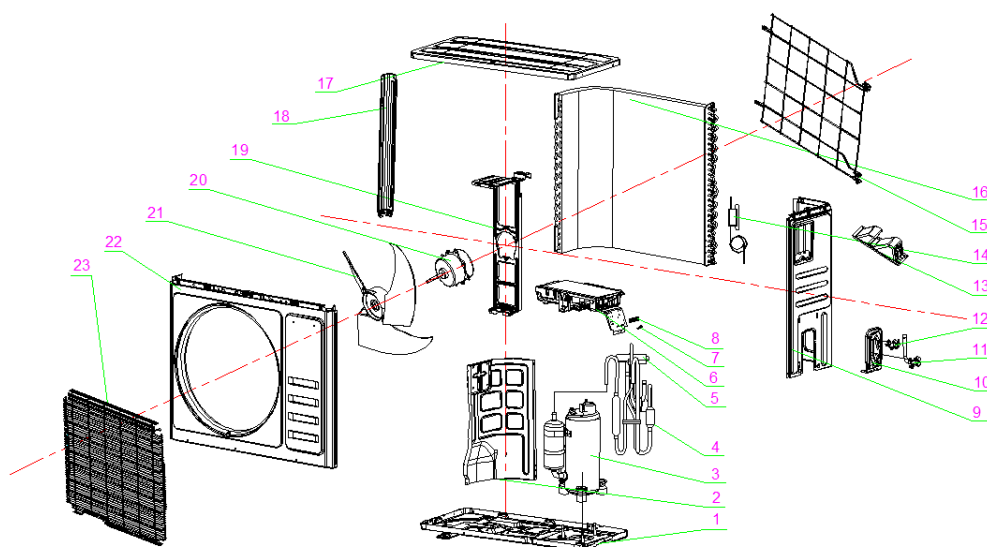

No	Part No.	Part Name	Q'ty	Remark
1	41202-000640	Base	1	
2	41208-001082	Partition plate	1	
3	92014-000760	Compressor and accessories	1	
4	92007-021983	Four-way Valve Pipe Assembly	1	
5	92007-021497	Four-way Valve	1	
6	31201-003206	Outdoor control assembly	1	
7	42001-000036	Clamp	1	
8	11304-100116	Terminal	1	
9	41205-000634	Right Plate	1	
10	41204-000018	Outdoor motor capacitor	1	
11	92008-000146	Three-way Valve	1	
12	92008-000051	Two-way Valve	1	
13	41201-000106	Electrical Box Cover	1	
14	92007-020822	Capillary assembly	1	
15	42011-000184	Rear protective net	1	
16	92011-000706	Condenser	1	
17	41207-000029	Top Cover	1	
18	41205-000133	Left support bar	1	
19	41203-000055	Outdoor Motor Supporter	1	
20	22001-000555	Outdoor Motor	1	

21	42004-000107	Propeller fan	1	
22	41206-000052	Front plate	1	
23	42011-000038	Fan guard	1	


Indoor Unit- 18K 230V

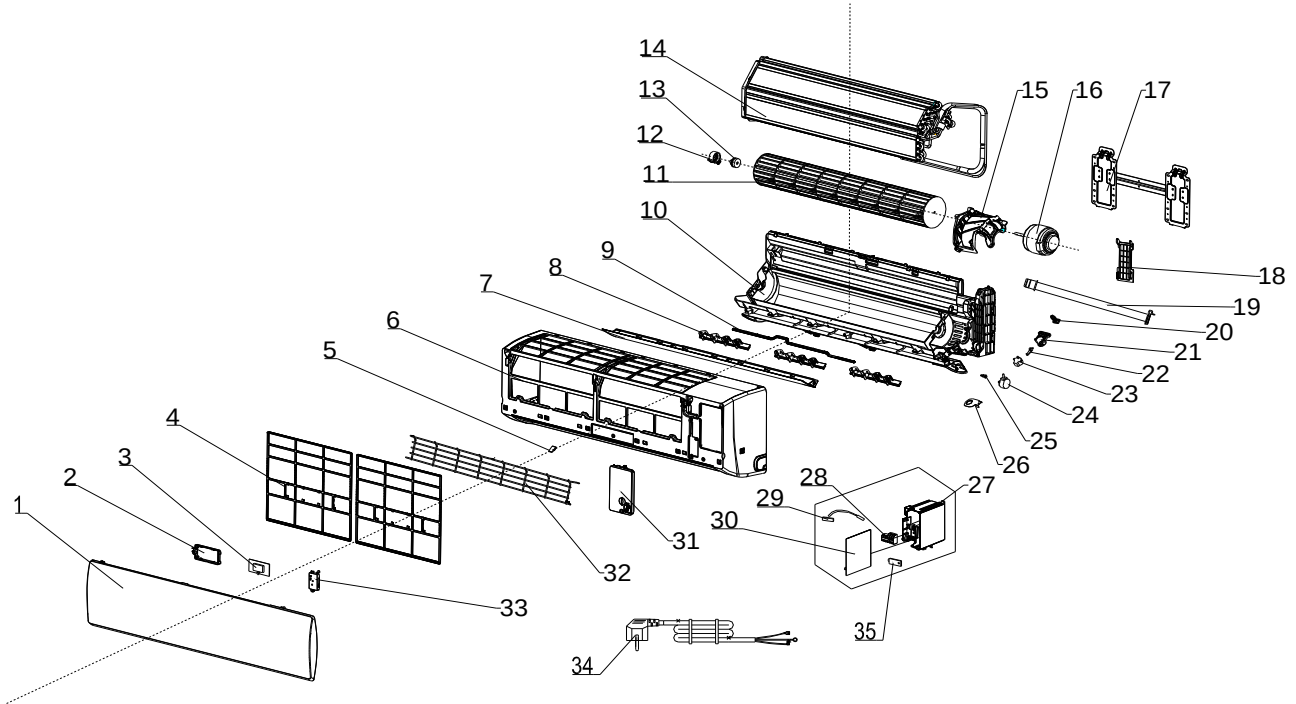

No.	Part No.	Part Name	Q'ty	Remark
1	41106-002088	Front Panel	1	
2	42003-000001	Display PCB Box	1	
3	31102-000085	Display PCB	1	
4	42008-000001	Air Filter	2	
5	41108-000066	Screw Cover	2	
6	41106-002351	Face Frame	1	
7	41103-000142	Vane	1	
8	41101-000042	Vertical Vane Assembly	3	
9	41507-000076	Vertical Vane Connector	1	
10	41102-000096	Base	1	
11	42004-000002	Cross Fan	1	
12	41101-000251	Bearing Mount Supporter	1	
13	42007-000001	Bearing Mount	1	
14	92011-003113	Evaporator	1	
15	42003-000045	Indoor Motor Cover	1	
16	22001-000240	Indoor Motor	1	
17	41109-000019	Installation Plate	1	
18	41101-000224	In And Out Pipe Fixer	1	
19	42009-000011	Drainage Hose	1	
20	92012-000185	Drainage Hose Plug	1	
21	41108-000118	Step Motor Supporter	1	
22	41108-000053	Step Motor connector	1	
23	22001-000318	Step Motor	1	
24	22001-000321	Vane Motor	1	

25	41101-000252	Vane Motor Connector	1	
26	41105-000284	Power Cord Mounting Broad	1	
27	41105-000134	Electrical Box	1	
28	11304-100063	Terminal	1	
29	10104-100014	Indoor Sensor Assembly	1	
30	31101-000238	Main PCB	1	
31	41105-000042	Electrical Box Cover	1	
32	41103-000088	Air Outlet Grill	1	
33	32001-000094	WIFI	1	
34	22007-000104	Power Supply Cord	1	
35	42001-000103	Cable Clamp	1	
36	22013-001263	Remote Controller	1	Not shown in Explosion view
37	A1101-002076	Indoor Carton	1	Not shown in Explosion view
38	A2006-000060	Left Foaming	1	Not shown in Explosion view
39	A2006-000059	Right Foaming	1	Not shown in Explosion view


Outdoor Unit- 18K 230V

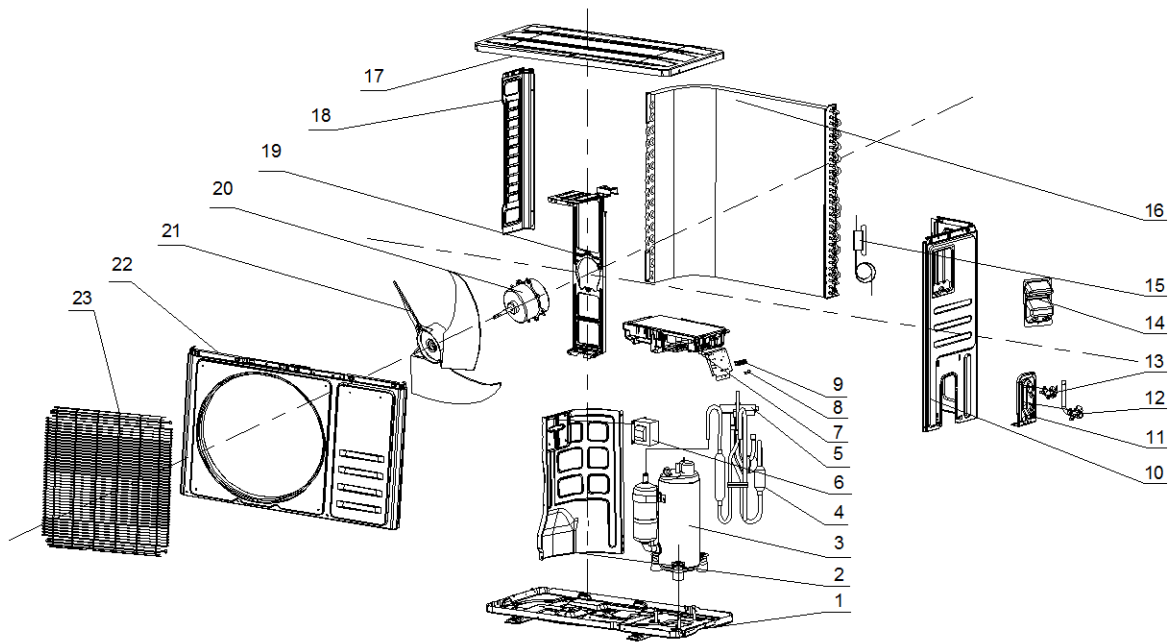

No	Part No.	Part Name	Q'ty	Remark
1	41202-000252	Base	1	
2	41208-000154	Middle partition plate	1	
3	92014-000318	Compressor	1	
4	92007-000971	4-way Valve assembly	1	
5	92008-000207	4-way Valve	1	
6	22011-000014	Reactor	1	
7	31201-000967	Electric control parts	1	
8	42001-000038	Clamp	2	
9	11304-100045	Terminal	1	
10	41205-000087	Right Side Plate	1	
11	41204-000018	Valve supporter	1	
12	92008-000146	3-way Valve	1	
13	92008-000051	2-way Valve	1	

14	41201-000044	Electrical Box Cover	1	
15	92007-002112	Capillary assembly	1	
16	92011-001136	Condenser	1	
17	41207-000033	Top Cover	1	
18	41205-000119	Support	1	
19	41203-000052	Motor Supporter	1	
20	22001-000096	Motor	1	
21	42004-000104	Axial Fan	1	
22	41206-000057	Front Plate	1	
23	42011-000040	Fan Grill	1	
24	41211-000123	Electrical Box Cover	1	Not shown in Explosion view
25	41212-000004	Reactor Cover	1	Not shown in Explosion view
26	42011-000284	Sensor Holder	1	Not shown in Explosion view


Indoor Unit-KFR- 24K 230V

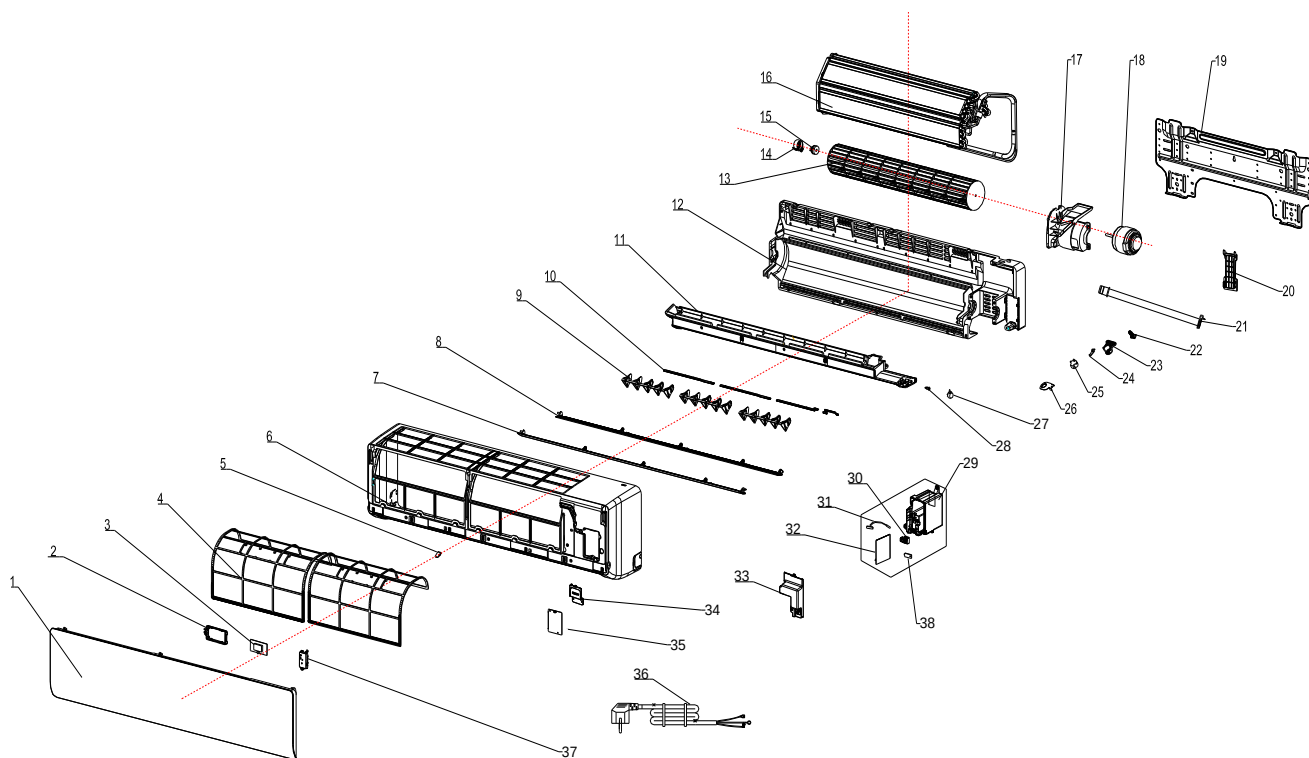

No.	Part No.	Part Name	Q'ty	Remark
1	41106-002198	Front Panel	1	
2	42003-000001	Display PCB Box	1	
3	31102-000085	Display PCB	1	
4	42008-000041	Air Filter	2	
5	41108-000066	Screw Cover	4	
6	41106-002275	Face Frame	1	
7	41103-000317	Vane		
8	41103-000312	Vane	1	
9	41101-000035	Vertical Vane Assembly	3	
10	41101-000113 41101-000118 41101-000125	Vertical Vane Connector	1	
11	41102-000260	Drainage Tray	1	
12	41102-000181	Base	1	
13	42004-000042	Cross Fan	1	

14	41101-000251	Bearing Mount Supporter	1	
15	42007-000001	Bearing Mount	1	
16	92011-003138	Evaporator	1	
17	41108-000006	Indoor Motor Cover	1	
18	22001-000240	Indoor Motor	1	
19	41109-000028	Installation Plate	1	
20	41101-000233	In And Out Pipe Fixer	1	
21	42009-000004	Drainage Hose	1	
22	92012-000185	Drainage Hose Plug	1	
23	42001-000006	Step Motor Supporter	1	
24	41108-000058	Step Motor connector	1	
25	22001-000362	Step Motor	1	
26	41105-000285	Power Cord Mounting Broad	1	
27	22001-000357	Vane Motor	2	
28	41101-000252	Vane Motor Connector	2	
29	41105-000139	Electrical Box	1	
30	11304-100063	Terminal	1	
31	10104-100022	Indoor Sensor Assembly	1	
32	31101-000280	Main PCB	1	
33	41211-000080	Electrical Box Cover	1	
34	41211-000016	Terminal Cover	1	
35	41201-000047	Safety Cover	1	
36	22007-000104	Power Supply Cord		
37	32001-000094	WIFI	1	
38	42001-000103	Cable Clamp	1	
39	22013-001263	Remote Controller	1	Not shown in Explosion view
40	A1101-000267	Indoor Carton	1	Not shown in Explosion view
41	A2004-000273	Left Foaming	1	Not shown in Explosion view
42	A2004-000322	Right Foaming	1	Not shown in Explosion view


Outdoor Unit-KFR- 24K 230V

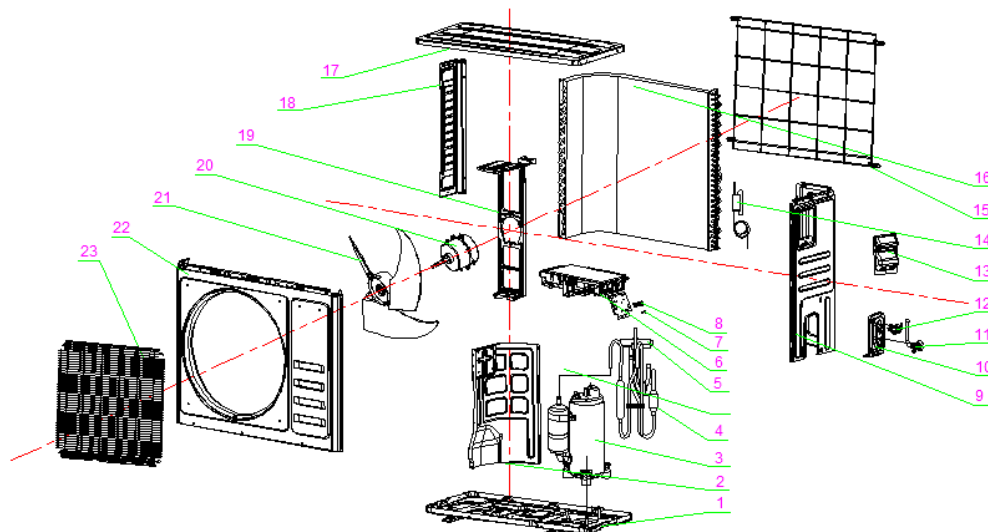

No	Part No.	Part Name	Q'ty	Remark
1	41202-000625	Base	1	

2	41208-000904	Partition plate	1	
3	92014-000935	Compressor and accessories	1	
4	92007-021860	Four-way Valve Pipe Assembly	1	
5	92007-021859	Four-way Valve	1	
6	31201-003275	Outdoor control assembly	1	
7	42001-000036	Clamp	1	
8	11304-100117	Terminal	1	
9	41205-000092	Right Plate	1	
10	41204-000018	Outdoor motor capacitor	1	
11	92008-000141	Three-way Valve	1	
12	92008-000051	Two-way Valve	1	
13	41201-000106	Electrical Box Cover	1	
14	92007-020884	Capillary assembly	1	
15	42011-000187	Rear protective net	1	
16	92011-006053	Condenser	1	
17	41207-000028	Top Cover	1	
18	41205-000117	Support	1	
19	41203-000032	Outdoor Motor Supporter	1	
20	22001-000147	Outdoor Motor	1	
21	42004-000105	Propeller fan	1	
22	41206-000058	Front plate	1	
23	42011-000039	Fan guard	1	


Indoor Unit- 36K 230V

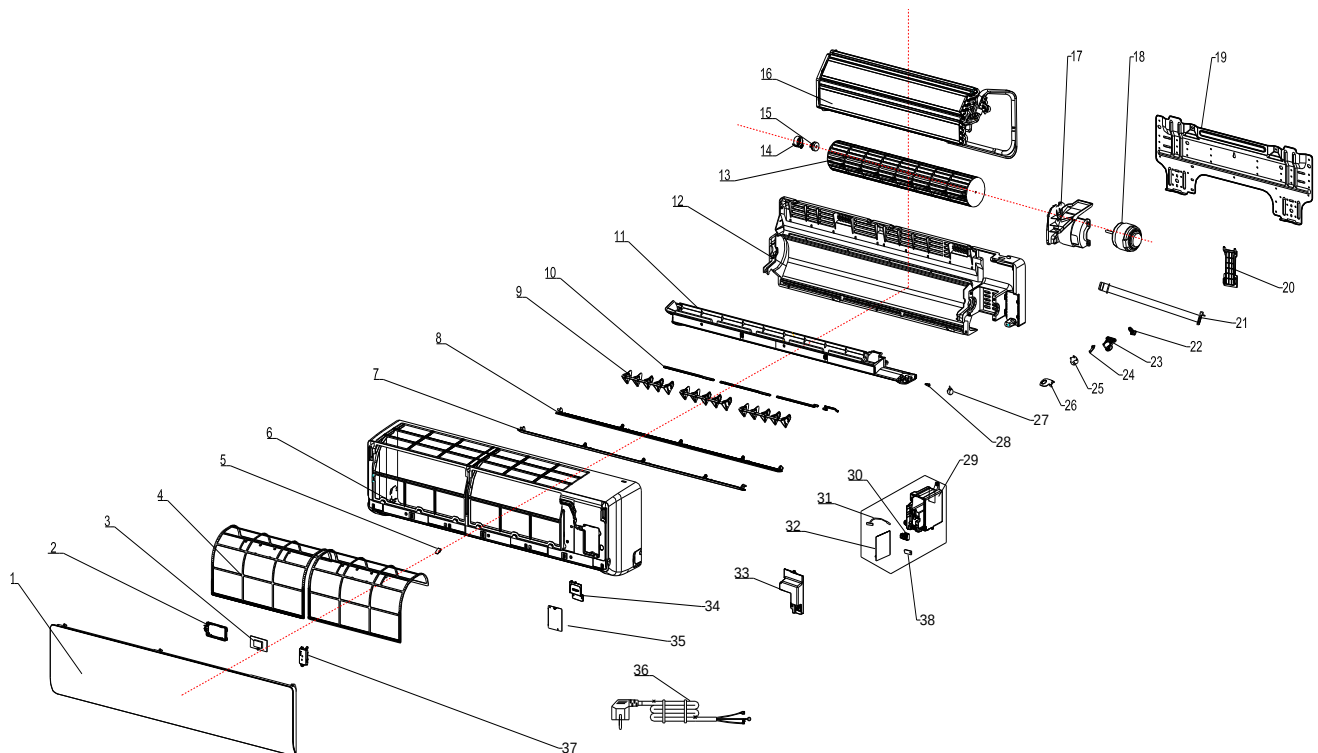

No.	Part No.	Part Name	Q'ty	Remark
1	41106-002198	Front Panel	1	
2	42003-000001	Display PCB Box	1	
3	31102-000085	Display PCB	1	
4	42008-000041	Air Filter	2	
5	41108-000066	Screw Cover	4	
6	41106-002275	Face Frame	1	

7	41103-000317	Vane		
8	41103-000312	Vane	1	
9	41101-000035	Vertical Vane Assembly	3	
10	41101-000113 41101-000118 41101-000125	Vertical Vane Connector	1	
11	41102-000260	Drainage Tray	1	
12	41102-000181	Base	1	
13	42004-000042	Cross Fan	1	
14	41101-000251	Bearing Mount Supporter	1	
15	42007-000001	Bearing Mount	1	
16	92011-003138	Evaporator	1	
17	41108-000006	Indoor Motor Cover	1	
18	22001-000240	Indoor Motor	1	
19	41109-000028	Installation Plate	1	
20	41101-000233	In And Out Pipe Fixer	1	
21	42009-000004	Drainage Hose	1	
22	92012-000185	Drainage Hose Plug	1	
23	42001-000006	Step Motor Supporter	1	
24	41108-000058	Step Motor connector	1	
25	22001-000362	Step Motor	1	
26	41105-000285	Power Cord Mounting Broad	1	
27	22001-000357	Vane Motor	2	
28	41101-000252	Vane Motor Connector	2	
29	41105-000139	Electrical Box	1	
30	11304-100063	Terminal	1	
31	10104-100022	Indoor Sensor Assembly	1	
32	31101-000280	Main PCB	1	
33	41211-000080	Electrical Box Cover	1	
34	41211-000016	Terminal Cover	1	
35	41201-000047	Safety Cover	1	
36	22007-000104	Power Supply Cord	1	
37	32001-000094	WIFI	1	
38	42001-000103	Cable Clamp	1	
39	22013-001263	Remote Controller	1	Not shown in Explosion view
40	A1101-000267	Indoor Carton	1	Not shown in Explosion view
41	A2004-000273	Left Foaming	1	Not shown in Explosion view
42	A2004-000322	Right Foaming	1	Not shown in Explosion view




Outdoor Unit- 36K 230V

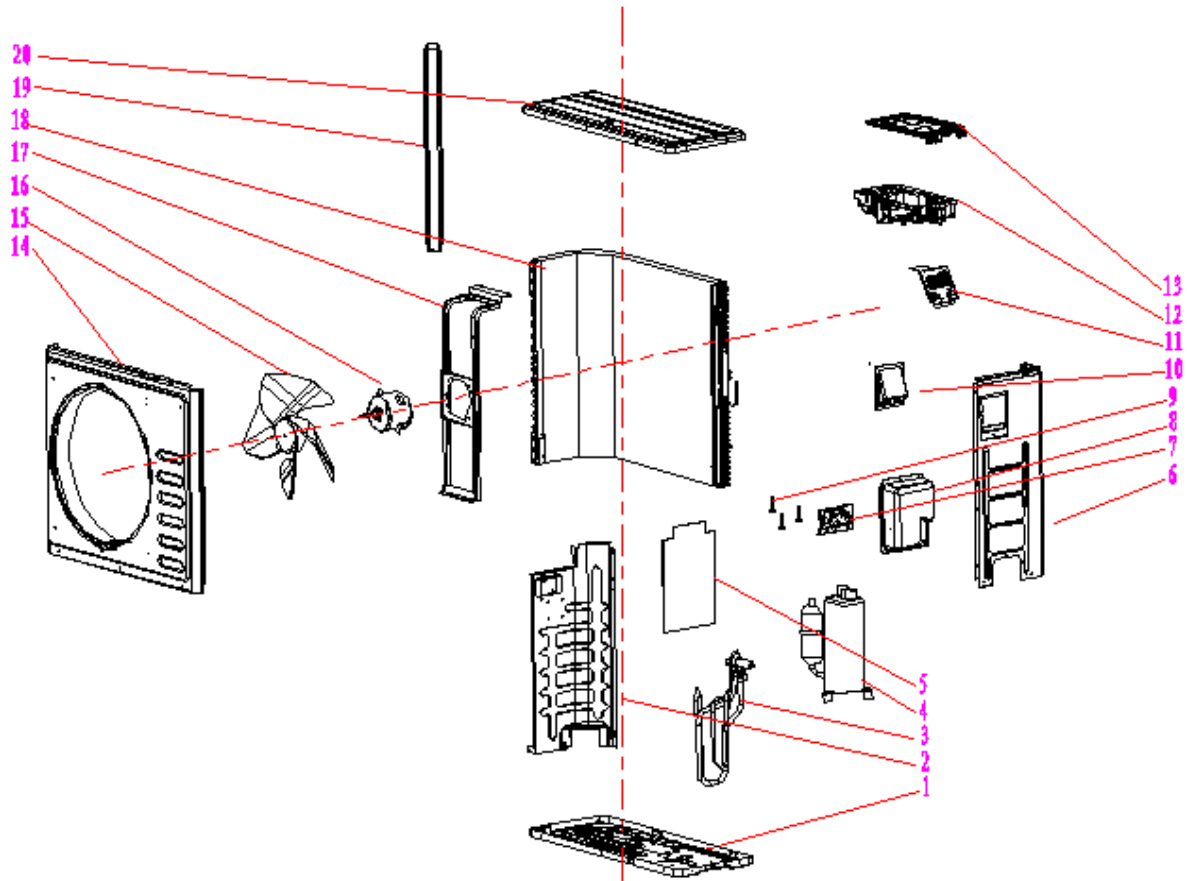

No	Part No.	Part Name	Q'ty	Remark
1	41202-000229	Base	1	
2	41208-000176	Partition plateplate	1	
3	92014-000300	Compressor	1	
4	92007-000432	4-way Valve assembly	1	
5	92012-000091	Compressor sound insulation	1	
6	41205-000064	Right Side Plate	1	
7	41204-000011	Valve supporter	1	
8	41204-000047	Protection of valves	1	
9	50702-100011	Compressor mounting bolt	3	
10	41201-000043	Outdoor satefy cover	1	
11	41211-000042	Electrical fixing board	1	
12	41211-000093	Electrical Box	1	
13	41211-000110	Electrical Box Cover	1	
14	41206-000046	Front plate	1	
15	42004-000091	Fan	1	
16	22001-000120	Motor	1	
17	41203-000012	Motor Bracket	1	
18	92011-000787	Condenser	1	
19	41205-000125	Support	1	
20	41207-000016	Top Cover	1	
21	42011-000284	Sensor holder	1	Not shown in Explosion view
22	42011-000166	Back Grille	1	Not shown in Explosion view
23	42011-000031	Fan Grill	1	Not shown in Explosion view
24	42011-000238	Left grill	1	Not shown in Explosion view


5. Disassembly IDU & ODU

5.1. IDU Disassembly

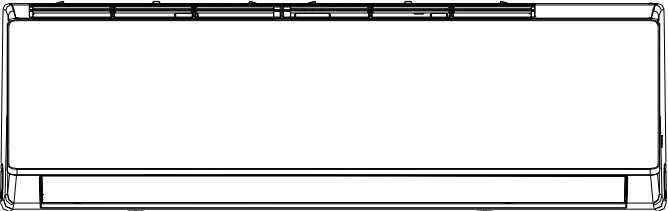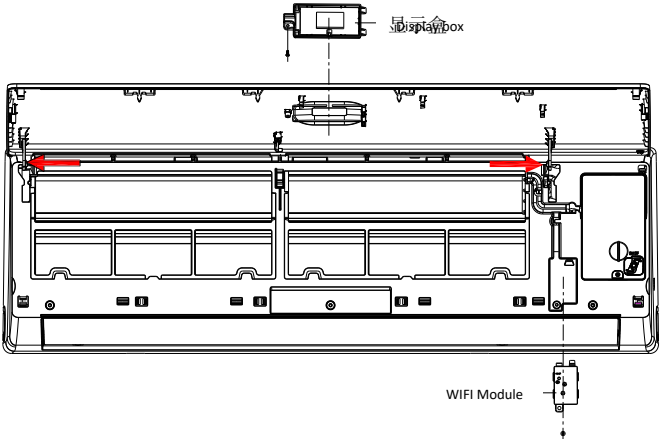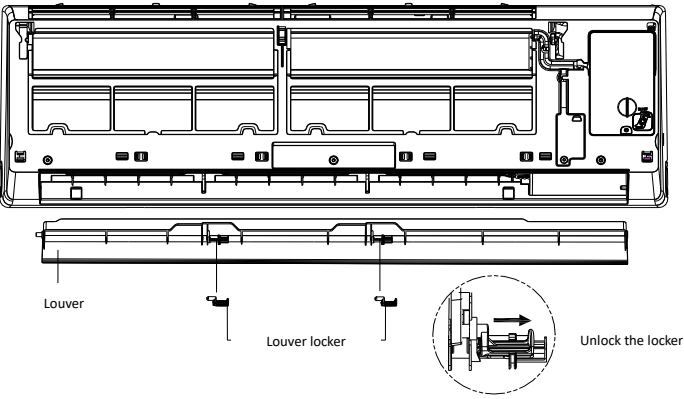Steps	Reference photo
1. Before disassembly	
The original status.	
2. Disassembly front panel, display board and WIFI module.	
A. Open front panel. B. Remove one screw and take the display board out from the panel. C. Release panel axis which shown in red arrows out from middle frame and take the panel out. D. Unscrew and take the WIFI module out from middle frame.	
3. Remove the louver.	
Unlock the louver lockers (clip), bend the louver slightly by hands and remove it out from middle frame and stepping motor.	


4. Remove the electric control box cover

Unfix one screw on the cover of electric box, and remove the cover.

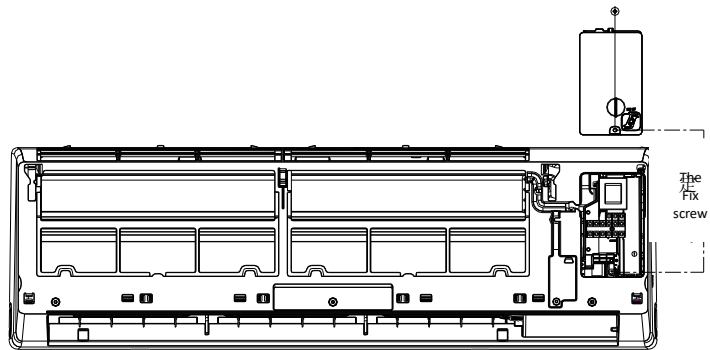


5. Remove the filter

Push the filter upwards a little, you can take it out from unit.

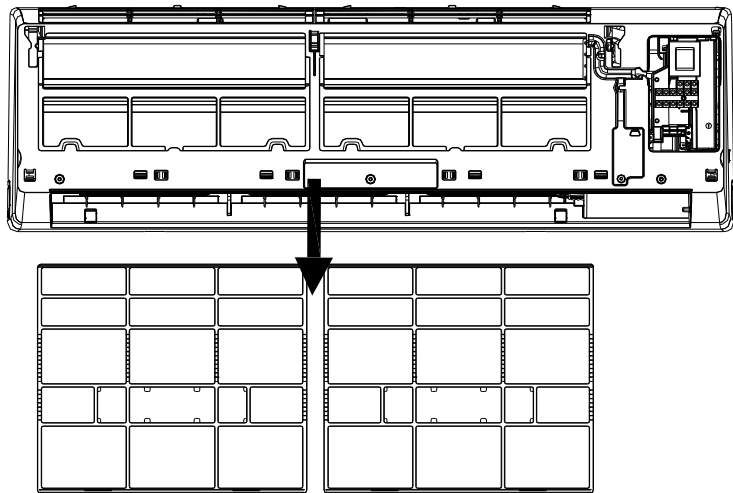

6. Disassembly the middle frame.

- A. Open the screw cover, and unfix screw with cross screwdriver.
- B. Remove the middle frame by loosening the clasps with the unit base as shown in the picture and take the frame out.

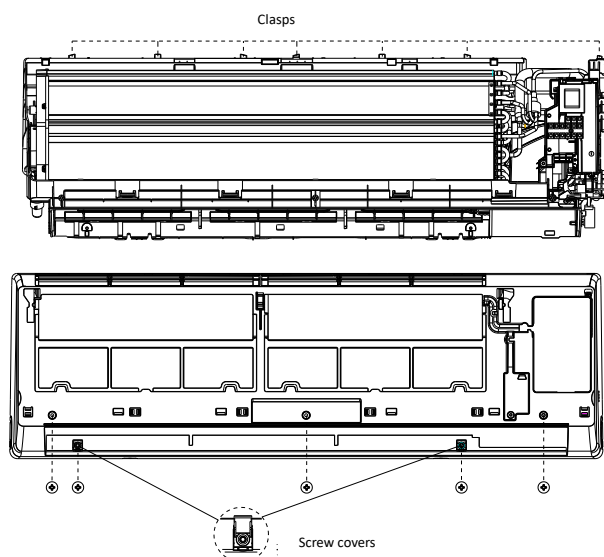

7. Disassembly the electric control box.


A. Remove the RT & IPT out from evaporator;

B. Unscrew all the earth ground wirings on the evaporator.

C. Take all the connectors out from PCB.


D. Unfix one screw of the control box with unit BASE FRAME, and take the control box out from unit.

Note: The right picture for your reference only, for the exact model the wiring connection may have a little difference.

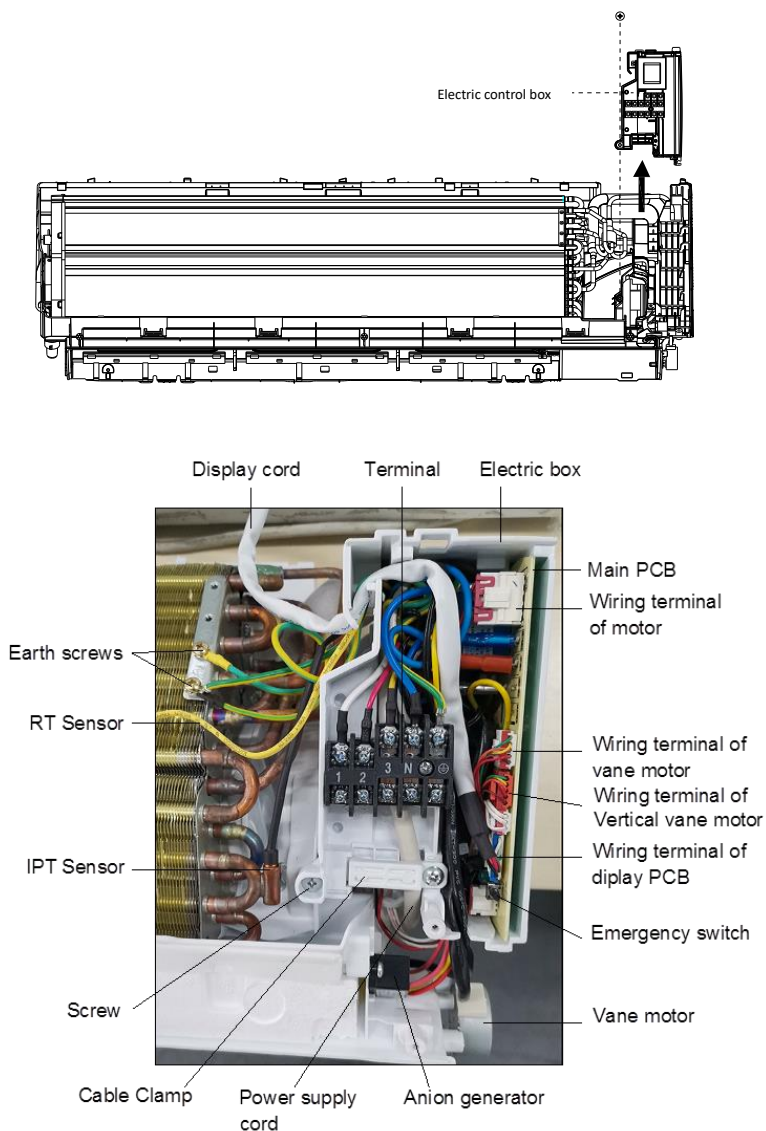


8. Remove the PIPE COVER

Loosing the lower edge of the PIPE COVER from BASE FRAME, and take the COVER out from unit.

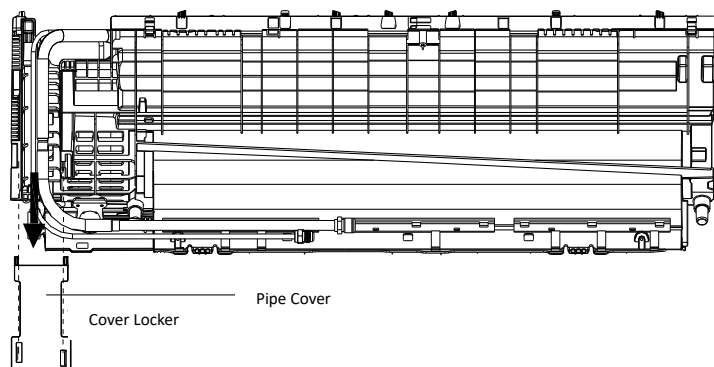


9. Disassembly the evaporator

- A. Unfix 2 screws of left side shown as picture.
- B. Unfix 2 screws of right side on motor cover/right support plate.
- C. Take the evaporator out from unit by uplifting the IUPUT/OUTPUT pipes slightly.

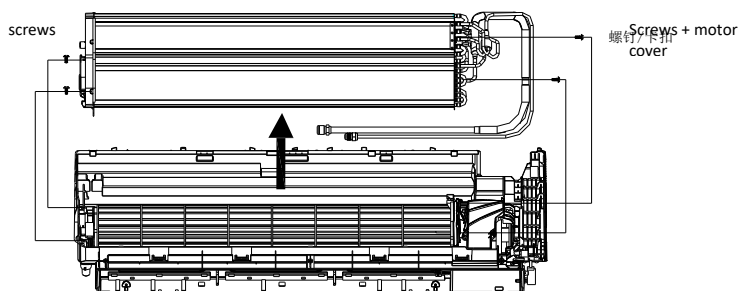


10. Remove the MOTOR COVER

- Unfix 4 screws on the motor cover with base frame.



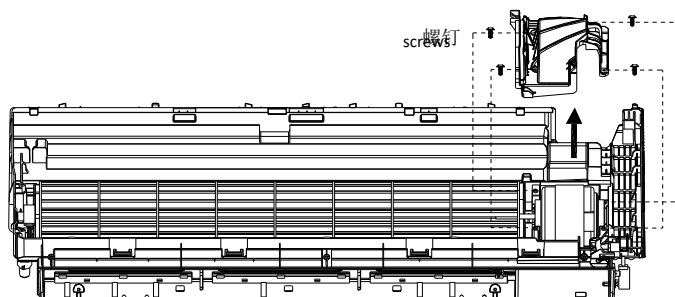





11. Disassembly fan motor and fan blade.




- A. Uplift the fan blade and fan motor, take the base frame out.
- B. Unfix one screw on the axis of fan motor, and you can get fan blade and fan motor separately.

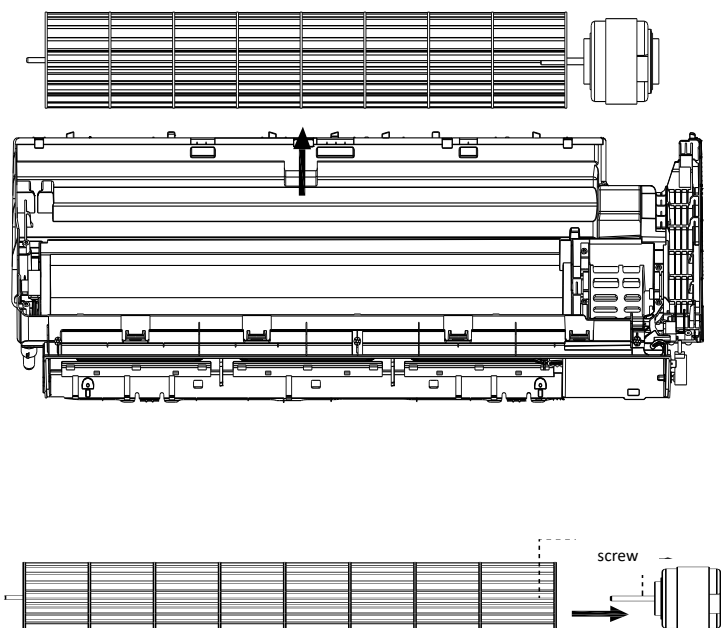


5.2 ODU Assembly

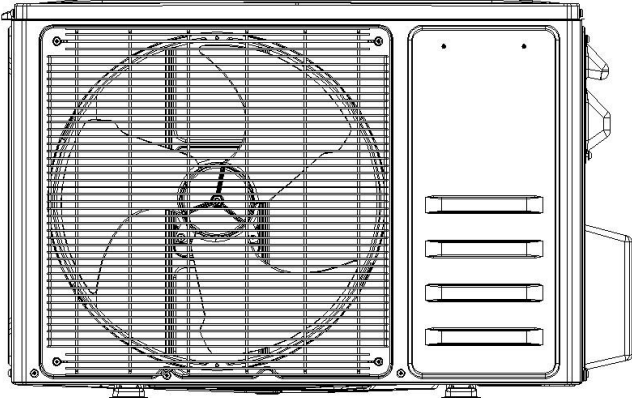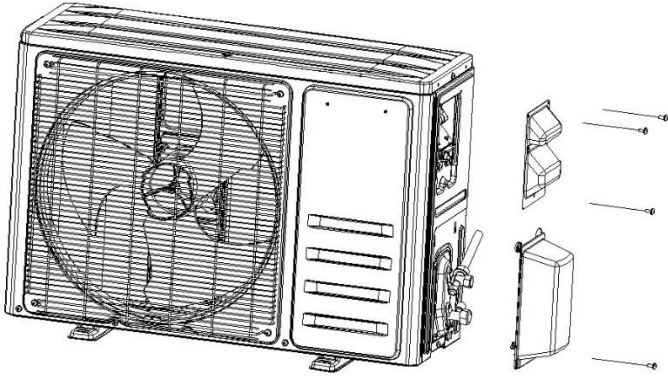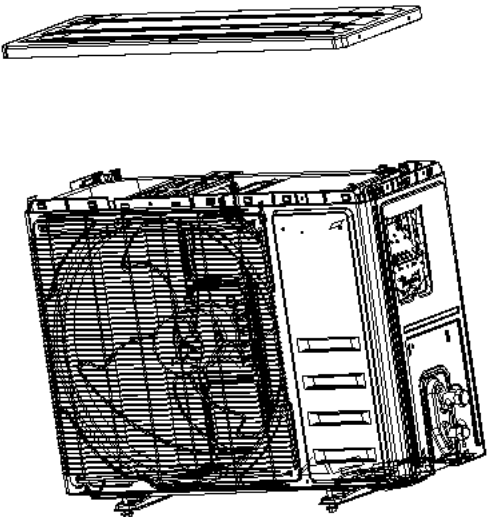
Step	Reference picture
Before disassembly	
step1: Remove the PCB Cover , valve Cover and top cover	
A 1). Unfix one screw on the PCB cover, you can take the cover out from unit. 2). Unfix one screw on the valve cover, you can take it out easily.	
B Unfix screws btw the top cover with front panel, left and right plate, then you can take the top cover out.	
step2: Disassemble the Fan Guard and Front Panel	

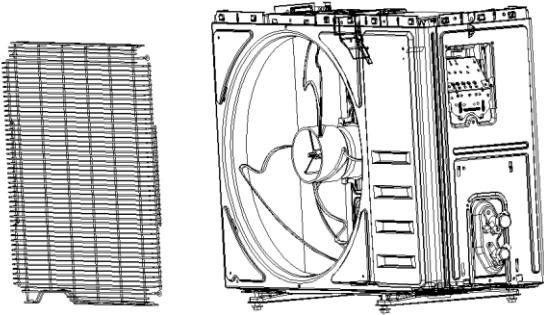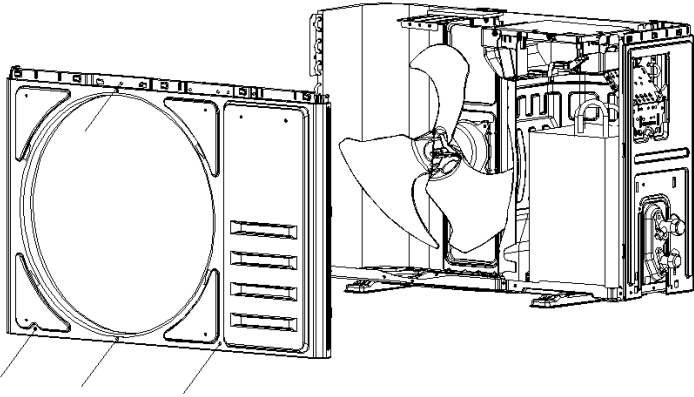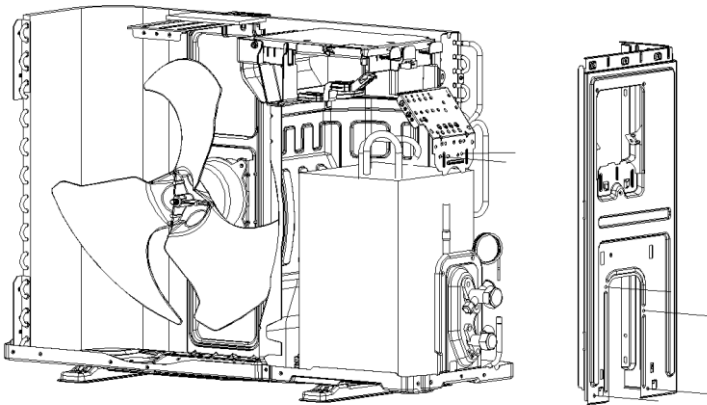A	Unfix screws between fan guard and front panel, take off the fan guard.	
B	Unfix screws on front panel with fan guard, ODU middle separate plate and base plate, uplift front panel you can take it out from unit	
step3: Disassemble the Left and Right plate.		
A	Unfix screws btw Right Plate and the Electric Box assembly, Valve Plate, Base Plate, then you can take the Right plate out.	 → X

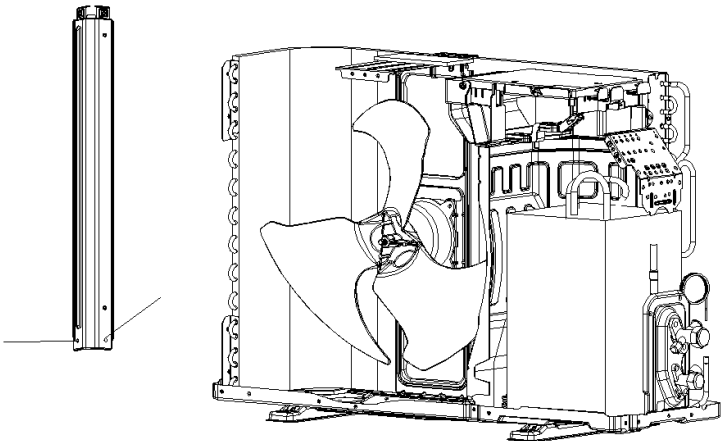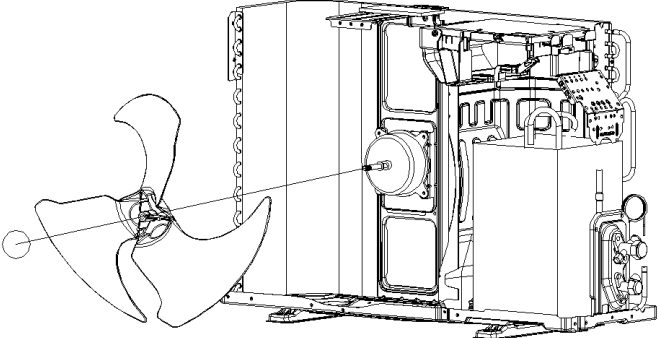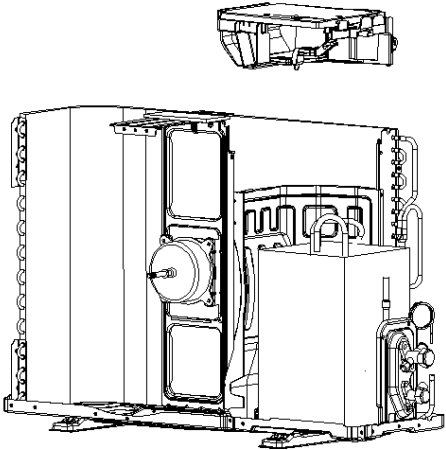
B	Unfix screws btw Left Plate, Base plate and Condenser plate, you can take the left plate out.	
step4: Disassemble the Axis Fan Blade		
A	Unscrew the fan blade nut, and take the blade out.	 v
step5: Disassemble the electric box		
	Unfix screw btw Electric Box and motor supporter etc. loosen the wiring clamp, then you can take the control box out.	
step6: take out the noise cotton		

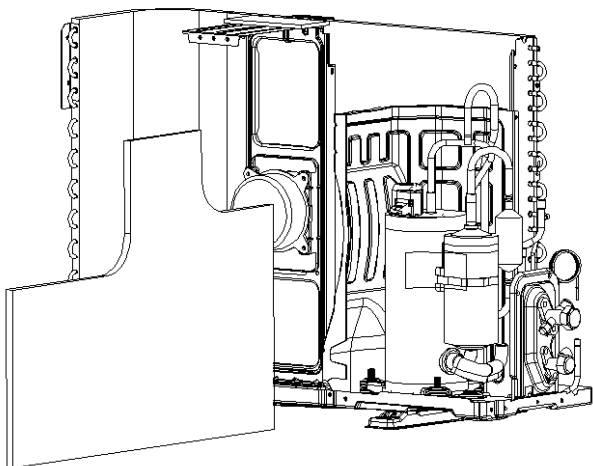A	Shown as picture to take the cotton out	
---	---	--

step7: Disassemble the separate plate

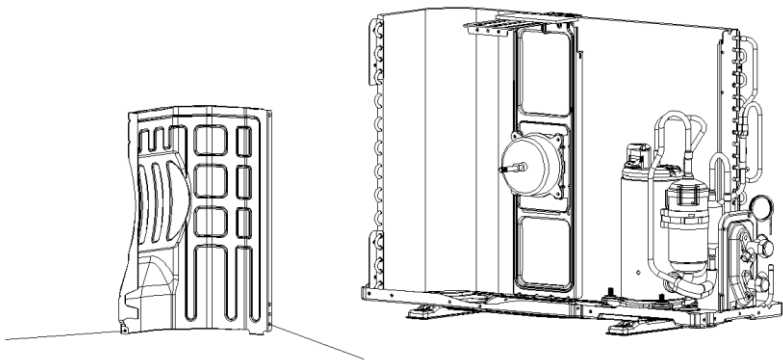
	Unfix the screw btw separate plate and unit, and take it out	
--	--	---

step8: Disassemble the 2 and 3-way valve

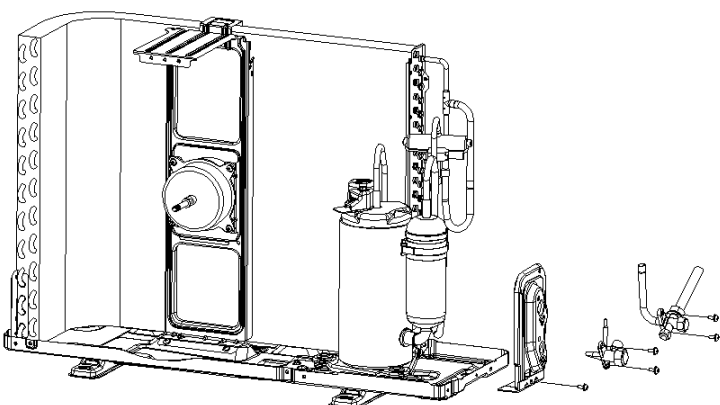	Unfix screw btw Valve plate and base, you can take the 2-way and 3-way valve out by welding. Note: 1). The welding can only place while no gas in the unit. 2). Pay attention to the fire to prevent any injury.	
--	--	--


step9: Disassemble the 4-way valve assembly

Take the 4-way valve out from system by welding. Make sure no hurt to the compressor and nameplate, etc.

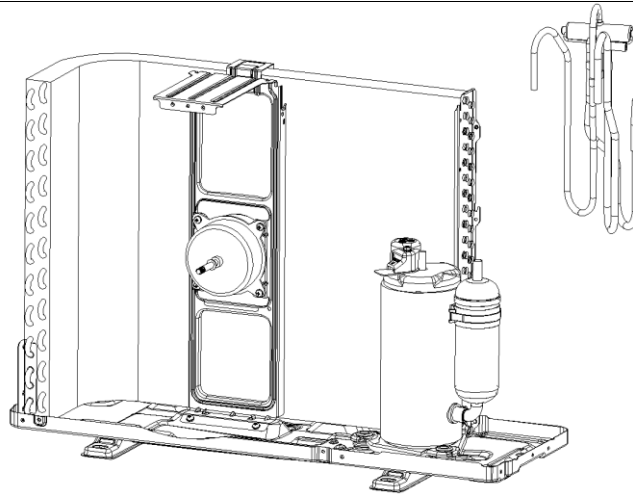

step10: Disassemble the compressor.


Unscrew the nuts and take the compressor out.

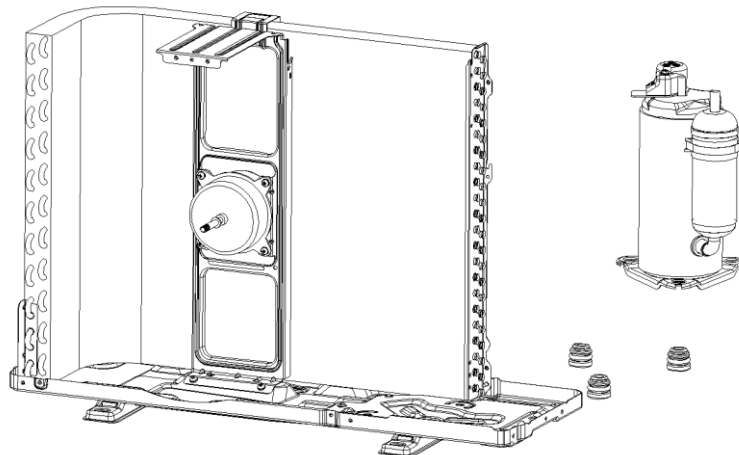

step11: Remove the fan motor and fan supporter.

Unfix screws btw fan motor with supporter, and supporter with base plate.

Note:
Pay attention to the motor wiring, it can't be taken out by force.

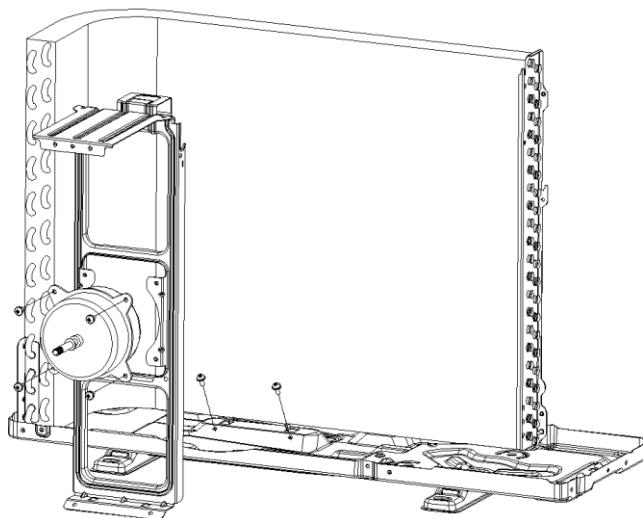

APPENDIX



1. Appendix 1 The comparison table of Celsius-Fahrenheit temperature

Fahrenheit display temperature (°F)	Fahrenheit (°F)	Celsius (°C)	Fahrenheit display temperature (°F)	Fahrenheit (°F)	Celsius (°C)	Fahrenheit display temperature (°F)	Fahrenheit (°F)	Celsius (°C)
61	60.8	16	69/70	69.8	21	78/79	78.8	26
62/63	62.6	17	71/72	71.6	22	80/81	80.6	27
64/65	64.4	18	73/74	73.4	23	82/83	82.4	28
66/67	66.2	19	75/76	75.2	24	84/85	84.2	29
68	68	20	77	77	25	86	86	30

2. Appendix 2 The Pipe length and Gas charging

Connecting pipes size and length for installation

Model	Pipe size(Inch)	
	Liquid	Gas
9K 230V	1/4	3/8
9K 115V	1/4	3/8
12K 230V	1/4	3/8
12K 115V	1/4	3/8
18K 230V	1/4	3/8
24K 230V	1/4	1/2
36K 230V	1/4	5/8

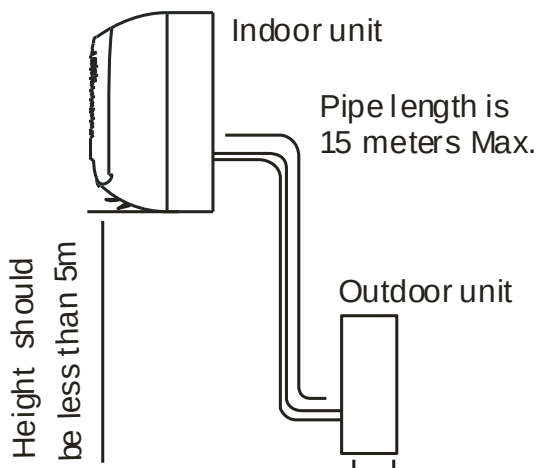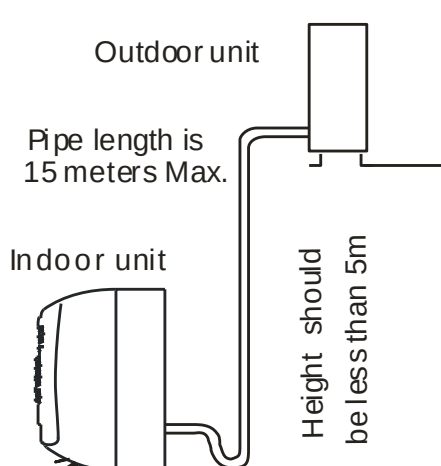


Mode	Standard length (m/inch)	Refrigerant piping Max. length (m/inch) A	Additional refrigerant charging: $X_g = B * (A - 5m)$ B
9K 115V	7.5/295	15/591	10g/m(0.11oz/ft)
9K 230V	7.5/295	15/591	10g/m(0.11oz/ft)
12K 230V	7.5/295	15/591	10g/m(0.11oz/ft)
12K 115V	7.5/295	15/591	10g/m(0.11oz/ft)
18K 230V	7.5/295	15/591	10g/m(0.11oz/ft)
24K 230V	7.5/295	15/591	10g/m(0.11oz/ft)
36K 230V	7.5/295	15/591	10g/m(0.11oz/ft)

3. Appendix 3 Pipes Flaring

Main cause for gas leakage is due to defect in flaring work. Carry out correct flaring work in the following procedure.


A. Cut the pipes and the cable.

- 1) Use the piping kit accessory or the pipes purchased locally.
- 2) Measure the distance between the indoor and the outdoor unit.
- 3) Cut the pipes a little longer than measured distance.
- 4) Cut the cable 1.5m longer than the pipe length.

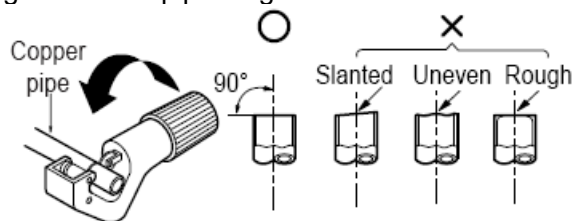

B. Burrs removal

- 1) Completely remove all burrs from the cut cross section of pipe/tube.
- 2) Put the end of the copper tube/pipe in a down ward direction as you remove burrs in order to avoid dropping burrs into the tubing.

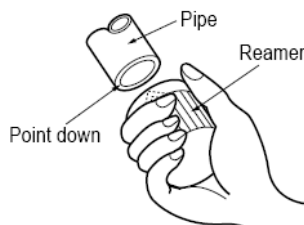


C. Flaring work

- Carry out flaring work using flaring tool as shown below.


Outside diameter		A
mm	inch	mm /inch
ø6.35	1/4	1.0~1.3(0.04~0.06)
ø9.52	3/8	0.8~1.0(0.03~0.04)
ø12.7	1/2	0.5~0.8(0.02~0.03)
ø15.88	5/8	0.5~0.8(0.02~0.03)

Firmly hold copper pipe in a die in the dimension shown in the table above.

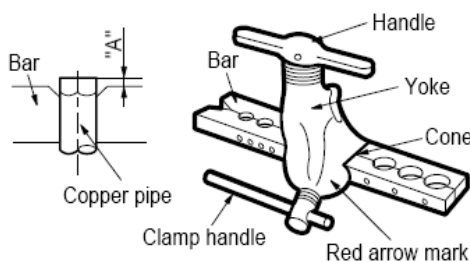

D. Check

- 1) Compare the flared work with figure below.
- 2) If flare is noted to be defective, cut off the flared section and do flaring work again.

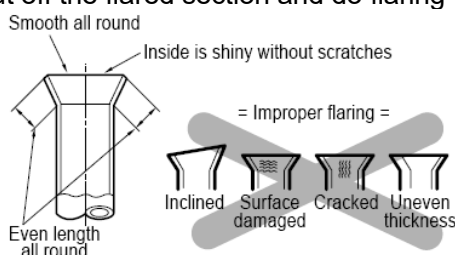


4. Appendix 4 THERMISTOR TEMPERATURE CHARACTERISTICS

1). Indoor unit and outdoor exchange temperature and outside air temperature sensor temperature characteristics

TEMP. °C(°F)	Resistance (k Ohm)	Voltage of resistance	TEMP. °C(°F)	Resistance (k Ohm)	Voltage of resistance	TEMP. °C(°F)	Resistance (k Ohm)	Voltage of resistance
-30(-86)	63.513	4.628	15(59)	7.447	2.968	60(140)	1.464	1.115
-29(-84.2)	60.135	4.609	16(60.8)	7.148	2.918	61(141.8)	1.418	1.088
-28(-82.4)	56.956	4.589	17(62.6)	6.863	2.868	62(143.6)	1.374	1.061
-27(-89.6)	53.963	4.568	18(64.4)	6.591	2.819	63(145.40)	1.331	1.035
-26(-78.8)	51.144	4.547	19(66.2)	6.332	2.769	64(147.2)	1.290	1.009
-25(-77)	48.488	4.524	20(68)	6.084	2.720	65(149)	1.250	0.984
-24(-75.2)	45.985	4.501	21(69.8)	5.847	2.671	66(150.8)	1.212	0.960
-23(-73.4)	43.627	4.477	22(71.6)	5.621	2.621	67(152.6)	1.175	0.936
-22(-71.6)	41.403	4.452	23(73.4)	5.404	2.572	68(154.4)	1.139	0.913
-21(-69.8)	39.305	4.426	24(75.2)	5.198	2.524	69(156.2)	1.105	0.890
-20(-68)	37.326	4.399	25(77)	5.000	2.475	70(158)	1.072	0.868
-19(-66.2)	35.458	4.371	26(78.8)	4.811	2.427	71(159.8)	1.040	0.847
-18(-64.4)	33.695	4.343	27(89.6)	4.630	2.379	72(161.6)	1.009	0.825
-17(-62.6)	32.030	4.313	28(82.4)	4.457	2.332	73(163.4)	0.979	0.805
-16(-60.8)	30.458	4.283	29(84.2)	4.292	2.285	74(165.2)	0.950	0.785
-15(-59)	28.972	4.252	30(86)	4.133	2.238	75(167)	0.922	0.765
-14(-57.2)	27.567	4.219	31(87.8)	3.981	2.192	76(168.8)	0.895	0.746
-13(-55.4)	26.239	4.186	32(89.6)	3.836	2.146	77(170.6)	0.869	0.728
-12(-53.6)	24.984	4.152	33(91.4)	3.697	2.101	78(172.4)	0.843	0.710
-11(-51.8)	23.795	4.117	34(93.2)	3.563	2.057	79(174.2)	0.819	0.692
-10(-50)	22.671	4.082	35(95)	3.435	2.012	80(176)	0.795	0.675
-9(-48.2)	21.606	4.045	36(96.8)	3.313	1.969	81(177.8)	0.773	0.658
-8(-46.4)	20.598	4.008	37(98.6)	3.195	1.926	82(179.6)	0.751	0.641
-7(44.6)	19.644	3.969	38(100.4)	3.082	1.883	83(181.4)	0.729	0.625
-6(-42.8)	18.732	3.930	39(102.2)	2.974	1.842	84(183.2)	0.709	0.610
-5(-41)	17.881	3.890	40(104)	2.870	1.800	85(185)	0.689	0.595
-4(-39.2)	17.068	3.850	41(105.8)	2.770	1.760	86(186.8)	0.669	0.580
-3(37.4)	16.297	3.808	42(107.6)	2.674	1.720	87(188.6)	0.651	0.566
-2(-35.6)	15.565	3.766	43(109.4)	2.583	1.681	88(190.4)	0.633	0.552
-1(-33.8)	14.871	3.723	44(111.2)	2.494	1.642	89(192.2)	0.615	0.538
0(32)	14.212	3.680	45(113)	2.410	1.604	90(194)	0.598	0.525
1(33.8)	13.586	3.635	46(114.8)	2.328	1.567	91(195.8)	0.582	0.512
2(35.6)	12.991	3.590	47(116.6)	2.250	1.530	92(197.6)	0.566	0.499
3(37.4)	12.426	3.545	48(118.4)	2.174	1.495	93(199.4)	0.550	0.487
4(39.2)	11.889	3.499	49(120.2)	2.102	1.459	94(201.2)	0.535	0.475
5(41)	11.378	3.452	50(122)	2.032	1.425	95(203)	0.521	0.463
6(42.8)	10.893	3.406	51(123.8)	1.965	1.391	96(204.8)	0.507	0.452
7(44.6)	10.431	3.358	52(125.6)	1.901	1.357	97(206.6)	0.493	0.441
8(46.4)	9.991	3.310	53(127.4)	1.839	1.325	98(208.4)	0.480	0.430
9(48.2)	9.573	3.262	54(129.2)	1.779	1.293	99(210.2)	0.467	0.419
10(50)	9.174	3.214	55(131)	1.721	1.262	100(212)	0.455	0.409
11(51.8)	8.795	3.165	56(132.8)	1.666	1.231			
12(53.6)	8.433	3.116	57(134.6)	1.613	1.201			
13(55.4)	8.089	3.067	58(136.4)	1.561	1.172			
14(57.2)	7.760	3.017	59(138.2)	1.512	1.143			

Resistance at 25°C(77°F): 5 kΩ.

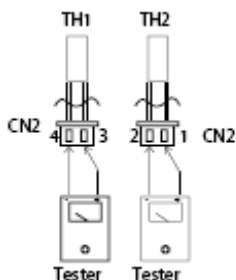

TH1: indoor room temperature sensor and outside air temperature sensor


TH2: indoor exchange temperature sensor and outside exchange temperature sensor

Before measuring resistance, disconnect connectors as shown above.

1) Outdoor unit sensor temperature characteristics

TEMP. °C(°F)	R min (k Ohm)	R(t) (k Ohm)	R max (k Ohm)	TEMP. °C(°F)	R min (k Ohm)	R(t) (k Ohm)	R max (k Ohm)	TEMP. °C(°F)	R min (k Ohm)	R(t) (k Ohm)	R max (k Ohm)
-30(-86)	283.3	322.9	367.7	24(75.2)	19.36	20.89	22.52	78(172.4)	2.563	2.654	2.745
-29(-84.2)	267.4	304.4	346.3	25(77)	18.55	20	21.54	79(174.2)	2.481	2.567	2.654
-28(-82.4)	252.5	287.1	307.4	26(78.8)	17.77	19.14	20.6	80(176)	2.402	2.484	2.567
-27(-89.6)	238.5	270.9	307.4	27(89.6)	17.03	18.32	19.7	81(177.8)	2.327	2.404	2.483
-26(-78.8)	225.4	255.7	289.8	28(82.4)	16.32	17.55	18.85	82(179.6)	2.254	2.327	2.401
-25(-77)	213.1	241.4	273.3	29(84.2)	15.65	16.81	18.04	83(181.4)	2.183	2.253	2.323
-24(-75.2)	201.5	228	257.9	30(86)	15	16.1	17.27	84(183.2)	2.115	2.182	2.248
-23(-73.4)	190.6	215.5	243.4	31(87.8)	14.39	15.43	16.54	85(185)	2.05	2.113	2.176
-22(-71.6)	180.3	203.6	229.8	32(89.6)	13.81	14.79	15.34	86(186.8)	1.985	2.047	2.109
-21(-69.8)	170.7	192.5	217	33(91.4)	13.25	14.18	15.17	87(188.6)	1.922	1.983	2.045
-20(-68)	161.6	182.1	205	34(93.2)	12.72	13.6	14.54	88(190.4)	1.861	1.922	1.983
-19(-66.2)	153.1	172.3	193.7	35(95)	12.21	13.05	13.93	89(192.2)	1.802	1.862	1.923
-18(-64.4)	145	163.1	183.2	36(96.8)	11.72	12.52	13.36	90(194)	1.746	1.805	1.865
-17(-62.6)	137.5	154.4	173.2	37(98.6)	11.26	12.01	12.81	91(195.8)	1.692	1.75	1.809
-16(-60.8)	130.3	146.2	163.9	38(100.4)	10.82	11.53	12.29	92(197.6)	1.639	1.697	1.755
-15(-59)	123.6	138.5	155.1	39(102.2)	10.29	11.07	11.78	93(199.4)	1.589	1.646	1.703
-14(-57.2)	117.3	131.3	146.8	40(104)	9.986	10.63	11.31	94(201.2)	1.54	1.596	1.653
-13(-55.4)	111.3	124.4	139	41(105.8)	9.6	10.21	10.85	95(203)	1.493	1.549	1.604
-12(-53.6)	105.6	118	131.7	42(107.6)	9.231	9.813	10.42	96(204.8)	1.448	1.502	1.558
-11(-51.8)	100.3	111.9	124.7	43(109.4)	8.878	9.43	10	97(206.6)	1.404	1.458	1.512
-10(-50)	95.24	106.2	118.2	44(111.2)	8.54	9.064	9.612	98(208.4)	1.362	1.415	1.469
-9(-48.2)	90.49	100.8	112.1	45(113)	8.217	8.714	9.233	99(210.2)	1.321	1.373	1.426
-8(-46.4)	85.99	95.68	106.3	46(114.8)	7.908	8.38	8.872	100(212)	1.284	1.335	1.387
-7(-44.6)	81.75	90.86	100.8	47(116.6)	7.612	8.06	8.526	101(213.8)	1.245	1.296	1.348
-6(-42.8)	77.74	86.31	95.74	48(118.4)	7.328	7.754	8.196	102(215.6)	1.209	1.258	1.309
-5(-41)	73.94	82.01	90.88	49(120.2)	7.057	7.461	7.88	103(217.4)	1.173	1.222	1.272
-4(-39.2)	70.35	77.95	86.29	50(122)	6.797	7.18	7.578	104(219.2)	1.139	1.187	1.236
-3(-37.4)	66.96	74.11	81.96	51(123.8)	6.548	6.912	7.289	105(221)	1.105	1.153	1.202

-2(-35.6)	63.74	70.48	77.87	52(125.6)	6.309	6.655	7.013	106(222.8)	1.073	1.12	1.168
-1(-33.8)	60.69	67.05	74	53(127.4)	6.08	6.409	6.748	107(224.6)	1.042	1.089	1.136
0(32)	57.81	63.8	70.34	54(129.2)	5.861	6.173	6.495	108(226.4)	1.013	1.058	1.104
1(33.8)	55.08	60.72	66.88	55(131)	5.651	5.947	6.253	109(228.2)	0.9833	1.028	1.074
2(35.6)	52.49	57.81	63.61	56(132.8)	5.449	5.73	6.02	110(230)	0.9553	0.9997	1.045
3(37.4)	50.03	55.05	60.52	57(134.6)	5.255	5.522	5.798	111(231.8)	0.9283	0.9719	1.016
4(39.2)	47.71	52.44	57.59	58(136.4)	5.07	5.323	5.585	112(233.6)	0.9021	0.9451	0.9892
5(41)	45.5	49.97	54.82	59(138.2)	4.891	5.132	5.381	113(235.4)	0.8765	0.9191	0.9626
6(42.8)	43.41	47.62	52.2	60(140)	4.72	4.949	5.101	114(237.2)	0.8524	0.894	0.9367
7(44.6)	41.42	45.4	49.71	61(141.8)	4.556	4.774	4.997	115(239)	0.8087	0.8595	0.9117
8(46.4)	39.53	43.2	42.33	62(143.6)	4.398	4.605	4.817	116(240.8)	0.8059	0.8461	0.8875
9(48.2)	37.74	41.29	45.12	63(145.4)	4.247	4.448	4.644	117(242.6)	0.7837	0.8233	0.8641
10(50)	36.04	39.39	43.01	64(147.2)	4.101	4.288	4.479	118(244.4)	0.7623	0.8012	0.8413
11(51.8)	34.42	37.59	41	65(149)	3.961	4.139	4.32	119(246.2)	0.7415	0.7798	0.8193
12(53.6)	32.89	35.87	39.1	66(150.8)	3.827	3.995	4.167	120(248)			
13(55.4)	31.43	34.25	37.29	67(152.6)	3.698	3.858	4.021	121(249.8)	0.702	0.7386	0.7773
14(57.2)	30.04	32.71	35.58	68(154.4)				122(251.6)	0.6631	0.7195	0.7572
15(59)	29.72	31.24	33.95	69(156.2)				123(253.4)	0.6649	0.7007	0.7378
16(60.8)				70(158)	3.339	3.476	3.616	124(255.2)	0.6472	0.6824	0.7189
17(62.6)				71(159.8)	3.229	3.359	3.491	125(257)	0.6301	0.6647	0.7006
18(64.4)	25.13	27.26	29.55	72(161.6)	3.122	3.246	3.372	126(258.8)	0.6135	0.6476	0.6829
19(66.2)	24.05	26.07	28.23	73(163.4)	3.02	3.138	3.257	127(260.6)	0.5974	0.6309	0.6657
20(68)	23.02	24.93	26.97	74(165.2)	2.921	3.033	3.146	128(262.4)	0.5818	0.6148	0.649
21(69.8)	22.04	23.84	25.77	75(167)	2.827	2.933	3.04	129(264.2)	0.5667	0.5991	0.6328
22(71.6)	21.1	22.81	24.63	76(168.8)	2.735	2.836	2.938	130(266)	0.5521	0.5839	0.6171
23(73.4)	20.21	21.83	23.55	77(170.6)	2.647	2.743	2.84				

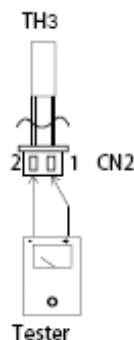R—Resistance**Resistance at 25°C(77°F):20 kΩ****TH3: Outdoor unit discharge pipe sensor****Before measuring resistance, disconnect connectors as shown above.**